



E-MANUAL



imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

Model _____ Serial No. _____

Contents

Channel

- Using the INFO button (Now & Next guide) 3
- Using the Channel Menu 4
- Using the Channel 14
- Memorising Channels 20
- Using the Channel (for Satellite TV) 27
- Memorising Channels (for Satellite TV) 32
- Other Features 47

Basic Features

- Changing the Preset Picture Mode 49
- Adjusting Picture Settings 50
- Changing the Picture Size 51
- Changing the Picture Options 55
- Setting up the TV with Your PC 62
- Changing the Preset Sound Mode 66
- Adjusting Sound Settings 67

Preference

- Connecting to a Wired Network 77
- Setting the Network 81
- Connecting to a Wireless Network 88
- Setting the Time 112
- Locking Programmes 120
- Economical Solutions 123
- Picture In Picture (PIP) 125
- Other Features 128
- Support Menu 139

Advanced Features

- Using the 3D function 147
- About AllShare™ 159
- Setting Up AllShare™ 161
- Setting Up Anynet+ 165
- Anynet+ 167

- Switching between Anynet+ Devices 172
- Listening through a Receiver 174
- Troubleshooting for Anynet+ 176
- Using the My Downloads 179
- Connecting a USB Device 180
- Screen Display 185
- Videos 186
- Music 192
- Photos 195
- My Downloads - Additional Functions 197
- Teletext Feature 201

Other Information


- Troubleshooting 206
- CONNECTIONS COMMON INTERFACE Slot 217
- Anti-theft Kensington Lock 220
- Licence 222

❑ Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audio-video settings.

The Now & Next guide shows daily TV programme information for each channel according to the broadcasting time.

- Scroll ◀, ▶ to view information for a desired programme while watching the current channel.
- Scroll ▲, ▼ to view information for other channels. If you want to move to the currently selected channel, press the **ENTER** ↵ button.

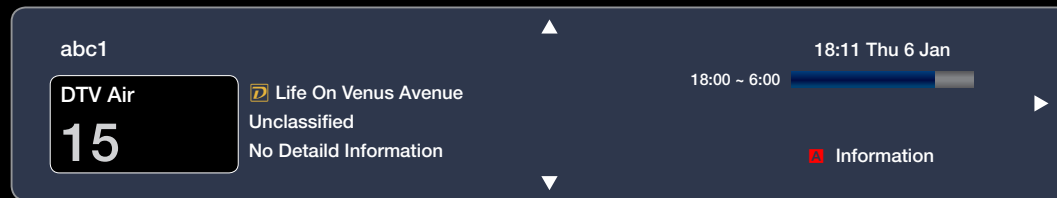

□ Using the Channel Menu

👆 MENU  → Support → Contents Home → ENTER 

Press the **CONTENT** button to select **Watch TV**, and then select the menu you want to use. Each screen will be displayed.



- The displayed image may differ depending on the model.

■ Guide

The EPG (Electronic Programme Guide) information is provided by broadcasters. Using programme schedules provided by broadcasters, you can specify programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time. Programme entries may appear blank or out of date depending on a channel status.




Using Channel View

A Red (**Sche. Mgr**): Displays the **Schedule Manager**.

B Green (**-24 Hours**): Viewing the list of programmes to be broadcasted before 24 hours.


C Yellow (**+24 Hours**): Viewing the list of programmes to be broadcasted after 24 hours.



The screenshot shows a TV Guide interface. At the top right, the time is 16:02 on Tuesday, July 19. Below the title 'Guide', there is a large image of a cloudy sky. To the right of the image, the text reads: 'DTV Air 05.1 Globo HD', 'TELA QUENTE (HD)', '10:05 pm - 12:10 pm', '10', and 'DESVENTURAS EM SERIE (HD)'. Below this is a section titled 'Channel View - All Channels'. It features a table with columns for 'Today', '16:00', '16:30', '17:00', and '17:30'. The rows list channels and their current or upcoming programs: 04 Globo HD (American Chopper, Tine Team), 05 DiscoveryH&L (Programmes resume at 06:00), 06 TV GloboSD (Home and..., No Information, Fiv..., Dark Angel), 07 price-drop.tv (No Information), 08 QVC (QVC Selection), and 09 R4DTT (No Information). At the bottom, there is a navigation bar with icons for 'Sche. Mgr', '+24 Hours', 'Ch Mode', 'Information', 'Page', and 'Watch'.


Today	16:00	16:30	17:00	17:30
04 Globo HD	American Chopper		Tine Team	
05 DiscoveryH&L	Programmes resume at 06:00			
06 TV GloboSD	Home and...	No Information	Fiv...	Dark Angel
07 price-drop.tv	No Information			
08 QVC	QVC Selection			
09 R4DTT	No Information			

- The displayed image may differ depending on the model.

 Blue (**Ch.Mode**): Select the type of channels you want to display on the Channel View window.

 **Information**: Displays details of the selected programme.

 **Page**: Move to next or previous page.

 **Watch / Schedule**: When selecting the current programme, you can watch the selected programme. / When the selecting the next programme, you can reserve the selected programme.





■ Schedule Manager

 **CONTENT** → **Schedule Manager** → **ENTER** 

You can view, modify or delete a channel you have reserved to watch.

Using the Timer Viewing

You can set a desired channel to be displayed automatically at the intended time. Set the current time first to use this function.

1. Press the **ENTER**  button to select **Schedule Manager**.
2. Press the **ENTER**  button to add programme to schedule manually. The **Timer Viewing** screen appears.

3. Press the ◀ / ▶ / ▲ / ▼ buttons to set the **Antenna**, **Channel**, **Repeat**, **Date** or **Start Time**.

- **Antenna**: Select the desired antenna source.
- **Channel**: Select the desired channel.
- **Repeat**: Select **Once**, **Manual**, **Sat~Sun**, **Mon~Fri** or **Everyday** to set at your convenience. If you select **Manual**, you can set the day you want.

The ✓ mark indicates the date is selected.

- **Date**: you can set the desired date.

It is available when you select **Once** in **Repeat**.

- **Start Time:** You can set the start time you want.
- ☑ Press **INFO** to enter **Detailed Information**. On the **Detailed Information** screen, you can change or cancel a reserved information.
 - **Cancel Schedules:** Cancel a show you have reserved to watch.
 - **Edit:** Change a show you have reserved to watch.
 - **Return:** Return to the previous screen.



■ Channel List

You can view all the channel searched.

📖 When you press the **CH LIST** button on the remote control, **Channel List** screen will be displayed at once.

📖 Using the operation buttons with the **Channel List**.

- **A** Red (**Antenna**): Select the desired antenna source.

📖 The option may differ depending on country.

- **C** Yellow (**Programme View / Channel View**): Displays the programme when digital channel is selected. Returns to the channel view.






- The displayed image may differ depending on the model.

- ◀▶ **Ch. Mode / Channel**: Move to the type of channels you want to display on the **Channel List** screen / Change channels.
- 📄 The option may differ depending on country.
- 📺 **Watch / Information**: Watches the channel you select / Displays details of the selected programme.
- ⬆️ **Page**: Move to next or previous page.



How to use Timer Viewing in Channel List (digital channels only)

When you set the **Timer Viewing** in **Channel List**, you can only set the programme in **Programme View**.

1. Press the **CH LIST** button, then select a desired digital channel.
 2. Press the **C** (**Programme View**) button.
 3. Press the **▲** / **▼** buttons to select the desired programme, then press the **ENTER**  **Information** button.
 - ◀ 4. Select **Timer Viewing**, then press the **ENTER**  button when done. ▶
-  If you want to cancel **Timer Viewing**, follow steps 1 through 3. Select **Cancel Schedules**.

□ Using the Channel






■ Channel Manager

👆 **CONTENT** → **Channel Manager** →
ENTER 📏

Edit the favourite channel and set the channels to **Delete**, **Deselect All** or **Select All**. You can edit the channel name only for analogue channels.



- The displayed image may differ depending on the model.

- () **Channels**: Select a channel in the **All, TV, Radio, Data/Other, Analogue** screen. Change the antenna, or channel settings using the menus in the top right corner of the screen.
 - () **Favourites 1 to 5**: Shows favourite channels.
-  Using the colour buttons with the **Channel Manager**.
-  **Red (Antenna)**: Select the desired antenna source.
 -  **Blue (Sorting)**: Changes the list ordered by channel number or name.





Channel Status Display Icons


Icon	Operations
A	An analogue channel.
✓	A channel selected.
★	A channel set as a favourite.

Channel Manager Option Menu

◀ Set each channel using the **Channel Manager** menu options (**Watch**, **Add to Favourites** / **Edit Favourites**, **Lock** / **Unlock**, **Edit Channel Name**, **Edit Channel Number**, **Delete**, **Select All** / **Deselect All**). Option menu items may differ depending on the channel status. ▶

1. Select a channel and press the **TOOLS** button.
2. Select a function and change its settings.
 - **Watch**: Watch the selected channel.
 - **Add to Favourites / Edit Favourites**: Set channels you watch frequently as favourites / Add or Delete the selected channel in **Favourites 1-5**.
 1. Select the **Add to Favourites / Edit Favourites**, then press the **ENTER**  button.
 -  If the channel is already added to favourite channel, **Edit Favourites** will be shown.



2. Press the **ENTER**  button to select **Favourites 1 to 5**, then press the **OK** button.

 One favourite channel can be added in several of **Favourites** among **Favourites 1 to 5**.

- **Lock / Unlock**: Lock a channel so that the channel cannot be selected and viewed.

 This function is available only when the **Channel Lock** is set to On.



- **Edit Channel Name** (analogue channels only): Assign your own channel name.
 This function may not support depending on the region.
- **Edit Channel Number**: Edit the number by pressing the number buttons desired.
 This function may not support depending on the region.
- **Delete**: Delete a channel to display the channels you want.
- **Select All**: Select all the channels.



❏ Memorising Channels

👉 MENU  → Channel → ENTER 

■ Antenna

📝 The option may differ depending on country.

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV.




■ Country (depending on the country)

- ☞ The PIN input screen appears. Enter your 4 digit PIN number.
- ☞ Select your country so that the TV can correctly auto-tune the broadcasting channels.
 - **Digital Channel:** Change the country for digital channels.
 - **Analogue Channel:** Change the country for analogue channels.

■ Auto Tuning

- ☞ Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked using the **Channel Lock** function, the PIN input window appears.

- **Antenna Source:** Select the antenna source to memorise. The option may differ depending on country.
 - **Digital & Analogue / Digital / Analogue:** Select the channel source to memorise. When selecting **Cable** → **Digital & Analogue** or **Digital**: Provide a value to scan for cable channels.
 - **Search Mode (Full / Network / Quick):** Scans for all channels with active broadcast stations and stores them in the TV.
- ◀  If you select **Quick**, you can set up the **Network, Network ID, Frequency, Modulation**, and **Symbol Rate** manually by pressing the button on the remote control. ▶
- **Network (Auto / Manual):** Selects the **Network ID** setting mode among **Auto** or **Manual**.

- **Network ID:** When **Network** is **Manual**, you can set up **Network ID** using the numeric buttons.
- **Frequency:** Displays the frequency for the channel. (differs in each country)
- **Modulation:** Displays available modulation values.
- **Symbol Rate:** Displays available symbol rates.

■ **Cable Search Option**

(depending on the country)

Sets additional search options such as the frequency and symbol rate for a cable network search.

■ Manual Tuning

Scans for a channel manually and stores in the TV.

☞ If a channel is locked using the **Channel Lock** function, the PIN input window appears.

- **Digital Channel Tuning:** Scans for a digital channel.

1. Press the **A** button to select **New**.

☞ When selecting **Antenna** → **Air: Channel, Frequency, Bandwidth**

☞ When selecting **Antenna** → **Cable: Frequency, Modulation, Symbol Rate**

2. Press the ▼ button to select **Search**. When scanning has finished, a channel is updated in the channel list.
- **Analogue Channel Tuning:** Scans for a analogue channel.
 1. Press the **A** button to select **New**.
 2. Set the **Programme**, **Colour System**, **Sound System**, **Channel** and **Search**.
 3. Press the ▼ button to select **Store**. When scanning has finished, a channel is updated in the channel list.

Channel mode

- **P** (programme mode): When tuning is complete, the broadcasting stations in your area have been assigned to position numbers from P0 to P99. You can select a channel by entering the position number in this mode.
- **C** (aerial channel mode) / **S** (cable channel mode): These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or cable channel.



Using the Channel (for Satellite TV) for PDP 570






Channel Manager

CONTENT → Channel Manager →
ENTER

Edit the favourite channel and set the channels to **Delete**, **Deselect All** or **Select All**. You can edit the channel name only for analogue channels.



- The displayed image may differ depending on the model.


- () **Channels**: Select a channel in the **All, TV, Radio, Data/Other, Analogue** screen. Change the antenna, or channel settings using the menus in the top right corner of the screen.
 - () **Favourites 1 to 5**: Shows favourite channels.
-  Using the colour buttons with the **Channel Manager**.
-  Red (**Antenna**): Select the desired antenna source.
 -  Blue (**Sorting**): Changes the list ordered by number or name.

Channel Status Display Icons


Icon	Operations
A	An analogue channel.
✓	A channel selected.
★	A channel set as a favourite.

Channel Manager Option Menu

◀ Set each channel using the **Channel Manager** menu options (**Watch**, **Add to Favourites** / **Edit Favourites**, **Lock** / **Unlock**, **Edit Channel Name**, **Edit Channel Number**, **Delete**, **Select All** / **Deselect All**). Option menu items may differ depending on the channel status. ▶

1. Select a channel and press the **TOOLS** button.
2. Select a function and change its settings.
 - **Watch:** Watch the selected channel.
 - **Add to Favourites / Edit Favourites:** Set channels you watch frequently as favourites.
 1. Select the **Add to Favourites / Edit Favourites**, then press the **ENTER**  button.
 - If the channel is already added to favourite channel, **Edit Favourites** will be shown.

2. Press the **ENTER**  button to select **Favourites 1 to 5**, then press the **OK** button.

 One favourite channel can be added in several of **Favourites** among **Favourites 1 to 5**.

- **Delete**: Delete a channel to display the channels you want.
- **Select All**: Select all the channels in the channel list.



❑ Memorising Channels (for Satellite TV)

📄 MENU  → Channel → ENTER 

■ Antenna

📄 The option may differ depending on country.

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV.

■ Country

- ☑ The PIN input screen appears. Enter your 4 digit PIN number.
- ☑ Select your country so that the TV can correctly auto-tune the broadcasting channels.
 - **Digital Channel:** Change the country for digital channels.
 - **Analogue Channel:** Change the country for analogue channels.



■ Auto Tuning

- Auto Tuning

Scans for a channel automatically and stores in the TV.

📝 Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked using the **Channel Lock** function, the PIN input window appears.

- **Antenna Source**: Select the antenna source to memorise. The option may differ depending on country.

- **Digital & Analogue / Digital / Analogue**: Select the channel source to memorise. When selecting **Cable** → **Digital & Analogue** or **Digital**: Provide a value to scan for cable channels.
- **Search Mode (Full / Network / Quick)**: Scans for all channels with active broadcast stations and stores them in the TV.
- ☑ If you select **Quick**, you can set up the **Network**, **Network ID**, **Frequency**, **Modulation**, and **Symbol Rate** manually by pressing the button on the remote control.
- ◀ • **Network (Auto / Manual)**: Selects the **Network ID** setting mode among **Auto** or **Manual**. ▶
- **Network ID**: When **Network** is **Manual**, you can set up **Network ID** using the numeric buttons.

- **Frequency:** Displays the frequency for the channel. (differs in each country)
- **Modulation:** Displays available modulation values.
- **Symbol Rate:** Displays available symbol rates.

■ Cable Search Option

(depending on the country)

Sets additional search options such as the frequency and symbol rate for a cable network search.


- **Start frequency / Stop Frequency:** Set the start or stop frequency. (differs in each country)
- **Symbol Rate:** Displays available symbol rates.
- **Modulation:** Displays available modulation values.
- **Standby Auto Store (Off / On)** **for Italy**: Enables or disables auto-tune while TV is in standby mode.
- **Wake-up Timer (1 hour later / 2 hours later / 00:00 / 02:00 / 12:00 / 14:00)** **for Italy**: Selects the schedule timer to turn the TV on and scan channels automatically.

■ Manual Tuning

Scans for a channel manually and stores in the TV.

📝 If a channel is locked using the **Channel Lock** function, the PIN input window appears.

- **Transponder**: Selects the transponder using the up/down buttons.
- **Scan Mode**: Selects either free or all channels to store.
- **Network Search (Disable / Enable)**: network search using the up/down buttons.

- **Signal Quality:** Display the current status of broadcasting signal.
- ☑ Information on a satellite and its transponder is subject to change depending on the broadcasting conditions.
- ☑ When setting is completed, move to **Search** and press the **ENTER**  button. Channel scan is started.



■ **Satellite System**

The PIN input screen appears. Enter your 4 digit PIN number. **Satellite System** is available when **Antenna** is set to **Satellite**. Before running **Auto Store**, set **Satellite System**. Then channel scan is run normally.

- **Satellite Selection:** You can choose the satellites for this TV.
- **LNB Power (Off / On):** Enables or disables the power supply for the LNB.



- **LNB Settings:** Configures the outdoor equipment.
 - **Transponder:** Selects the transponder using the up/down buttons.
 - **DiSEqC Mode:** Selects DiSEqC mode for the selected LNB.
 - **Lower LNB Oscillators:** Sets the LNB oscillators to a lower frequency.
 - **Upper LNB Oscillators:** Sets the LNB oscillators to a higher frequency.
 - **Tone 22 kHz (Off / On / Auto):** Selects the Tone 22 kHz depending on the LNB type. For a universal LNB it should be Auto.
 - **Signal Quality:** Display the current status of broadcasting signal.

- **SatCR/Unicable Settings:** Configure single cable installation.
 - ☑ This function may not support depending on the region.
 - **SatCR/Unicable:** Enables or disable single cable installation support.
 - **Slot Number:** Select the SatCR user slot number for this receiver.
 - **Slot Frequency:** Enter the appropriate frequency to receive the signal from SatCR.
 - **Detect Slot Frequency:** Auto-detect the signal frequency for the selected slot number.
 - **Verify Slot Frequency:** Verify that the frequency entered corresponds to the selected slot.

- **Positioner Settings:** Configures the antenna positioner.
Positioner (On / Off): Enables or disables the positioned control.
Positioner Type (USALS / DiSEqC 1.2): Sets the positioned type between DiSEqC 1.2 and USALS (Universal Satellite Automatic Location System).
 - **My Longitude:** Sets the longitude for my location.
 - **My Latitude:** Sets the latitude for my location.
 - **Satellite Longitude Settings:** Sets the longitude of user defined satellites.

User Mode: Sets the position of satellite antenna according to each satellite. If you store the current position of satellite antenna according to a certain satellite, when the signal of that satellite is needed, the satellite antenna can be moved to pre-populated position.

- **Satellite:** Selects the satellite to set the position for.
- **Transponder:** Selects a transponder from the list for signal reception.
- **Moving Mode:** Selects the movement mode between discrete and continuous movement.
- **Step Size:** Adjusts the step size degrees for the antenna rotation. Step Size is available when Moving Mode is set to Step.

- **Go to Stored Position:** Rotates the antenna to the stored satellite position.
- **Antenna Position:** Adjusts and stores the antenna position for the selected satellite.
- **Store Current Position:** Stores current position as the selected positioner limit.
- **Signal Quality:** Display the current status of broadcasting signal.



Installer Mode: Sets limits to the scope of movement of satellite antenna or reset the position. Generally, installation guide uses this function.

- **Limit Position (East / West):** Selects the direction of the positioner Limit.
- **Antenna Position:** Adjusts and stores the antenna position for the selected satellite.
- **Store Current Position:** Stores the current position as the selected positioner Limit.
- **Go to Zero:** Moves the antenna to the reference position.
- **Reset Positioner Limit:** Allows the antenna to rotate over the full arc.
- **Reset All Setting (OK / Cancel):** All satellite settings will be reset to the initial values.

❏ Other Features

 MENU  → Channel → ENTER 

■ Fine Tune

(analogue channels only)

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel manually. Scroll to the left or right until the image is clear.

- ✎ Settings are applied to the channel you're currently watching.
- ✎ Fine tuned channels that have been saved are marked with an asterisk "*" on the right-hand side of the channel number in the channel banner.
- ✎ To reset the fine-tuning, select **Reset**.

■ Transfer Channel List

The PIN input screen appears. Enter your 4 digit PIN number. Imports or exports the channel map. You should connect a USB storage to use this function.

- **Import from USB:** Import channel list from USB.
- **Export to USB:** Export channel list to USB. this function is available when USB is connected.

❑ Changing the Preset Picture Mode

🖱️ MENU  → Picture → Picture Mode → ENTER 

■ Picture Mode

Select your preferred picture type.

📝 When connecting a PC, the **Picture Mode** is only available the **Standard** and **Entertain**.

- **Dynamic**: Suitable for a bright room.
- **Standard**: Suitable for a normal environment.
- **Movie**: Suitable for watching movies in a dark room.
- **Entertain**: Suitable for watching movies and games.

📝 It is only available when connecting a PC.

□ Adjusting Picture Settings

👆 MENU  → Picture → ENTER 

■ Cell Light / Contrast / Brightness / Sharpness / Colour / Tint (G/R)

Your television has several setting options for picture quality control.

- 📝 When you make changes to **Cell Light**, **Contrast**, **Brightness**, **Sharpness**, **Colour** or **Tint (G/R)** the OSD will be adjusted accordingly.
- 📝 When connecting a PC, you can only make changes to **Cell Light**, **Contrast**, **Brightness** and **Sharpness**.
- 📝 Settings can be adjusted and stored for each external device connected to the TV.
- 📝 Lowering picture brightness reduces power consumption.

❑ Changing the Picture Size

📖 MENU  → Picture → Screen Adjustment → ENTER 

■ Screen Adjustment

- **Picture Size:** Your cable box / satellite receiver may have its own set of screen sizes as well. However, we highly recommend you use 16:9 mode most of the time.

Auto Wide: Automatically adjusts the picture size to the 16:9 aspect ratio.

16:9: Sets the picture to 16:9 wide mode.


Wide Zoom: Magnifies the picture size more than 4:3.

 Adjusts the **Position** by using ,  buttons.

Zoom: Magnifies the 16:9 wide pictures vertically to fit the screen size.

 Adjusts the **Zoom** or **Position** by using ▲, ▼ button.

4:3: Sets the picture to basic (4:3) mode.

 Do not watch in 4:3 format for a long time. Traces of borders displayed on the left, right and centre of the screen may cause image retention (screen burn) which are not covered by the warranty.

Screen Fit: Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals are inputted.

NOTE

- Depending on the input source, the picture size options may vary.
- The available items may differ depending on the selected mode.
- When connecting a PC, only **16:9** and **4:3** modes can be adjusted.
- Settings can be adjusted and stored for each external device connected to an input on the TV.
- If you use the **Screen Fit** function with HDMI 720p input, 1 line will be cut at the top, bottom, left and right as in the over scan function.

- **4:3 Screen Size (16:9 / Wide Zoom / Zoom / 4:3)**: Available only when picture size is set to **Auto Wide**. You can determine the desired picture size at the 4:3 WSS (Wide Screen Service) size or the original size. Each European country requires different picture size.

 Not available in PC, Component or HDMI mode.



❑ Changing the Picture Options

■ Advanced Settings


📏 MENU  → Picture → Advanced Settings → ENTER 

(Advanced Settings are available in Standard / Movie mode)

Compared to previous models, new Samsung TVs have a more precise picture.

📝 When connecting a PC, you can only make changes to **Gamma** and **White Balance**.

- **Black Tone (Off / Dark / Darker / Darkest):** Select the black level to adjust the screen depth.
- **Dynamic Contrast (Off / Low / Medium / High):** Adjust the screen contrast.
- **Gamma:** Adjust the primary colour intensity.

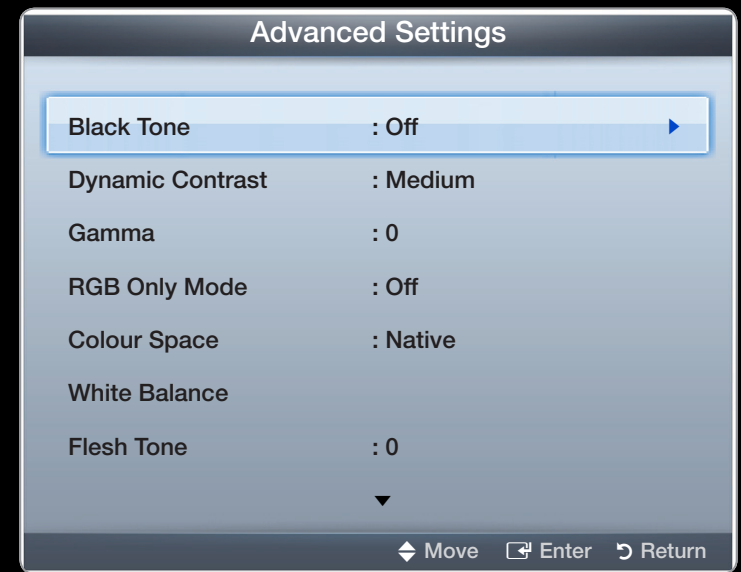

- The displayed image may differ depending on the model.

- **RGB Only Mode (Off / Red / Green / Blue)**: Displays the **Red**, **Green** and **Blue** colour for making fine adjustments to the hue and saturation.
- **Colour Space (Auto / Native)**: Adjust the range of colours available to create the image.
- **White Balance**: Adjust the colour temperature for a more natural picture.

R-Offset / G-Offset / B-Offset: Adjust each colour's (red, green, blue) darkness.

R-Gain / G-Gain / B-Gain: Adjust each colour's (red, green, blue) brightness.

Reset: Resets the White Balance to it's default settings.

- **Flesh Tone**: Emphasize pink “Flesh Tone”.
- **Edge Enhancement (Off / On)**: Emphasize object boundaries.
- **Motion Lighting (Off / On)**: Reduce power consumption by brightness control.
 - ☑ When changing a setting value of **Contrast**, **Motion Lighting** will be set to **Off**.





■ Picture Options


 **MENU**  → **Picture** → **Picture Options** → **ENTER** 

 When connecting a PC, you can only make changes to the **Colour Tone**.

- **Colour Tone (Cool / Standard / Warm1 / Warm2)**



 **Warm1** or **Warm2** will be deactivated when the picture mode is **Dynamic**.

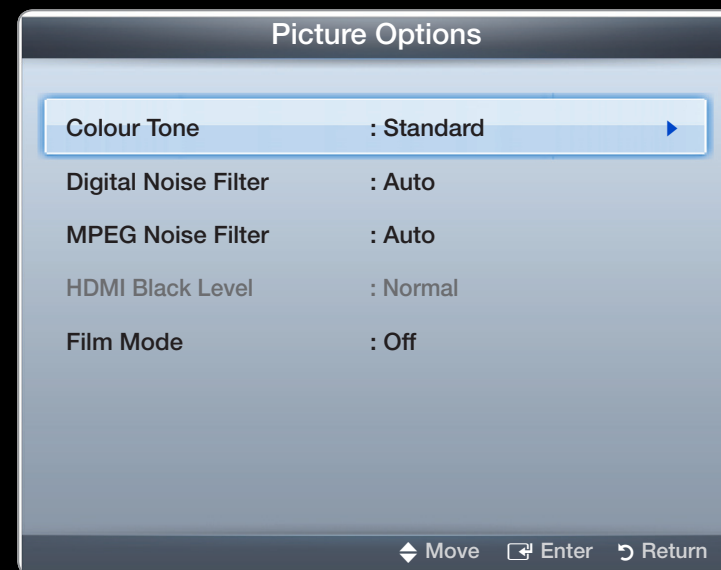 Settings can be adjusted and stored for each external device connected to an input on the TV.



- The displayed image may differ depending on the model.

- **Digital Noise Filter (Off / Low / Medium / High / Auto / Auto Visualisation):**
If the broadcast signal received by your TV is weak, you can activate the **Digital Noise Filter** feature to reduce any static and ghosting that may appear on the screen.
 - ☑ When the signal is weak, try other options until the best picture is displayed.
- **Auto Visualisation:** When changing analogue channels, displays signal strength.
 - ☑ Only available for analogue channels.
 - ☑ When bar is green, you are receiving the best possible signal.
- **MPEG Noise Filter (Off / Low / Medium / High / Auto):** Reduces MPEG noise to provide improved picture quality.

- **HDMI Black Level (Low / Normal)**: Selects the black level on the screen to adjust the screen depth.
 Available only in HDMI mode.
- **Film Mode (Off / Auto1 / Auto2 / Cinema Smooth** for PDP 550 and above): Sets the TV to automatically sense and processes film signals from all sources and adjusts the picture for optimum quality. The **Cinema Smooth** function is only activated when HDMI 24Hz signal is inputted.
 Available in TV, AV, COMPONENT (480i / 1080i) and HDMI (1080i).

◀ **■ Reset Picture (OK / Cancel)** ▶

Resets your current picture mode to its default settings.

❑ Setting up the TV with Your PC

Select the input source to PC.

■ Auto Adjustment **TOOLS**

 **MENU**  → **Picture** → **Auto Adjustment** → **ENTER** 





Frequency values / position and fine tune are adjusted automatically.

 Not available when connecting with an HDMI to DVI cable.



■ PC Screen Adjustment

 MENU  → Picture → Screen Adjustment → PC Screen Adjustment → ENTER 

- **Coarse / Fine**: Removes or reduces picture noise. If the noise is not removed by Fine-tuning alone, then adjust the frequency as best as possible (**Coarse**) and Fine-tune again. After the noise has been reduced, readjust the picture so that it is aligned to the centre of screen.
- **Position**: Adjusts the PC screen position with direction button ( /  /  / ).
- **Image Reset**: Resets the image to default settings.

Using Your TV as a Computer (PC) Display

Setting Up Your PC Software (Based on Windows XP)

Depending on the version of Windows and the video card, the actual screens on your PC may differ in which case the same basic set-up information will almost always be applied. (If not, contact your computer manufacturer or Samsung Dealer.)

1. Click on “Control Panel” on the Windows start menu.
2. Click on “Appearance and Themes” in the “Control Panel” window and a display dialog-box will appear.
3. Click on “Display” and a display dialog box will appear.


4. Navigate to the “Settings” tab on the display dialog-box.

- If a vertical-frequency option exists on your display settings dialog box, the correct value is “60” or “60 Hz”. Otherwise, just click “OK” and exit the dialog box.



❑ Changing the Preset Sound Mode

■ Sound Mode TOOLS

- **Standard:** Selects the normal sound mode.
 - **Music:** Emphasizes music over voices.
 - **Movie:** Provides the best sound for movies.
 - **Clear Voice:** Emphasizes voices over other sounds.
 - **Amplify:** Increases the intensity of high-frequency sound to allow a better listening experience for the hearing impaired.
-  If **Speaker Select** is set to **External Speaker** is disabled.

□ Adjusting Sound Settings


👉 MENU  → Sound → Sound Effect → ENTER 

■ Sound Effect

- **SRS TruSurround HD (Off / On)**

(standard sound mode only)

This function provides a virtual 5.1 channel surround sound experience through a pair of speakers using HRTF (Head Related Transfer Function) technology.

 If **Speaker Select** is set to **External Speaker**, **SRS TruSurround HD** is disabled.

- **SRS TruDialog (Off / On)**

(standard sound mode only)

This function allows you to increase the intensity of a voice over background music or sound effects so that dialog can be heard more clearly.

 If **Speaker Select** is set to **External Speaker**, **SRS TruDialog** is disabled.



- **Equalizer**

Adjusts the sound mode (standard sound mode only).

- **Balance L/R**: Adjusts the balance between the right and left speaker.
- **100Hz / 300Hz / 1kHz / 3kHz / 10kHz** (Bandwidth Adjustment): Adjusts the level of specific bandwidth frequencies.
- **Reset**: Resets the equalizer to its default settings.

 If **Speaker Select** is set to **External Speaker**, **Equalizer** is disabled.



■ Broadcast Audio Options

- **Audio Language**

(digital channels only)


Change the default value for audio languages.

 The available language may differ depending on the broadcast.

- **Audio Format**

(digital channels only)

When sound is emitted from both the main speaker and the audio receiver, a sound echo may occur due to the decoding speed difference between the main speaker and the audio receiver. In this case, use the **TV Speaker** function.


 **Audio Format** option may differ depending on the broadcast. 5.1ch Dolby digital sound is only available when connecting an external speaker through an optical cable.

- **Audio Description**

(not available in all locations) (digital channels only)

This function handles the Audio Stream for the AD (Audio Description) which is sent along with the Main audio from the broadcaster.

 **Audio Description (Off / On)**: Turn the audio description function on or off.

 **Volume**: Adjust the audio description volume.

■ Additional Settings

(digital channels only)

- **DTV Audio Level (MPEG / HE-AAC)**: This function allows you to reduce the disparity of a voice signal (which is one of the signals received during a digital TV broadcast) to a desired level.
 - ☑ According to the type of broadcast signal, **MPEG / HE-AAC** can be adjusted between -10dB and 0dB.
 - ☑ To increase or decrease the volume, adjust between the range 0 and -10 respectively.


- **SPDIF Output:** SPDIF (Sony Philips Digital InterFace) is used to provide digital sound, reducing interference going to speakers and various digital devices such as a DVD player.

Audio Format: You can select the Digital Audio output (SPDIF) format.

The available Digital Audio output (SPDIF) format may differ depending on the input source.

Audio Delay: Correct audio-video sync problems, when watching TV or video, and when listening to digital audio output using an external device such as an AV receiver (0ms~250ms).

- **Dolby Digital Comp (Line / RF):** This function minimizes signal disparity between a dolby digital signal and a voice signal (i.e. MPEG Audio, HE-AAC, ATV Sound).

 Select Line to obtain dynamic sound, and RF to reduce the difference between loud and soft sounds at night time.

Line: Set the output level for signals greater or less than -31dB (reference) to either -20dB or -31dB.

RF: Set the output level for signals greater or less than -20dB (reference) to either -10dB or -20dB.

■ Speaker Settings

- **Speaker Select (External Speaker / TV Speaker):** A sound echo may occur due to a difference in decoding speed between the main speaker and the audio receiver. In this case, set the TV to **External Speaker**.
 - ☑ When **Speaker Select** is set to **External Speaker**, the volume and **MUTE** buttons will not operate and the sound settings will be limited.
 - ☑ When **Speaker Select** is set to **External Speaker**.
 - **TV Speaker: Off, External Speaker: On**

✍ When **Speaker Select** is set to **TV Speaker**.

- **TV Speaker: On, External Speaker: On**

✍ If there is no video signal, both speakers will be mute.

- **Auto Volume (Off / Normal / Night)**: To equalize the volume level on each channel, set to **Normal**.

Night: This mode provides an improved sound experience compared to **Normal** mode, making almost no noise. It is useful at night.


◀ ■ **Reset Sound (OK / Cancel)** ▶

Reset all sound settings to the factory defaults.


❑ Connecting to a Wired Network for PDP 550 and 570 Series

You can attach your TV to your LAN using cable in three ways:


- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an external modem using a LAN cable. See the diagram below.

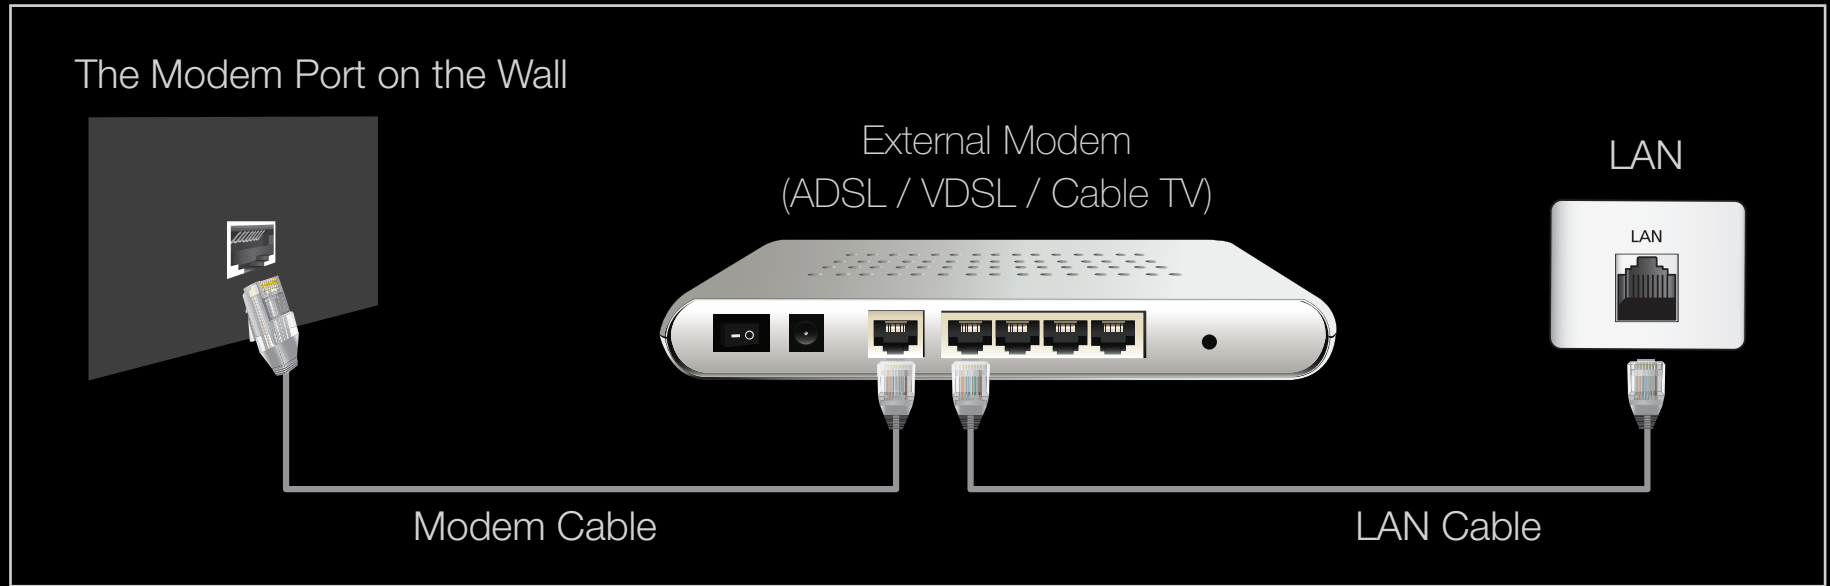

- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to a IP Sharer which is connected to an external modem. Use LAN cable for the connection. See the diagram below.

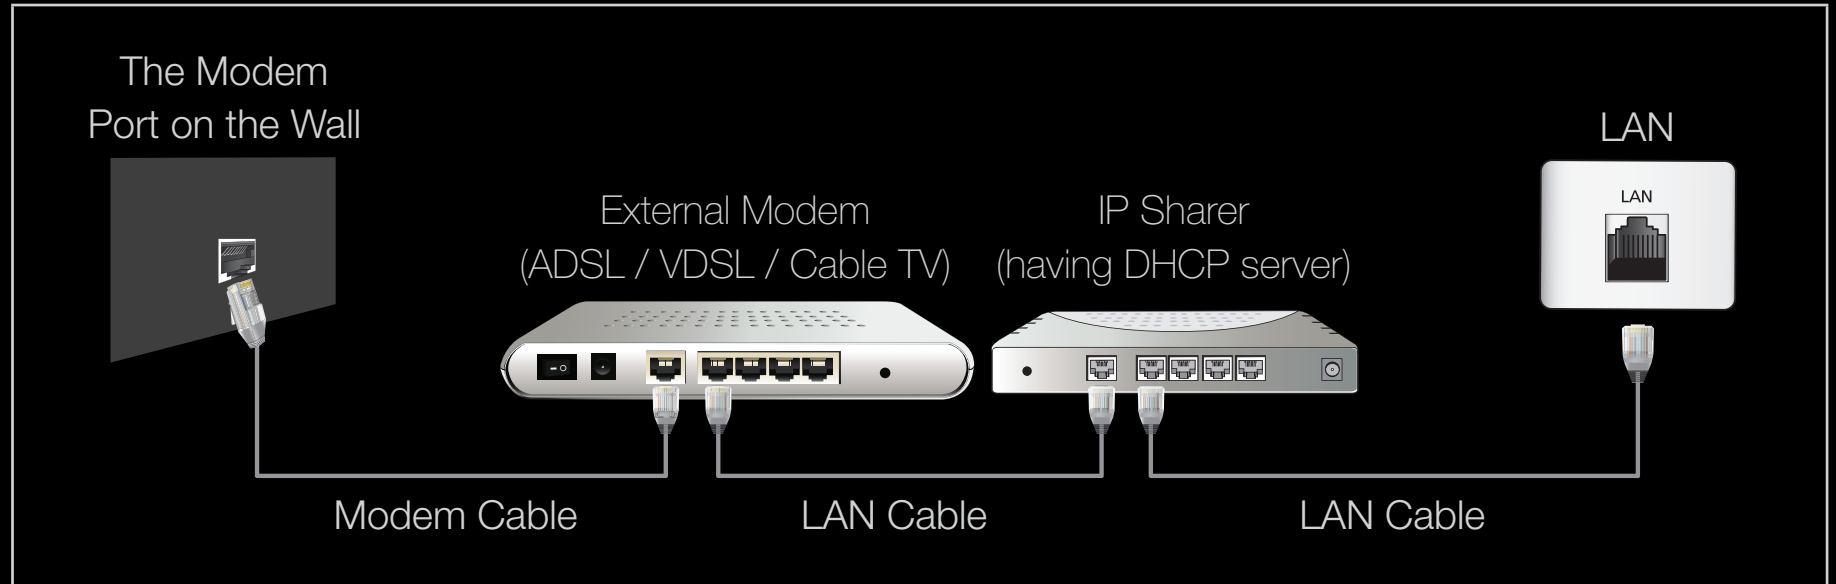

- Depending on how your network is configured, you may be able to attach your TV to your LAN by connecting the LAN port on the back of your TV directly to a network wall outlet using a LAN cable. See the diagram below. Note that the wall outlet is attached to a modem or router elsewhere in your house.

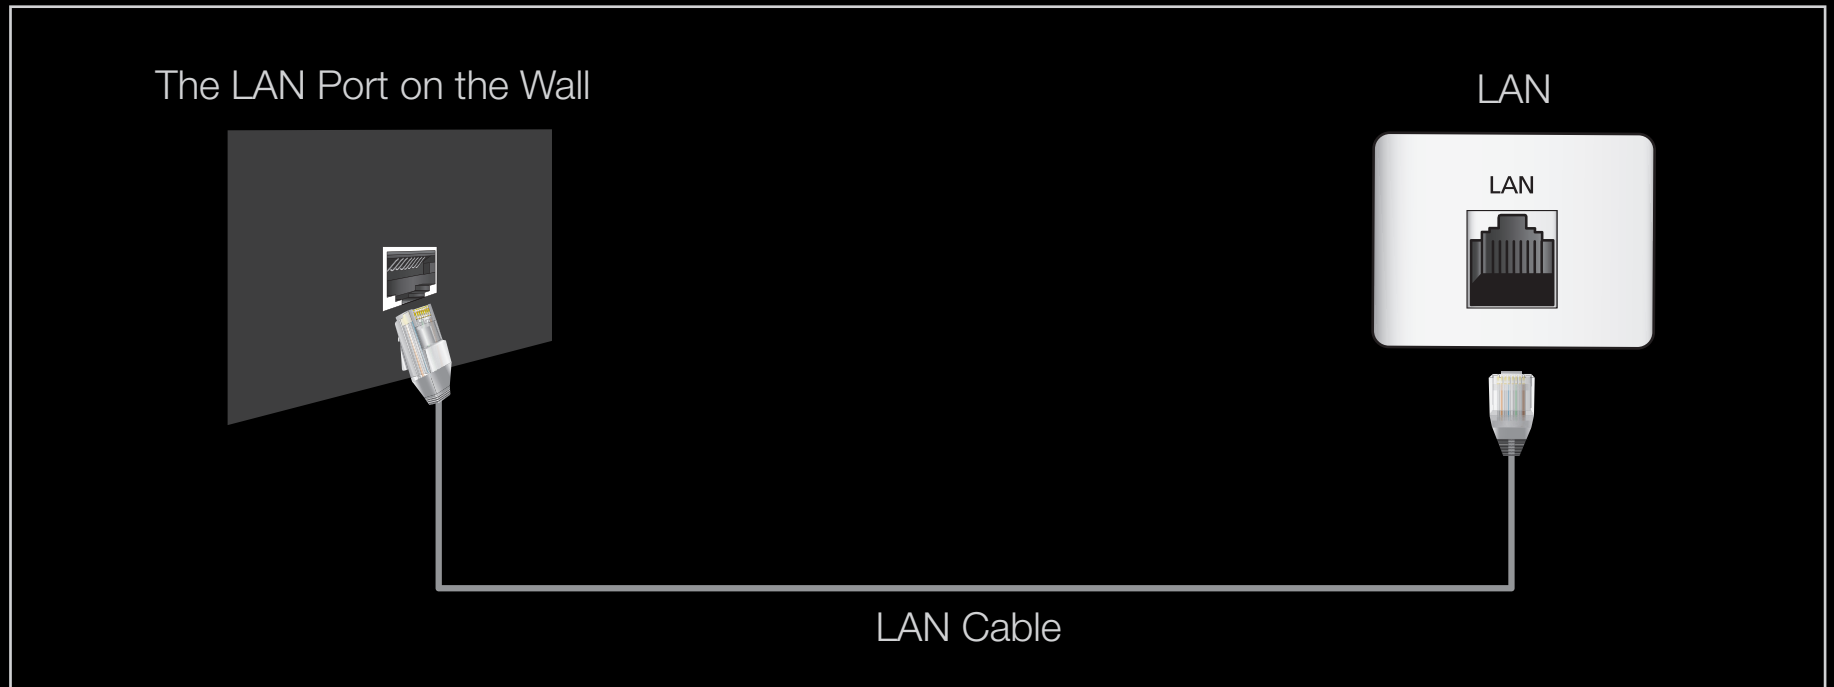

- If you have a Dynamic Network, you should use an ADSL modem or router that supports Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS values your TV needs to access the Internet so you do not have to enter them manually. Most home networks are Dynamic Networks.

Some networks require a Static IP address. If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually on your TV's Cable Setup Screen when you set up the network connection. To get the IP address, subnet mask, gateway, and DNS values, contact your Internet Service Provider (ISP). If you have a Windows computer, you can also get these values through your computer.

- ☑ You can use ADSL modems that support DHCP if your network requires a Static IP address. ADSL modems that support DHCP also let you use Static IP addresses.

□ **Setting the Network** for PDP 550 and 570 Series

■ **Network Settings**

 **MENU**  → **Network** → **Network Settings** → **ENTER** 

Set the network connection to use various Internet services such as AllShare™ and perform software upgrade.

■ **Network Status**

 **MENU**  → **Network** → **Network Status** → **ENTER** 

You can check the current network and Internet status.

■ AllShare Settings

 MENU  → Network → AllShare Settings → ENTER 

Selects whether to use media functions on the network.

■ Network Settings (Auto)

Use the Automatic Network Settings when connecting your TV to a network that supports DHCP. To set up your TV's cable network connection automatically, follow these steps:



How to set up automatically

1. Go to **Network Settings** screen. To enter it, follow the directions of **Network Settings**.
2. Select the **Wired**.
3. The network test screen appears, and network setting is done.



- ✎ If it fails to set automatically, check the connection of LAN port.
- ✎ If you cannot find network connection values or if you want to set connection manually, set it to Manual. Refer to following “How to set up manually”.



- The displayed image may differ depending on the model.

■ Network Settings (Manual)

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

Getting the Network Connection Values


To get the Network connection values on most Windows computers, follow these steps:

1. Right click the Network icon on the bottom right of the screen.
2. In the pop-up menu that appears, click Status.
3. On the dialog that appears, click the Support tab.
4. On the Support Tab, click the Details button. The Network connection values are displayed.

How to set up manually

To set up your TV's cable network connection manually, follow these steps:

1. Follow Steps 1 through 2 in the “How to set up automatically” procedure.
2. Select the **IP Settings** on network test screen.
3. Set **IP Mode** to **Manual**.
4. Press the ▼ button on your remote to go to the **IP Address**.

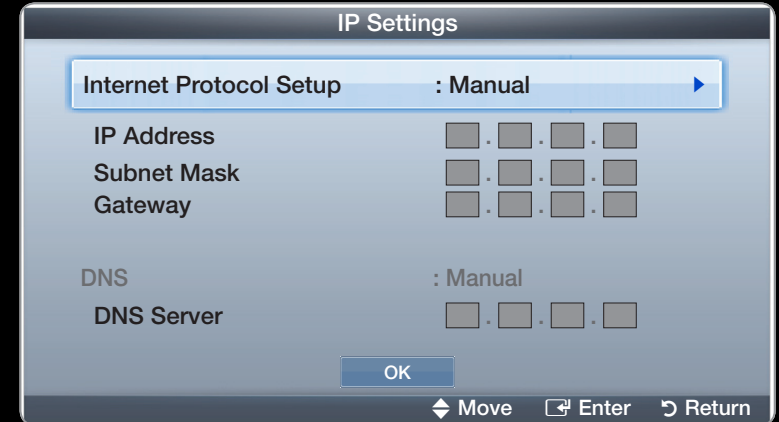


- The displayed image may differ depending on the model.

5. Enter the **IP Address**, **Subnet Mask**, **Gateway**, and **DNS Server** values. Use the number buttons on your remote to enter numbers and the arrow buttons to move from one entry field to another.
6. When done, select the **OK**.
7. The network test screen appears, and network setting is done.



❑ Connecting to a Wireless Network for PDP 550 and 570 Series

To connect your TV to your network wireless, you need a wireless router or modem and a Samsung Wireless LAN adapter (WIS09ABGN, WIS09ABGN2, WIS10ABGN), which you connect to your TV's back or side panel USB port. See the illustration below.

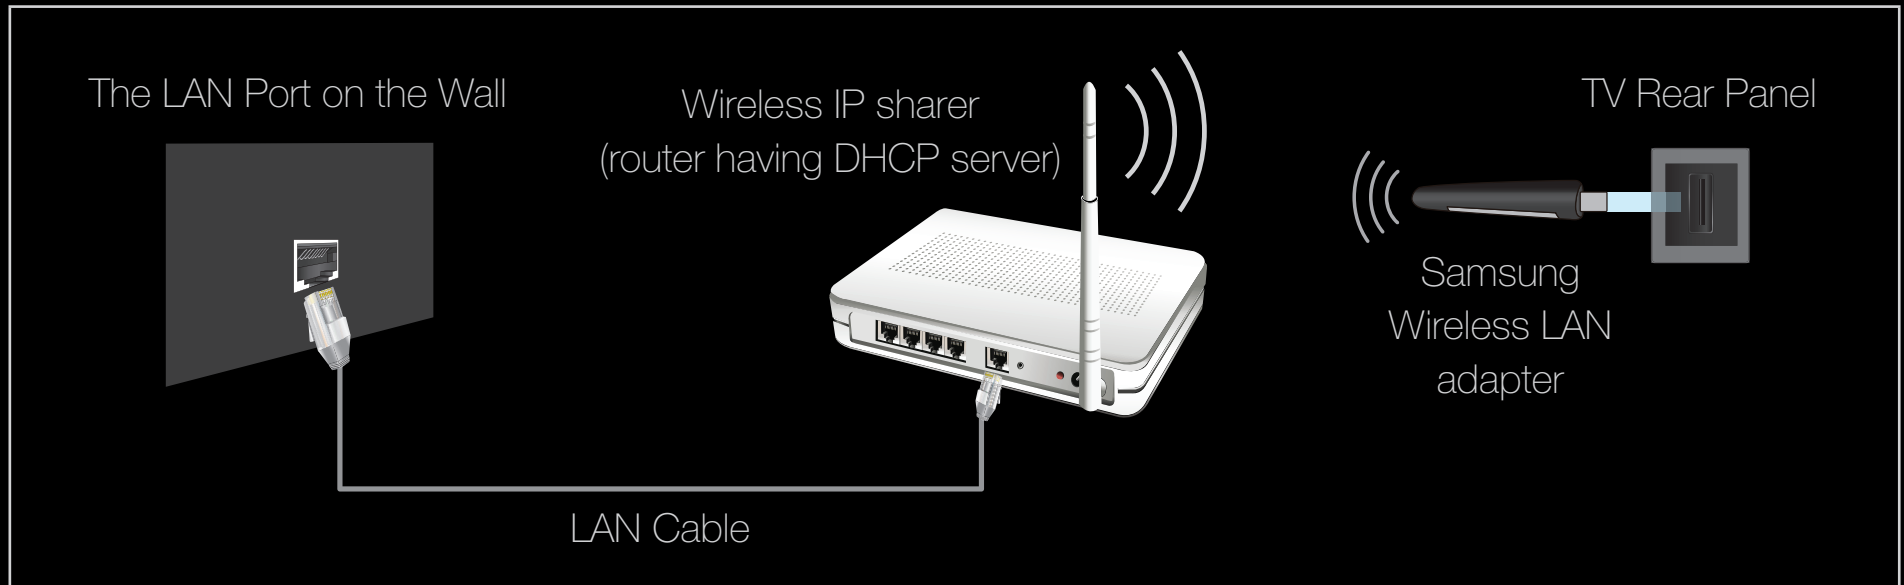

Samsung's Wireless LAN adapter is sold separately and is offered by selected retailers, Ecommerce sites and Samsungparts.com. Samsung's Wireless LAN adapter supports the IEEE 802.11a/b/g and n communication protocols. Samsung recommends using IEEE 802.11n. When you play video over a IEEE 802.11b/g connection, the video may not play smoothly.

 NOTE

- You must use the “Samsung Wireless LAN adapter” (WIS09ABGN, WIS09ABGN2, WIS10ABGN) to use a wireless network.

- To use a wireless network, your TV must be connected to a wireless IP sharer (either a router or a modem). If the wireless IP sharer supports DHCP, your TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel for the wireless IP sharer that is not currently being used. If the channel set for the wireless IP sharer is currently being used by another device nearby, this will result in interference and communication failure.
- If you apply a security system other than the systems listed below, it will not work with the TV.



- If Pure High-throughput (Greenfield) 802.11n mode is selected and the Encryption type is set to WEP, TKIP or TKIP AES (WPS2Mixed) for your AP, Samsung TVs will not support a connection in compliance with new Wi-Fi certification specifications.
- If your AP supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode.
- ◀ • If your router, modem, or device is not certified, it may not connect to the TV via the “Samsung Wireless LAN adapter.” ▶

- Ensure the TV is turned on before you connect the Samsung Wireless LAN adapter.
- Connection Methods: You can setup the wireless network connection on six ways.
 - Auto Setup (Using the Auto Network Search function)
 - Manual Setup
 - **WPS(PBC)**
 - **Ad Hoc**
 - **One Foot Connection**
 - **Plug & Access**

- The Samsung Wireless LAN adapter may not be recognized when using a connection via a USB hub or via a USB extension cable other than the cable supplied.

■ Network Settings (Auto)


Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key. The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up security for your wireless network. If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the setup process.

How to set up automatically

1. Go to **Network Settings** screen. To enter it, follow the directions of **Network Settings**.
2. Select the **Wireless**.




- The displayed image may differ depending on the model.

3. The **Network** function searches for available wireless networks. When done, it displays a list of the available networks.
4. In the list of networks, press the ▲ or ▼ button to select a network, and then press the **ENTER**  button.
 - ☞ If the wireless router is set to Hidden (Invisible), you have to select **Add Network** and enter the correct **Network Name (SSID)** and **Security key** to establish the connection.
5. If the **Security** screen pop-up appears, go to step 6. If you select the wireless router which does not have security, go to step 7.

6. If the wireless router has security, enter the Security key (Security or PIN), then select **Done**.

☞ When you enter the Security key (Security or PIN), use ▲ / ▼ / ◀ / ▶ buttons on your remote to select number/characters.

☞ You should be able to find the Pass Phrase on one of the set up screens you used to set up your router or modem.

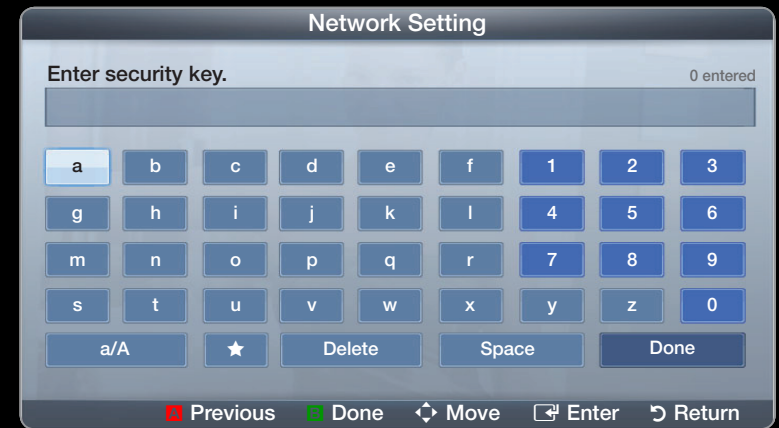

- The displayed image may differ depending on the model.

7. The network connection screen appears, and network setting is done.

☑ If it fails to set Security key (Security or PIN), select **Reset** or **IP Settings**.

☑ If you want to set connection manually, select the **IP Settings**. Refer to following “How to set up manually”.



■ Network Setup (Manual)

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

Getting the Network Connection Values

To get the Network connection values on most Windows computers, follow these steps:

1. Right click the Network icon on the bottom right of the screen.
2. In the pop-up menu that appears, click Status.

3. On the dialog that appears, click the Support tab.
4. On the Support Tab, click the Details button. The Network connection values are displayed.

How to set up manually

To set up your TV's cable network connection manually, follow these steps:

1. Follow Steps 1 through 2 in the “How to set up automatically” procedure.
2. Select the **IP Settings** on network test screen.
3. Set **IP Mode** to **Manual**.

4. Press the ▼ button on your remote to go to the IP Address.
5. Enter the **IP Address**, **Subnet Mask**, **Gateway**, and **DNS Server** values. Use the number buttons on your remote to enter numbers and the arrow buttons to move from one entry field to another.
6. When done, select the **OK**.
7. The network test screen appears, and network setting is done.




■ Network Setup (WPS(PBC))

How to set up using WPS(PBC)

If your router has a WPS(PBC) button, follow these steps:

1. Go to **Network Setting** screen. To enter it, follow the directions of **Network Settings**.
2. Select the **WPS(PBC)**.
3. Press the **WPS(PBC)** button on your router within 2 minutes. Your TV automatically acquires all the network setting values it needs and connects to your network.
4. The network test screen appears, and network setting is done.

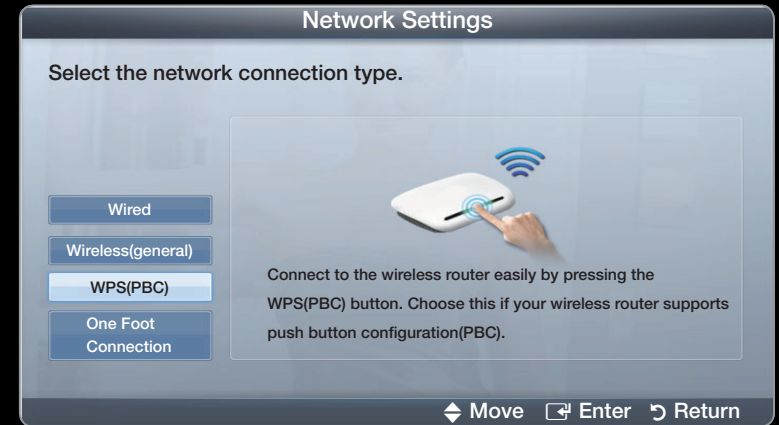

- The displayed image may differ depending on the model.

■ Network Settings (One Foot Connection)

The **One Foot Connection** make you easy to connect samsung TV and samsung wireless router by placing samsung wireless router within 1 foot(25cm) from samsung TV. If your wireless router does not support **One Foot Connection**, you must connect using one of the other methods.


 You can check for equipment that supports **One Foot Connection** on www.samsung.com.



How to set up using One Foot Connection

Turn on the power of wireless router and TV.

1. Go to **Network Settings** screen. To enter it, follow the directions of **Network Settings**.
2. Select the **One Foot Connection**.
3. Place the wireless router in parallel with the Samsung Wireless LAN adapter giving a gap no larger than 25cm.

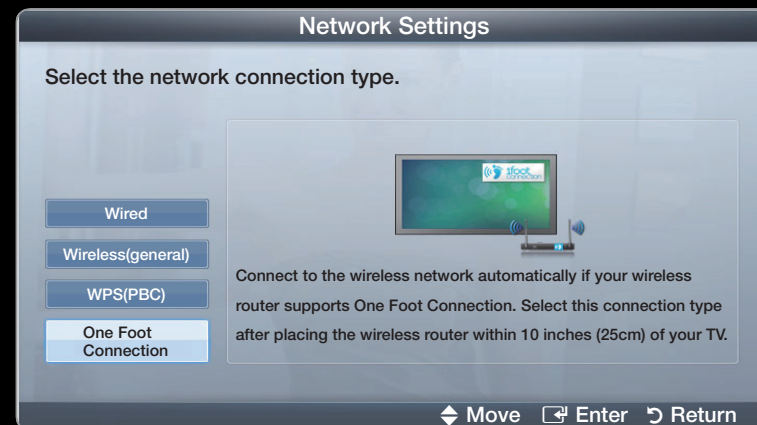

- The displayed image may differ depending on the model.

✎ If **One Foot Connection** does not connect your TV to your router, a pop-up window appears on the screen notifying you of the failure. If you want to try using **One Foot Connection** again, reset the wireless router, disconnect the Samsung Wireless LAN adapter and then try again from Step 1. You can also choose one of the other connection setup methods.



4. The network connection screen appears, and network setting is done.
5. Place the wireless Router to a desired location.
 - ☞ If the wireless Router settings change or you install a new wireless Router, you must perform the **One Foot Connection** procedure again, beginning from Step 1.



■ Network Setting (Plug & Access)

Plug & Access function make you easy to connect samsung TV and samsung wireless router by using USB memory stick. If your wireless router does not support **Plug & Access**, you must connect using one of the other methods.

📝 You can check for equipment that supports **Plug & Access** on www.samsung.com.

How to set up using Plug & Access function

◀ Turn on the power of wireless router and TV. ▶

1. Insert USB memory stick into our Samsung wireless router and checking wireless router's LED status (Blinking → On).
2. Then take USB memory out and insert it into Samsung TV.

3. Wait until the connection is automatically established.

☒ If **Plug & Access** does not connect your TV to your wireless router a pop-up window appears on the screen notifying you of the failure. If you want to try using **Plug & Access** again, reset the wireless router disconnect the Samsung Wireless LAN adapter and then try again from Step 1. You can also choose one of the other connection setup methods.

4. The network connection screen appears, and network setting is done.

5. Place the wireless router in a desired location.

☒ If the wireless router settings change or you install a new wireless router you must perform the **Plug & Access** procedure again, beginning from Step 1.

Priority QOS

Samsung wireless Router is optimized HD AV streaming for Samsung DTV

This is our product's distinctive function.

Samsung wireless Router can be connected with many devices, such as laptop, mobile phone, BD player etc.

In case of connecting Samsung TV to Samsung wireless Router while other devices are connected, Samsung wireless Router will give Samsung TV a priority connection than other devices.

This function ensures the best streaming contents and throughput speed.

- Make your TV faster by giving priority bandwidth to your TV (on / off optional).
- By giving priority to Samsung TVs, enjoy HD content without buffering.
- Connection speed may vary based on the network environment.

■ Network Setup (Ad Hoc)

You can connect to a mobile device supporting Ad-hoc without an wireless router through the “Samsung Wireless LAN adapter”. When connecting mobile device, you can use files on device or connect internet using AllShare or Multimedia function.

How to connect to new Ad-hoc

1. Go to **Network Settings** screen. To enter it, follow the directions of **Network Settings**.
2. Select the **Wireless**.

3. When finished searching a mobile device, set the **Network Name (SSID)** and Security key of the device, and then connect the network.
- ☑ If network does not operate normally, check the **Network Name (SSID)** and Security key again. An incorrect Security key may cause a malfunction.
 - ☑ If a device is connected once, it is displayed in Network Setting list. When you connect it again, you can find it in network setting list.



If Your TV Fails to Connect to the Internet

Your TV may not be able to connect to the Internet because your ISP has permanently registered the MAC address (a unique identifying number) of your PC or modem, which it then authenticates each time you connect to the Internet as a way of preventing unauthorized access. As your TV has a different MAC address, your ISP can not authenticate its MAC address, and your TV can not connect.

To resolve this problem, ask your ISP about the procedures required to connect devices other than a PC (such as your TV) to the Internet.

If your Internet service provider requires an ID or password to connect to the Internet, your TV may not be able to connect to the Internet. If this is the case, you must enter your ID or password when connecting to the Internet.

The internet connection may fail because of a firewall problem. If this is the case, contact your Internet service provider.

If you cannot connect to the Internet even after you have followed the procedures of your Internet service provider.

□ Setting the Time

📄 MENU  → System → ENTER 

■ Time


- **Clock:** Setting the clock is for using various timer features of the TV.
 - 📄 The current time will appear every time you press the **INFO** button.
 - 📄 If you disconnect the power cord, you have to set the clock again.

◀ — **Clock Mode (Auto / Manual)** ▶

Auto: Set the current time automatically using the time from a digital channel.


 The antenna must be connected in order to set the time automatically.

Manual: Set the current time manually.

 Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually.


– **Clock Set:** Set the **Day, Month, Year, Hour, Minute**.

 Available only when **Clock Mode** is set to **Manual**.

 You can set the day, month, year, hour and minute directly by pressing the number buttons on the remote control.


– **Time Zone (Auto / Manual):** Selects your time zone.

 The option may differ depending on country.

 This function is only available when the **Clock Mode** is set to **Auto**.

Using the Sleep Timer

 **MENU**  → **System** → **Time** → **Sleep Timer** → **ENTER** 

- **Sleep Timer** : Automatically shuts off the TV after a preset period of time (30, 60, 90, 120, 150 and 180 minutes).

 To cancel **Sleep Timer**, select **Off**.

Setting the On / Off Timer


 MENU  → System → Time → ENTER 

- **On Timer 1 / On Timer 2 / On Timer 3:**

Three different on timer settings can be made. You must set the clock first.

Setup: Select **Off**, **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual** to set at you convenience. If you select **Manual**, you can set up the day you want to activate the timer.

 The  mark indicates the day is selected.

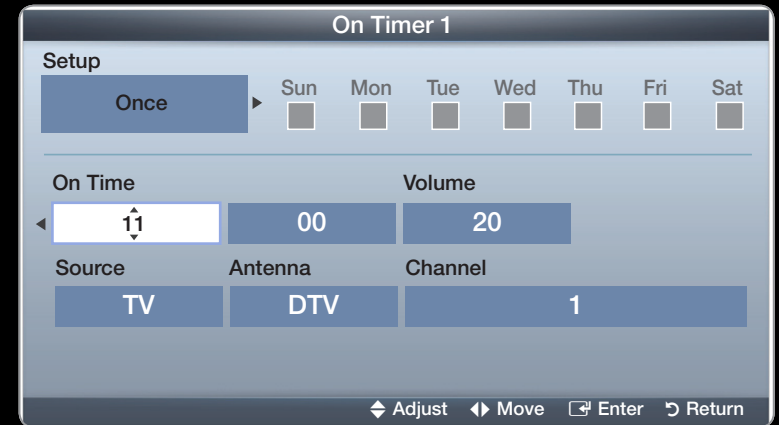

- The displayed image may differ depending on the model.

On Time: Set the hour and minute.


Volume: Set the desired volume level.

Source: Select **TV** or **USB** content to be played when the TV is turned on automatically. (**USB** can be selected only when a USB device is connected to the TV)

Antenna (when the **Source** is set to **TV**): Select the desired antenna source.

Channel (when the **Source** is set to **TV**): Select the desired channel.

Music / Photo (when the **Source** is set to **USB**): Select a folder in the USB device containing music or photo files to be played when the TV is turned on automatically.

 **Auto Power Off** (available only when the TV is turned on by Timer): The TV will be automatically turned off after 4 hours of being left idle to prevent overheating.

 NOTE

- If there is no music file on the USB device or the folder containing a music file is not selected, the Timer function does not operate correctly.
- When there is only one photo file in the USB, the Slide Show will not play.
- If a folder name is too long, the folder cannot be selected.

- Each USB you use is assigned its own folder. When using more than one of the same type of USB, make sure the folders assigned to each USB have different names.
- It is recommended that you use a USB memory stick and a multi card reader when using **On Timer**. The **On Timer** function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because these devices take a long time to be recognized.




- **Off Timer 1 / Off Timer 2 / Off Timer 3:**

Three different off timer settings can be made. You must set the clock first.

Setup: Select **Off**, **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual** to set at you convenience. If you select **Manual**, you can set up the day you want to activate the timer.



☑ The ✓ mark indicates the day is selected.

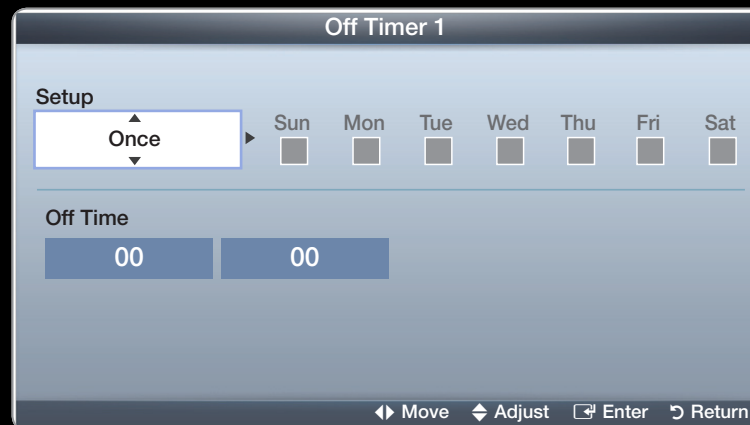Off Time: Set the hour and minute.



- The displayed image may differ depending on the model.


❏ Locking Programmes

📏 MENU  → System → Security → ENTER 

■ Security

The PIN input screen appears, Enter your 4 digit PIN number.

- **Channel Lock (Off / On):** Lock channels in **Channel Manager**, to prevent unauthorized users, such as children, from watching unsuitable programme.

 Available only when the **Source** is set to **TV**.

- **Program Rating Lock** (depending on the country): Prevent unauthorized users, such as children, from watching unsuitable programme with a user-defined 4-digit PIN code. If the selected channel is locked, the “🔒” symbol will be displayed.

📝 The items of **Program Rating Lock** differs depending on the country.

- **Change PIN**: Change your personal ID number required to set up the TV.
- **Adult Services (Off / On)**: You can adjust the **Adult Services**.

📝 The **Adult Services** is available for **Freesat** antenna only.

How to watch a restricted channel

If the TV is tuned to a restricted channel, the **Program Rating Lock** will block it. The screen will go blank and the following message will appear:


This channel is blocked by **Program Rating Lock**. Please enter the PIN to unblock.




□ Economical Solutions


■ Eco Solution

☞ MENU  → System → Eco Solution → ENTER 

- **Energy Saving (Off / Low / Medium / High / Picture Off)** : This adjusts the brightness of the TV in order to reduce power consumption. If you select **Picture Off**, the screen is turned off, but the sound remains on. Press any button except volume button to turn on the screen.
- ◀ • **Eco Sensor (Off / On)**: To enhance your power savings; the picture settings will automatically adapt to the light in the room. ▶

 If you adjust the **Cell Light**, the **Eco Sensor** will be set to **Off**.

Min Cell Light: When **Eco sensor** is **On**, the minimum screen brightness can be adjusted manually.

 If **Eco Sensor** is **On**, the display brightness may change (become slightly darker or brighter) depending on the surrounding light intensity.

- **No-Signal Power Off (Off / 15 min / 30 min / 60 min):** To avoid unnecessary energy consumption, set how long you want the TV to remain on if it's not receiving a signal.

 Disabled when the PC is in power saving mode.

- **Auto Power Off (Off / On):** The TV will be automatically turned off after 4 hours of being left idle to prevent overheating.







□ Picture In Picture (PIP)

 MENU  → System → PIP → ENTER 

■ PIP

You can watch the TV tuner and one external video source simultaneously. **PIP** (Picture-in-Picture) does not function in the same mode.



- **PIP (Off / On)**: Activate or deactivate the PIP function.
- **Channel**: Select the channel for the sub-screen.
- **Size** ( / ): Select a size for the sub-picture.
- **Position** ( /  /  / ): Select a position for the sub-picture.
- **Sound Select (Main / Sub)**: You can choose the desired sound (**Main** / **Sub**) in **PIP** mode.



NOTE

- For PIP sound, refer to the **Sound Select** instructions.
- If you turn the TV off while watching in PIP mode, the PIP window will disappear.
- You may notice that the picture in the PIP window becomes slightly unnatural when you use the main screen to view a game or karaoke.
- While **Program Rating Lock** is in operation, the PIP function cannot be used.
- PIP Settings

Main picture	Sub picture
Component, HDMI, PC	TV

❏ Other Features

👉 MENU  → System → ENTER 

■ Language

- **Menu Language:** Set the menu language.
- **Teletext Language:** Set a desired language for teletext.
 - 📝 English is the default in cases where the selected language is unavailable in the broadcast.
- **Preference (Primary Audio Language / Secondary Audio Language / Primary Subtitle Language / Secondary Subtitle Language):** Select a language, which will be the default language when a channel is selected.

English

■ Subtitle

Use this menu to set the **Subtitle** mode.

- **Subtitle (Off / On)**: Switches subtitles on or off.
- **Subtitle Mode (Normal / Hearing Impaired)**: Sets the subtitle mode.
- **Subtitle Language**: Sets the subtitle language.
 - If the programme you are watching does not support the **Hearing Impaired** function, **Preferred** automatically activates even if the **Hearing Impaired** mode is selected.
 - English is the default in cases where the selected language is unavailable in the broadcast.

English

■ Digital Text (Disable / Enable) for U.K

If the programme broadcasts with digital text, this feature is enabled.

MHEG (Multimedia and Hypermedia Information Coding Experts Group): An International standard for data encoding systems used in multimedia and hypermedia. This is at a higher level than the MPEG system which includes data-linking hypermedia such as still images, character service, animation, graphic and video files as well as multimedia data. MHEG is user runtime interaction technology and is being applied to various fields including VOD (Video-On-Demand), ITV (Interactive TV), EC (Electronic Commerce), tele-education, tele-conferencing, digital libraries and network games.

■ Screen Burn Protection

To reduce the possibility of screen burn, this unit is equipped with screen burn prevention technology. The Time setting allows you to programme the time between movement of the picture in minutes.

- **Pixel Shift (Off / On):** Using this function, you can minutely move pixels on the PDP in horizontal or vertical direction to minimize after image on the screen.

 Optimum condition for pixel shift

	Item	TV / AV / Component / HDMI/PC
Horizontal	0~4	4
Vertical	0~4	4
Time (minute)	1~4 min	4 min

✎ The **Pixel Shift** value may differ depending on the monitor size (inches) and mode.

✎ This function is not available in the **Screen Fit** mode.

- **Auto Protection Time (Off / 10 min / 20 min / 40 min / 1 hour)**: If the screen remains idle with a still image for a certain period of time defined by the user, the screen saver is activated to prevent the formation of ghost images on the screen.
- **Scrolling**: This function removes after-images on the screen by moving all the pixels on the PDP according to a pattern. Use this function when there are remaining after images or symbols on the screen, especially when you displayed a still image on the screen for a long time.

✍ The after-image removal function has to be executed for a long time (approximately 1 hour) to effectively remove after-images on the screen. If the after-image is not removed after performing the function, repeat the function again.

✍ Press any key on the remote control to cancel this feature.

- **Side Grey (Light / Dark)**: When you watch TV with the screen ratio set to 4:3, the screen is prevented from any damage by adjusting the white balance on both extreme left and right sides.



■ General

- **Game Mode (Off / On)**: When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience by selecting game mode.

☑ Precautions and limitations for game mode

- To disconnect the game console and connect another external device, set **Game Mode** to **Off** in the setup menu.
- If you display the TV menu in **Game Mode**, the screen shakes slightly.

☑ **Game Mode** is not available when the input source is set to TV or PC.

✍ After connecting the game console, set **Game Mode** to **On**. Unfortunately, you may notice reduced picture quality.

✍ If **Game Mode** is **On**:

– **Picture** mode is set to **Standard** and **Sound** mode is set to **Movie**.

- **Menu Transparency (Bright / Dark)**: Set the Transparency of the menu.
- **Boot Logo (Off / On)**: Display Samsung logo when the TV is turned on.
- **TV Name** for PDP 550 and 570 Series: Sets the TV name so you can find it easily on a mobile device.

✍ If you select **User Input**, you can type on the TV using the OSK (On Screen Keyboard).

■ Anynet+ (HDMI-CEC)

For details on set up options, refer to the “What is Anynet+?” instructions.

■ DivX® Video On Demand

Shows the registration code authorized for the TV. If you connect to the DivX web site and register, you can download the VOD registration file. If you play the VOD registration using **Videos** under **SMART HUB**, the registration is completed.

 For more information on DivX® VOD, visit “<http://vod.divx.com>”.



■ Common Interface

- **CI Menu:** This enables the user to select from the CAM-provided menu. Select the CI Menu based on the menu PC Card.
- **Application Info:** View information on the CAM inserted into the CI slot and on the “CI or CI+ CARD” which is inserted into the CAM. You can install the CAM anytime whether the TV is on or off.
 1. Purchase a CI CAM module at your nearest dealer or by phone.
 2. Firmly insert the “CI or CI+ CARD” into the CAM in the direction of the arrow.
 3. Insert the CAM with the “CI or CI+ CARD” into the common interface slot, in the direction of the arrow so that it aligns parallel with the slot.
 4. Check if you can see a picture on a scrambled signal channel.

■ **Network Remote Control (On / Off)** for PDP 550 and 570 Series

Turn on / off or give permission to Samsung mobile phones devices.

You must have a Samsung Mobile phone / device which supports Network Remote Control. For more details, refer to each device's manual.

PIP Settings



❏ Support Menu

■ e-Manual


📖 MENU  → Support → ENTER 

You can read the introduction and instructions about the TV features stored in your TV.

📖 For the detailed information about e-Manual Screen, refer to “How to view the e-Manual” in User Manual.

■ Self Diagnosis

 **MENU**  → **Support** → **ENTER** 

 Self Diagnosis might take few seconds, this is part of the normal operation of the TV.

- **Picture Test:** Use to check for picture problems.

Yes: If the test pattern does not appear or there is noise in the test pattern, select Yes. There may be a problem with the TV. Contact Samsung's Call Centre for assistance.

No: If the test pattern is properly displayed, select No. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

- **Sound Test:** Use the built-in melody sound to check for sound problems.
 - ☑ If you hear no sound from the TV's speakers, before performing the sound test, make sure **Speaker Select** is set to **TV Speaker** in the **Sound** menu.
 - ☑ The melody will be heard during the test even if **Speaker Select** is set to **External Speaker** or the sound is muted by pressing the **MUTE** button.

Yes: If you can hear sound only from one speaker or not at all during the sound test, select Yes. There may be a problem with the TV. Contact Samsung's Call Centre for assistance.

No: If you can hear sound from the speakers, select No. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.


- **Signal Information:** (digital channels only) An HD channel's reception quality is either perfect or the channels are unavailable. Adjust your antenna to increase signal strength.
- **Troubleshooting:** If the TV seems to have a problem, refer to this description.
 - ☒ If none of these troubleshooting tips apply, contact the Samsung customer service centre.



■ Software Upgrade

Software Upgrade can be performed by network connection or downloading the latest firmware from “www.samsung.com.” to a USB memory device.


Current Version the software already installed in the TV.

 Software is represented as ‘Year / Month / Day_Version’.



Installing the Latest Version

- **By USB:** Insert a USB drive containing the firmware upgrade file, downloaded from “www.samsung.com,” into the TV. Please be careful not to disconnect the power or remove the USB drive until upgrades are complete. The TV will be turned off and on automatically after completing the firmware upgrade. When software is upgraded, video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade.

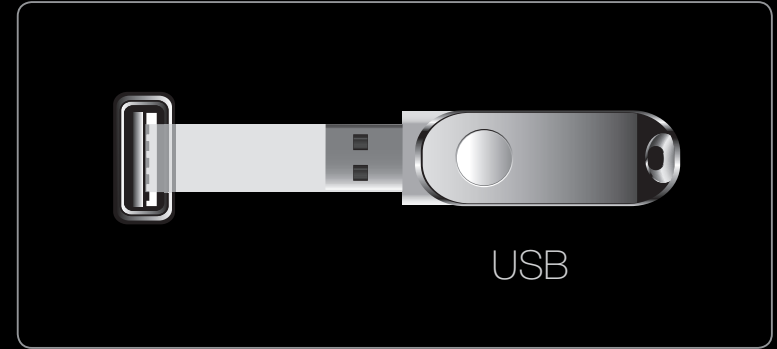

- The displayed image may differ depending on the model.

- **By Online** for PDP 550 and 570 Series: Upgrade the software using the Internet.
 - ☑ First, configure your network. For detailed procedures on using the Network Setup, refer to the **Network Settings** instructions.
 - ☑ If the internet connection doesn't operate properly, the connection may be broken. Please retry downloading. If the problem persists, download by USB and upgrade.
- **By Channel**: Upgrade the software using the broadcasting signal.
 - ☑ If the function is selected during the software transmission period, software will be automatically searched and downloaded.
 - ☑ The time required to download the software is determined by the signal status.

- **Alternative Software** for PDP 550 and 570 Series (backup): If there is an issue with the new firmware and it is affecting operation, you can change the software to the previous version.
 - ☑ If the software was changed, existing software is displayed.
- **Standby Mode Upgrade:** A manual upgrade will be automatically performed at selected time. Since the power of the unit is turned on internally, the screen may be turned on slightly for the product. This phenomenon may continue for more than 1 hour until the software upgrade is complete.

■ **Contact Samsung**

View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres and how to download products and software.

■ **Contents Home**

You can enjoy useful and various contents.

□ Using the 3D function for PDP 490 Series and above

 MENU  → Picture → 3D → ENTER 

■ 3D

This exciting new feature enables you to view 3D content. In order to fully enjoy this feature, you must purchase a pair of Samsung 3D Active Glasses (SSG-3100GB, SSG-3300GR, SSG-3300CR, SSG-3700CR) to view 3D video. Samsung 3D Active Glasses are sold separately. For more detailed purchasing information, contact the retailer where you purchased this TV.

IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D PICTURES.




Read and understand the following safety information before using the TV's 3D function.

WARNING


- Some viewers may experience discomfort while viewing 3D TV such as dizziness, nausea and headaches. If you experience any such symptom, stop viewing 3D TV, remove 3D Active Glasses and rest.
- Watching 3D images for an extended period of time may cause eye strain. If you feel eye strain, stop viewing 3D TV, remove your 3D Active Glasses and rest.

- A responsible adult should frequently check on children who are using the 3D function. If there are any reports of tired eyes, headaches, dizziness, or nausea, have the child stop viewing 3D TV and rest.
- Do not use the 3D Active Glasses for other purposes (such as general eyeglasses, sunglasses, protective goggles, etc.)
- Do not use the 3D function or 3D Active Glasses while walking or moving around. Using the 3D function or 3D Active Glasses while moving around may result in injuries due to running into objects, tripping, and / or falling.

- **3D Mode:** Select the 3D input format.
 - ☑ If you want to feel the 3D effect fully, please wear the 3D Active Glasses first, and then select 3D Mode from the list below that provides the best 3D viewing experience.
 - ☑ When watching 3D images, turn on 3D Active Glasses.

3D Mode		Operation
Off		Turns the 3D function off.
	2D → 3D	Changes a 2D image to 3D.
	Side by Side	Displays two images next to each other.
	Top & Bottom	Displays one image above another.

 Some file format may not supported the “2D → 3D.”

 “Side by Side” and “Top & Bottom” are available when the resolution is 720p, 1080i and 1080p in DTV, HDMI and USB mode or when set to PC and the PC is connected through an HDMI/DVI cable.

- **3D Perspective (-5~+5)**: Adjust overall 3D perspective of on-screen image.
- **Depth (0~10)**: Adjust overall depth.
- **L/R Change (L/R Image / R/L Image)**: Swap the left and right pictures.
- **3D → 2D (Off / On)**: Displays the image for the left eye only.

 This function is deactivated when **3D Mode** set to “2D → 3D” or **Off**.

Resolution supported for HDMI PC mode


The resolution for HDMI PC mode is optimized to 1920 x 1080 input.

An input resolution other than 1920 x 1080 may not be displayed properly in 3D display or full screen mode.




How to watch the 3D image

- ☞ Some 3D modes may not be available depending on the format of the image source.
- ☞ To watch in 3D, wear 3D Active Glasses and press the power button on the glasses.


1. Press the **MENU** button on your remote, use the ▲ or ▼ button to select **Picture**, and then press the **ENTER**  button.

2. Use the ▲ or ▼ button to select **3D**, and then press the **ENTER**  button.

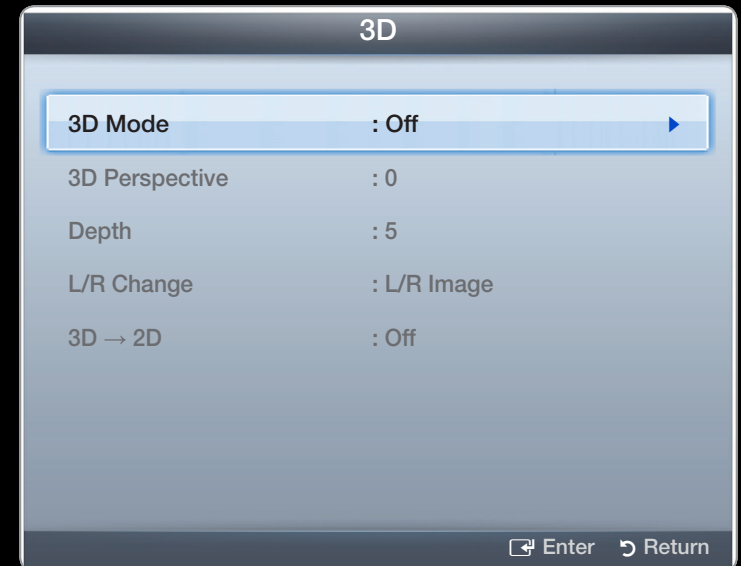

- The displayed image may differ depending on the model.

3. Use the ▲ or ▼ button to select **3D Mode**, and then press the **ENTER** ↵ button.
4. Using the ◀ or ▶ buttons on your remote control, select the **3D Mode** of the image you want to view.

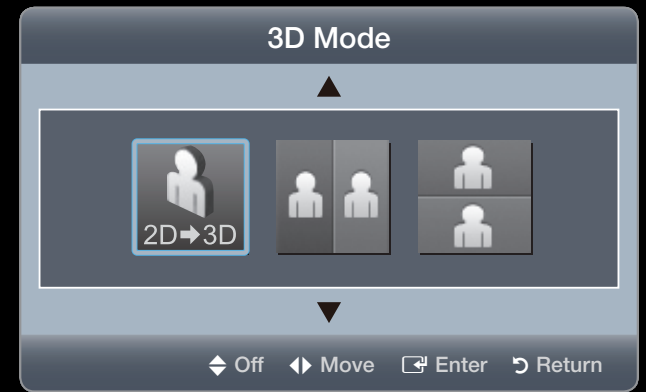

- The displayed image may differ depending on the model.

Supported formats and operating specifications for Standard HDMI 3D

☑ The 3D formats indicated below are recommended by the HDMI association and must be supported.

Source signal format	Standard HDMI 1.4 3D
1920 x 1080p @ 24 Hz x 2	1920 x 2205p @ 24 Hz
1280 x 720p @ 50 Hz x 2	1280 x 1470p @ 50 Hz

Before using 3D function...

NOTE

- **3D Mode** is set to **Off** automatically when accessing **My Downloads** functions.
- **3D Mode** is set to memorised configuration value automatically, when changing the input source.
- Some **Picture** functions are disabled in **3D** mode.
- **PIP** is not supported in **3D** mode.

- 3D Active Glasses from Samsung's previous product (IR type) or other manufacturers may not be supported.
- When the TV is initially powered on, may take some time until the 3D display is optimized.
- The 3D Active Glasses may not work properly if there is any other 3D product or electronic devices turned on near the glasses or TV. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses.



- Some files are not supported in the 2D to 3D function.
- Be sure to stay within the viewing angle and optimum TV viewing distance when watching 3D pictures.
- Otherwise, you may not be able to enjoy proper 3D effects.
- The ideal viewing distance should be three times or more the height of the screen. We recommend sitting with viewer's eyes on a level with the screen.
- When you watch 3D images under flickering lighting such as a fluorescent lamp (50Hz ~ 60Hz) or a 3 wavelength lamp, you may notice some screen flickering. If this occurs, dim or turn off the light.

□ About AllShare™ for PDP 550 Series and above

AllShare™ connects your TV and compatible Samsung mobile phones / devices through a network. You can play media contents including videos, photos and music saved on your mobile phones or the other devices (such as your PC) by controlling them on the TV via the network.

✍ For more information, visit “www.samsung.com” or contact the Samsung call centre. Mobile devices may need additional software installation. For details, refer to each device’s user’s guide.


- ✎ If your Samsung TV connects to a non-Samsung DLNA server, a compatibility issue may occur during video playback.
- ✎ By connecting your Samsung TV to a network via AllShare™, you can use Samsung's original functions as follows:
 - Playback of various video formats (DivX, XVID, MP4, 3GPP, AVI, ASF, MKV, etc.)
 - Video thumbnail feature
 - Bookmark function (to resume video playback)
 - Auto-chaptering (scene navigation)
 - Digital content management
 - Compatibility with various subtitle formats (SRT, SMI, SUB, TXT, TTXT)
 - Search with file names
 - And many others
- ✎ To use the original DLNA functions of Samsung fully, it is recommended that you use the AllShare™ software provided with your TV.

□ Setting Up AllShare™ for PDP 550 Series and above

👆 MENU  → Network → AllShare Settings → ENTER 

■ AllShare Settings

- **Media (On / Off):** Enables or disables the media function. When the media function is on, Media contents play can be controlled by a mobile phone or other devices that support DLNA DMC.

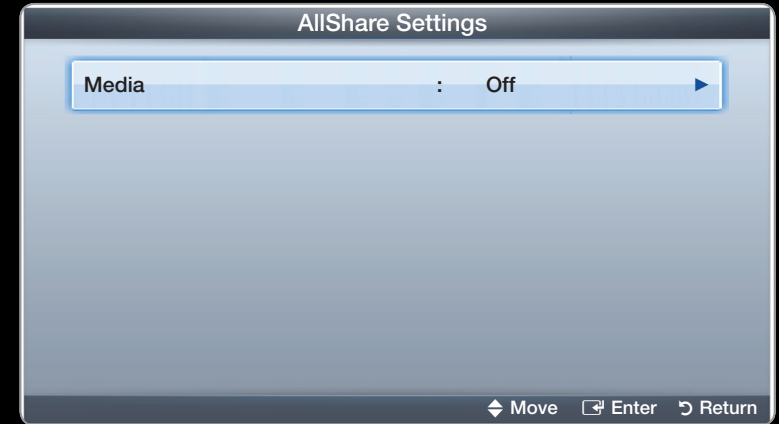

- The displayed image may differ depending on the model.

■ Media

Shows a list of mobile phones or connected devices which have been set up with this TV for using the **Media** function.

☑ The Media function is available in all devices which support DLNA DMC.


- **Allowed / Denied:** Allows/Blocks the the devices.
- **Delete:** Deletes the devices from the list.




☑ This function only deletes the name of the device from the list. If the deleted device is turned on or tries to connect to the TV, it may appear on the list again.

Using the Media Function

An alarm window appears informing the user that the media contents (videos, photos, music) sent from a mobile phone will be displayed on your TV. The contents are played automatically 3 seconds after the alarm window appears. If you press the **RETURN** or **EXIT** button when the alarm window appears, the media contents are not played.

NOTE

- If the media function executes for the first time, the warning popup window appears. Press the **ENTER**  button to select **Allow**, then you can use **Media** function on that device.

- To turn off the media contents transmission from the mobile phone, set **Media** to **Off** in the **AllShare Settings**.
- Contents may not be played on your TV depending on their resolution and format.
- The **ENTER**  and  /  buttons may not work depending on the type of media content.
- Using the mobile device, you can control the media playing. For details, refer to each mobile's user's guide.

□ Setting Up Anynet+

👆 MENU  → System → Anynet+ (HDMI-CEC) → ENTER 


■ Anynet+ (HDMI-CEC) (Off / On)

To use the Anynet+ Function, **Anynet+ (HDMI-CEC)** must be set to **On**.

📝 When the **Anynet+ (HDMI-CEC)** function is disabled, all the Anynet+ related operations are deactivated.

■ **Auto Turn Off (No / Yes)**

Setting an Anynet+ Device to turn off automatically when the TV is turned off.

 If **Auto Turn Off** is set to **Yes**, running external devices will turn off at the same time as the TV powers off.

 May not be enabled depending on the device.



What is Anynet+?

Anynet+ is a function that enables you to control all connected Samsung devices that support Anynet+ with your Samsung TV's remote. The Anynet+ system can be used only with Samsung devices that have the Anynet+ feature. To be sure your Samsung device has this feature, check if there is an Anynet+ logo on it.

NOTE

- You can only control Anynet+ devices using the TV remote control, not the buttons on the TV.
- The TV remote control may not work under certain conditions. If this occurs, reselect the Anynet+ device.
- The Anynet+ functions do not operate with other manufacturers' products.

For the method of connecting external devices , refer to the supported user manual.

 NOTE


- Connect the Optical cable between the **DIGITAL AUDIO OUT (OPTICAL)** jack on your TV and the Digital Audio Input on the Home Theatre.
- When following the connection above, the Optical jack only outputs 2 channel audio. You will only hear sound from the Home Theatre's Front, Left and Right speakers and the subwoofer. If you want to hear 5.1 channel audio, connect the **DIGITAL AUDIO OUT (OPTICAL)** jack on the DVD / Satellite Box (i.e. Anynet Device 1 or 2) directly to the Amplifier or Home Theatre, not the TV.


- You can connect only one Home Theatre.
- You can connect an Anynet+ device using the HDMI cable. Some HDMI cables may not support Anynet+ functions.
- Anynet+ works when the AV device supporting Anynet+ is in the standby or on status.
- Anynet+ supports up to 12 AV devices in total. Note that you can connect up to 3 devices of the same type.



Anynet+ Menu

The Anynet+ menu changes depending on the type and status of the Anynet+ devices connected to the TV.


Anynet+ Menu	Description
View TV	Changes Anynet+ mode to TV broadcast mode.
Device List	Shows the Anynet+ device list.
(device_name) MENU	Shows the connected device menus. E.g. If a DVD recorder is connected, the disc menu of the DVD recorder will appear.
(device_name) Tools	Shows the tools menu of the connected device. E.g. If a DVD recorder is connected, the play menu of the DVD recorder will appear.  Depending on the device, this menu may not be available.

Anynet+ Menu	Description
(device_name) Title Menu	Shows the title menu of the connected device. E.g. If a DVD recorder is connected, the title menu of the DVD recorder will appear.  Depending on the device, this menu may not be available.
Receiver	Sound is played through the receiver.




❑ Switching between Anynet+ Devices

1. Press the **TOOLS** button to select **Anynet+ (HDMI-CEC)**. And then press the **ENTER**  button to select **Device List**.

 If you cannot find a device you want, press the **A** button to refresh the list.

2. Select a device and press the **ENTER**  button. You can switch to the selected device.

 The **Device List** menu will only appear when you set **Anynet+ (HDMI-CEC)** to **On** in the **System** menu.

- Switching to the selected device may take up to 2 minutes. You cannot cancel the operation during the switching operation.
- If you have selected external input mode by pressing the **SOURCE** button, you cannot use the Anynet+ function. Make sure to switch to an Anynet+ device by using the **Device List**.



❑ Listening through a Receiver

You can listen to sound through a receiver (i.e Home Theatre) instead of the **TV Speaker**.

1. Select **Receiver** and set to **On**.

2. Press the **EXIT** button to exit.

📝 If your receiver supports audio only, it may not appear in the device list.

📝 The receiver will work when you have properly connected the optical in jack of the receiver to the **DIGITAL AUDIO OUT (OPTICAL)** jack of the TV.

✍ When the receiver (i.e Home Theatre) is set to On, you can hear sound output from the TV's Optical jack. When the TV is displaying a DTV (aerial) signal, the TV will send out 5.1 channel sound to the receiver. When the source is a digital component such as a DVD and is connected to the TV via HDMI, only 2 channel sound will be heard from the receiver.



❑ Troubleshooting for Anynet+

Problem	Possible Solution
Anynet+ does not work.	<ul style="list-style-type: none">● Check if the device is an Anynet+ device. The Anynet+ system supports Anynet+ devices only.● Only one receiver (home theatre) can be connected.● Check if the Anynet+ device power cord is properly connected.● Check the Anynet+ device's Video / Audio / HDMI cable connections.● Check whether Anynet+ (HDMI-CEC) is set to On in the Anynet+ setup menu.● Check whether the TV remote control is in TV mode.● Check whether the remote control is Anynet+ compatible.● Anynet+ doesn't work in certain situations. (Searching channels, operating My Downloads or Plug & Play (initial setup), etc.)● When connecting or removing the HDMI cable, please make sure to search devices again or turn your TV off and on again.● Check if the Anynet+ Function of Anynet+ device is set on.

Problem	Possible Solution
I want to start Anynet+.	<ul style="list-style-type: none"> • Check if the Anynet+ device is properly connected to the TV and check if the Anynet+ (HDMI-CEC) is set to On in the Anynet+ Setup menu. • Press the TOOLS button to display the Anynet+ menu and select a menu you want.
I want to exit Anynet+.	<ul style="list-style-type: none"> • Select View TV in the Anynet+ menu. • Press the SOURCE button on the TV remote control and select a non- Anynet+ device.
The message “Connecting to Anynet+ device...” appears on the screen.	<ul style="list-style-type: none"> • You cannot use the remote control when you are configuring Anynet+ or switching to a view mode. • Use the remote control when the Anynet+ setting or switching to view mode is complete.
The Anynet+ device does not play.	<ul style="list-style-type: none"> • You cannot use the play function when Plug & Play (initial setup) is in progress.

Problem	Possible Solution
The connected device is not displayed.	<ul style="list-style-type: none">• Check whether or not the device supports Anynet+ functions.• Check whether or not the HDMI cable is properly connected.• Check whether Anynet+ (HDMI-CEC) is set to On in the Anynet+ setup menu.• Search Anynet+ devices again.• You can connect an Anynet+ device using the HDMI cable only. Some HDMI cables may not support Anynet+ functions.• If connection is terminated because there has been a power interruption or the HDMI cable has been disconnected, please repeat the device scan.
The TV sound is not output through the receiver.	<ul style="list-style-type: none">• Connect the optical cable between TV and the receiver.

❑ Using the My Downloads

Enjoy photos, music and / or movie files saved on a USB Mass Storage Class (MSC)


1. Press the **CONTENT** button.
2. Press the ▲ / ▼ / ◀ / ▶ button to select desired menu (**Videos**, **Photos**, **Music**), then press the **ENTER** ↵ button.



- The displayed image may differ depending on the model.

❑ Connecting a USB Device

1. Turn on your TV.
2. Connect a USB device containing photo, music and/or movie files to the **USB** jack on the side of the TV.
3. When USB is connected to the TV, popup window appears. Then you can select **New device connected**.

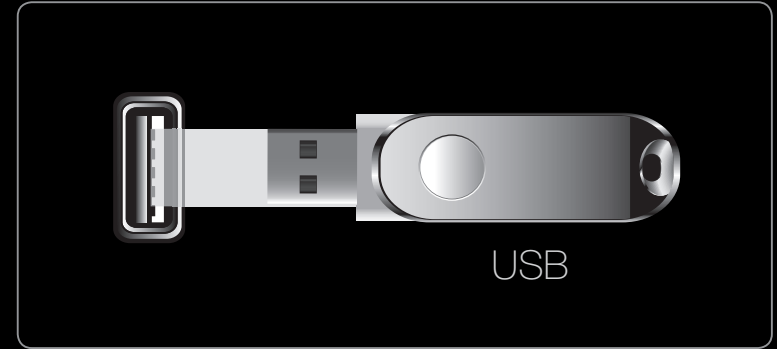

- The displayed image may differ depending on the model.

✍ It might not work properly with unlicensed multimedia files.

✍ Need-to-Know List before using **My Downloads**

- MTP (Media Transfer Protocol) is not supported.
- The file system supports FAT16, FAT32 and NTFS.
- Certain types of USB Digital camera and audio devices may not be compatible with this TV.
- **My Downloads** only supports USB Mass Storage Class (MSC) devices. **for PDP 550 and 570 Series** MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers and USB HDD (USB HUB are not supported). Devices should be connected directly to the TV's USB port.
- USB (HDD) is not supported. **for PDP 450 and 490 Series**

- Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
- Do not disconnect the USB device while it is loading.
- The higher the resolution of the image, the longer it takes to display on the screen.
- The maximum supported JPEG resolution is 15360X8640 pixels.
- For unsupported or corrupted files, the “Not Supported File Format” message is displayed.
- If the files are sorted by Basic View, up to 1000 files can be displayed in each folder.

- MP3 files with DRM that have been downloaded from a non-free site cannot be played. Digital Rights Management (DRM) is a technology that supports the creation, distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements.
- If more than 2 PTP devices are connected, you can only use one at a time.
- If more than two MSC devices are connected, some of them may not be recognized. A USB device that requires high power (more than 500mA or 5V) may not be supported.
- If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be recognized or may malfunction.

- If the TV has been no input during time set in **Auto Protection Time**, the Screensaver will run.
- The power-saving mode of some external hard disk drives may be released automatically when connected to the TV.
- If a USB extension cable is used, the USB device may not be recognized or the files on the device may not be read.
- If a USB device connected to the TV is not recognized, the list of files on the device is corrupted or a file in the list is not played, connect the USB device to the PC, format the device and check the connection.
- If a file deleted from the PC is still found when **My Downloads** is run, use the “Empty the Recycle Bin” function on the PC to permanently delete the file.

❑ Screen Display

Move to the desired file using the ◀ / ▶ / ▲ / ▼ buttons and then press the **ENTER** ◀ or ▶ (Play) button. The file is played. **My Downloads** screen may differ depending on the way to enter the screen.

Information: Displays the selected content category (Music, for example), device (USB drive, for example), folder/file name, page, and sort criteria.



File List Section: Displays files or folders sorted by criteria you can select.

Contents mode / Device name:

You can select the desired Content Category or Device.

Operation Buttons:

- **Yellow (Edit Mode):** Lets you select music by checking the files you want to play. Only available in Music.
- **◀ / ▶ (Page):** Move to next or previous page.
- **Tools:** Displays the option menu.
- **Return:** Move to the previous page or step.

■ Videos

Playing Video

1. Press the ◀ / ▶ / ▲ / ▼ button to select the desired video in the file list.
2. Press the **ENTER** ↵ button or ▶ (Play) button.
 - The selected file name is displayed on the top with its playing time.
 - If video time information is unknown, play time and progress bar are not displayed.



- The displayed image may differ depending on the model.

- During video playback, you can search using ◀ and ▶ button.
- You can use ◀◀ (REW) and ▶▶ (FF) buttons during playback.

📄 In this mode, you can enjoy movie clips contained on a Game, but you cannot play the Game itself.

- Supported Subtitle Formats

Name	File extension	Format
MPEG-4 time-based text	.ttxt	XML
SAMI	.smi	HTML
SubRip	.srt	string-based
SubViewer	.sub	string-based
Micro DVD	.sub or .txt	string-based

- Supported Video Formats

File Extension	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.avi *.mkv	AVI MKV	Divx 3.11 / 4.x / 5.1 / 6.0	1920x1080	6 ~ 30	8	MP3 / AC3 / LPCM / ADPCM / DTS Core
		XviD	1920x1080	6 ~ 30	8	
		H.264 BP / MP / HP	1920x1080	6 ~ 30	25	
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
		Motion JPEG	640x480	6 ~ 30	8	
*.asf	ASF	Divx 3.11 / 4.x / 5.1 / 6.0	1920x1080	6 ~ 30	8	MP3 / AC3 / LPCM / ADPCM / WMA
		XviD	1920x1080	6 ~ 30	8	
		H.264 BP / MP / HP	1920x1080	6 ~ 30	25	
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
		Motion JPEG	640x480	6 ~ 30	8	
*.wmv	ASF	Window Media Video v9	1920x1080	6 ~ 30	25	WMA
*.mp4	MP4	H.264 BP / MP / HP	1920x1080	6 ~ 30	25	MP3 / ADPCM / AAC
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
		XVID	1920x1080	6 ~ 30	8	

File Extension	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.3gp	3GPP	H.264 BP / MP / HP	1920x1080	6 ~ 30	25	ADPCM / AAC / HE-AAC
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
*.vro *.vob	VRO VOB	MPEG1	1920x1080	24 / 25 / 30	30	AC3 / MPEG / LPCM
		MPEG2	1920x1080	24 / 25 / 30	30	
*.mpg *.mpeg	PS	MPEG1	1920x1080	24 / 25 / 30	30	AC3 / MPEG / LPCM / AAC
		MPEG2	1920x1080	24 / 25 / 30	30	
		H.264	1920x1080	6 ~ 30	25	
*.ts *.tp *.trp	TS	MPEG2	1920x1080	24 / 25 / 30	30	AC3 / AAC / MP3 / DD+ / HE-AAC
		H.264	1920x1080	6 ~ 30	25	
		VC1	1920x1080	6 ~ 30	25	

Video Decoder

- Supports up to H.264, Level 4.1
- H.264 FMO / ASO / RS, VC1 SP / MP / AP L4 and AVCHD are not supported.
- XVID, MPEG4 SP, ASP:
 - Below 1280 x 720: 60 frame max
 - Above 1280 x 720: 30 frame max
- GMC is not supported.

Audio Decoder

- Supports up to WMA 7, 8, 9, STD
- WMA 9 PRO does not support 2 channel excess multi channel or lossless audio.
- WMA sampling rate 22050Hz mono is not supported.

Other Restrictions


NOTE

- Video content will not play, or not play correctly, if there is an error in the content or the container.
- Sound or video may not work if the contents have a standard bitrate/frame rate above the compatible Frame / sec listed in the table above.
- If the Index Table is in error, the Seek (Jump) function is not supported.
- You may experience file stuttering while playing a video through a network connection. for PDP 550 and 570 Series
- Video content can not be played, if there are many contents in one file.
- Some USB / digital camera devices may not be compatible with the player.

■ Music

Playing Music

1. Press the ◀ / ▶ / ▲ / ▼ button to select the desired Music in the file list.
2. Press the **ENTER** ↵ button or ▶ (Play) button.
 - You can use ◀◀ (REW) and ▶▶ (FF) buttons during playback.

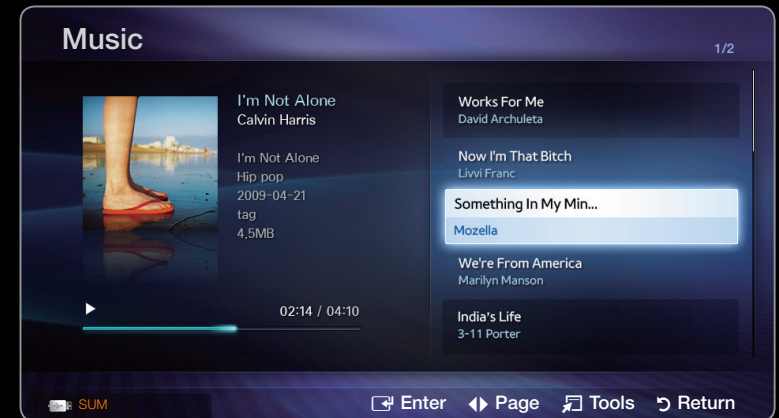


- The displayed image may differ depending on the model.

- ☞ Only displays the files with MP3 extension. Other file extensions are not displayed, even if they are saved on the same USB device.
- ☞ If the sound is abnormal when playing MP3 files, adjust the **Equalizer** in the **Sound** menu. (An over-modulated MP3 file may cause a sound problem.)



Playing selected music


1. Press the **C** (**Edit Mode**) button.
2. Select the desired music.
 - The  mark appears to the left of the selected files.
3. Press the **TOOLS** button and select **Play Selected Contents**.
 - You can select or deselect all music pressing the **Select All** / **Deselect All**.



■ Photos

Viewing a Photo (or Slide Show)

1. Press the ◀ / ▶ / ▲ / ▼ button to select the desired photo in the file list.
2. Press the **ENTER** ↵ button.
 - When a selected photo is displayed, press the **ENTER** ↵ button to start the slide show.
 - During the slide show, all files in the file list will be displayed in order.
 - When you press the ▶ (Play) button in the file list, slide show will be started immediately.

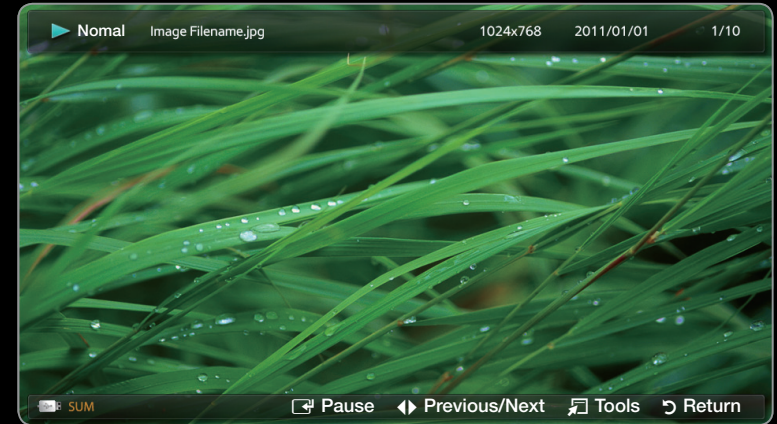

- The displayed image may differ depending on the model.

- ☑ Music files can be automatically played during the Slide Show if the **Background Music** is set to **On**.
- ☑ The **Background Music** cannot be changed until the BGM has finished loading.



❑ My Downloads - Additional Functions

Videos / Music / Photos Play Option menu

During playing a file, press the **TOOLS** button.

Category	Operation	Videos	Music	Photos
Title Search	You can move directly to another Title.	✓		
Time Search	You can search the movie using ◀ and ▶ buttons at intervals of 10 seconds.	✓		
Shuffle Mode	You can play the music randomly.		✓	
Repeat Mode	You can play movie and music files repeatedly.	✓	✓	
Picture Size	You can adjust the picture size to your preference.	✓		

Category	Operation	Videos	Music	Photos
Picture Mode	You can adjust the picture setting.	✓		✓
Sound Mode	You can adjust the sound setting.	✓	✓	✓
Subtitle Language	You can view a subtitle. You can select a specific language if the subtitle file contains multiple languages.	✓		
Subtitle Setting	You can play the video with Subtitles. This function only works if the subtitles are the same file name as the video.	✓		



Category	Operation	Videos	Music	Photos
Audio	You can enjoy a video in one of the supported languages. The function is only enabled when you play stream-type files which support multiple audio formats.	✓		
Start Slide Show / Pause Slide Show	You can start or pause a Slide Show.			✓
Slide Show Speed	You can select the slide show speed during the slide show.			✓
Background Music	You can on / off background music when watching a Slide Show.			✓
Background Music Setting	You can select background music when watching a Slide Show.			✓

Category	Operation	Videos	Music	Photos
Zoom	You can zoom into images in full screen mode.			✓
Rotate	You can rotate images in full screen mode.			✓
Information	You can see detailed information about the played file.	✓	✓	✓











❑ Teletext Feature





The index page of the Teletext service gives you information on how to use the service. For Teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

📝 You can change Teletext pages by pressing the numeric buttons on the remote control.




 (Teletext on / mix / off)	Activates the Teletext mode for the current channel. Press the button twice to overlap the Teletext mode with the current broadcasting screen. Press it one more time to exit teletext.
 (store)	Stores the Teletext pages.
 (size)	Displays the teletext on the upper half of the screen in double-size. To move the text to the lower half of the screen, press it again. For normal display, press it once again.
 (hold)	Holds the display at the current page, in the case that there are several secondary pages that follow automatically. To undo, press it again.

<p>Colour buttons (red, green, yellow, blue)</p>	<p>If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colour-coded and can be selected by pressing the coloured buttons. Press the colour corresponding to the topic of your choice. A new colour-coded page is displayed. Items can be selected in the same way. To display the previous or next page, press the corresponding coloured button.</p>
<p> (mode)</p>	<p>Selects the Teletext mode (LIST / FLOF). If pressed during LIST mode, switches the mode to List save mode. In List save mode, you can save a Teletext page into a list using the  (store) button.</p>
<p> (sub-page) (size)</p>	<p>Displays the available sub-page.</p>
<p> (page up)</p>	<p>Displays the next Teletext page.</p>

 (page down)	Displays the previous Teletext page.
 (index)	Displays the index (contents) page at any time while you are viewing Teletext.
 (reveal)	Displays the hidden text (answers to quiz games, for example). To display the normal screen, press it again.
 (cancel)	Shrinks the Teletext display to overlap with the current broadcast.



Typical Teletext page

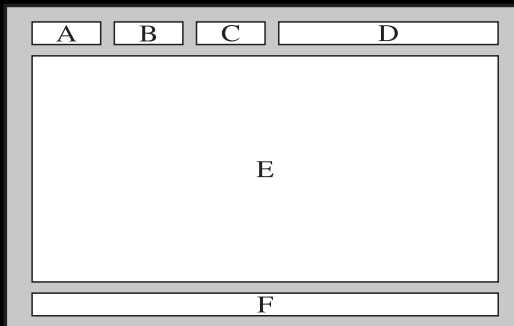

Part	Contents
A	Selected page number.
B	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
E	Text.
F	Status information. FASTEXT information.

❏ Troubleshooting

If you have any questions about the TV, first refer to this list. If none of these troubleshooting tips apply, please visit “www.samsung.com,” then click on Support, or contact the call centre listed on the back-cover of this manual.

Issues	Solutions and Explanations
Picture Quality	<ul style="list-style-type: none">● First of all, please perform the Picture Test and confirm that your TV is properly displaying test image. (go to MENU - Support - Self Diagnosis - Picture Test) If the test image is properly displayed, the poor picture may be caused by the source or signal.
The TV image does not look as good as it did in the store.	<ul style="list-style-type: none">● If you have an analogue cable / set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality.● Cable / Satellite subscribers: Try HD stations from the channel line up.● Antenna connection: Try HD stations after performing Auto programme.

Issues	Solutions and Explanations
<p>The picture is distorted: macro block error, small block, dots, pixelization</p>	<ul style="list-style-type: none"> ● Compression of video contents may cause picture distortion especially in fast moving pictures such as sports and action movies. ● Low signal level or bad quality can cause picture distortion. This is not a TV issue. ● Mobile phones used close to the TV (cca up to 1m) may cause noise in picture on analogue and digital TV.
<p>Colour is wrong or missing.</p>	<ul style="list-style-type: none"> ● If you're using a component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause colour problems or a blank screen.
<p>There is poor colour or brightness.</p>	<ul style="list-style-type: none"> ● Adjust the Picture options in the TV menu (go to Picture mode / Colour / Brightness / Sharpness) ● Adjust Energy Saving option in the TV menu (go to MENU – System – Eco Solution – Energy Saving) ● Try resetting the picture to view the default picture settings (go to MENU - Picture - Reset Picture)

Issues	Solutions and Explanations
There is a dotted line on the edge of the screen.	<ul style="list-style-type: none"> ● If the picture size is set to Screen Fit, change it to 16:9. ● Change cable / satellite box resolution.
The picture is black and white.	<ul style="list-style-type: none"> ● If you are using an AV composite input, connect the video cable (yellow) to the Green jack of component input 1 on the TV.
When changing channels, the picture freezes or is distorted or delayed.	<ul style="list-style-type: none"> ● If connected to a cable box, please try to reset it. (reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes) ● Set the output resolution of the cable box to 1080i or 720p.
Sound Quality	<p>First of all, please perform the Sound Test to confirm that your TV audio is properly operating. (go to MENU - Support - Self Diagnosis - Sound Test)</p> <p>If the audio is OK, the sound problem may be caused by the source or signal.</p>
There is no sound or the sound is too low at maximum volume.	<ul style="list-style-type: none"> ● Please check the volume of the device (Cable / Sat Box, DVD, Blu-ray etc) connected to your TV.


Issues	Solutions and Explanations
<p>The picture is good but there is no sound.</p>	<ul style="list-style-type: none">● Set the Speaker Select option to TV Speaker in the Sound menu.● If you are using an external device, make sure the audio cables are connected to the correct audio input jacks on the TV.● If you are using an external device, check the device's audio output option (ex. you may need to change your cable box's audio option to HDMI when you have a HDMI connected to your TV).● If you are using a DVI to HDMI cable, a separate audio cable is required.● If your TV has a headphone jack, make sure there is nothing plugged into it.● Reboot the connected device by reconnecting the device's power cable.
<p>The speakers are making an inappropriate noise.</p>	<ul style="list-style-type: none">● Check cable connections. Make sure a video cable is not connected to an audio input.● For antenna or Cable connections, check the signal strength. Low signal level may cause sound distortion.

Issues	Solutions and Explanations
No Picture, No Video	
<p>The TV turns off automatically.</p>	<ul style="list-style-type: none"> • Ensure the Sleep Timer is set to Off in the System menu. • If your PC is connected to the TV, check your PC power settings. • Make sure the AC power cord is plugged in securely to the wall outlet and the TV. • When watching TV from an antenna or cable connection, the TV will turn off after 10 - 15 minutes if there is no signal.
RF (Cable / Antenna) Connection	
<p>The TV is not receiving all channels.</p>	<ul style="list-style-type: none"> • Make sure the coaxial cable is connected securely. • Please try Plug & Play (Initial setup) to add available channels to the channel list. Go to MENU - System - Plug & Play (Initial setup) and wait for all available channels to be stored. • Verify the Antenna is positioned correctly.
<p>The picture is distorted: macro block error, small block, dots, pixelization.</p>	<ul style="list-style-type: none"> • Compression of video contents may cause picture distortion, especially with fast moving pictures such as sports and action movies. • A low signal can cause picture distortion. This is not a TV problem.

Issues	Solutions and Explanations
PC Connection	
A “Mode Not Supported” message appears.	<ul style="list-style-type: none"> • Set your PC’s output resolution so it matches the resolutions supported by the TV.
“PC” is always shown on the source list, even if a PC is not connected.	<ul style="list-style-type: none"> • This is normal; “PC” is always shown on the source list, regardless of whether a PC is connected.
The video is OK but there is no audio.	<ul style="list-style-type: none"> • If you are using an HDMI connection, check the audio output setting on your PC.
Network Connection for PDP 550 and 570 Series	
The wireless network connection failed.	<ul style="list-style-type: none"> • The Samsung Wireless USB dongle is required to use a wireless network. • Make sure the Network Connection is set to Wireless. • Make sure the TV is connected to a wireless IP sharer (router).

Issues	Solutions and Explanations
Others	
The picture won't display in full screen.	<ul style="list-style-type: none">● HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents.● Black bars on the top and bottom will appear during movies that have aspect ratios different from your TV.● Adjust the picture size options on your external device or TV to full screen.
Plasma TV is making humming noise.	<ul style="list-style-type: none">● Plasma TVs typically make a soft humming sound. This is normal. It's caused by the electrical charges that are used to create the images on the screen.● If the humming sound is loud, you may have set the brightness on the TV too high. Try setting the brightness lower.● You can also have loud humming if the back of your Plasma TV is too close to a wall or other hard surface. Also try rerouting your connection cables.● Improper installation of wall mount can create excessive noise.

Issues	Solutions and Explanations
Image Retention (Burn In) Issue.	<ul style="list-style-type: none"> • To minimize the possibility of screen burn, this unit is equipped with screen burn reduction technology. Pixel Shift technology enables you to set picture movement up / down (Vertical Line) and side to side (Horizontal Dot).
A “Mode Not Supported” message appears.	<ul style="list-style-type: none"> • Check the supported resolution of the TV, and adjust the external device’s output resolution accordingly. Refer to the resolution settings in the user manual.
There is a plastic smell from the TV.	<ul style="list-style-type: none"> • This smell is normal and will dissipate over time.
The TV Signal Information is unavailable in the Self Diagnosis Test menu.	<ul style="list-style-type: none"> • This function is only available with digital channels from an Antenna / RF / Coax connection.
The TV is tilted to the side.	<ul style="list-style-type: none"> • Remove the base stand from the TV and reassemble it.
The channel menu is greyed out (unavailable).	<ul style="list-style-type: none"> • The Channel menu is only available when the TV source is selected.

Issues	Solutions and Explanations
Your settings are lost after 30 minutes or every time the TV is turned off.	<ul style="list-style-type: none">● If the TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Change the settings from Store Demo mode to Home Use mode in the Plug & Play procedure. Press the SOURCE button to select TV mode, and go to MENU → System → Plug & Play → ENTER .
You have intermittent loss of audio or video.	<ul style="list-style-type: none">● Check the cable connections and reconnect them.● Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to a wall, we recommend using cables with 90 degree connectors.
You see small particles when you look closely at the edge of the frame of the TV.	<ul style="list-style-type: none">● This is part of the product's design and is not a defect.

Issues	Solutions and Explanations
<p>The message “Scramble signal” or “Weak Signal / No Signal” appears.</p>	<ul style="list-style-type: none"> ● If you are using a CAM CARD (CI / CI+), check that it is installed into the common interface slot. ● If there is still a problem, pull the CAM CARD out of the TV and insert it into the slot again.
<p>The PIP menu is not available.</p>	<ul style="list-style-type: none"> ● PIP functionality is only available when you are using a HDMI, PC or Component source.
<p>You turned the TV off 45 minutes ago, and it turned on again.</p>	<ul style="list-style-type: none"> ● It is normal. The TV operates the OTA (Over The Aerial) function itself to upgrade firmware downloaded whilst your watching TV.
<p>There are recurrent picture sound issues.</p>	<ul style="list-style-type: none"> ● Check and change the signal/source.
<p>A reaction may occur between the rubber cushion pads on the base stand and the top finish of some furniture.</p>	<ul style="list-style-type: none"> ● To prevent this, use felt pads on any surface of the TV that comes in direct contact with furniture.


- ☞ Some of above pictures and functions are available at specific models only.
- ☞ You can keep your TV as optimum condition to upgrade the latest firmware on web site (samsung.com → Support → Downloads) by USB.



❑ CONNECTIONS COMMON INTERFACE Slot

To watch paid channels, the “CI or CI+ CARD” must be inserted.

- If you don't insert the “CI or CI+ CARD”, some channels will display the message “Scrambled Signal”.
- The pairing information containing a telephone number, the “CI or CI+ CARD” ID the Host ID and other information will be displayed in about 2~3 minutes. If an error message is displayed, please contact your service provider.
- When the configuration of channel information has finished, the message “Updating Completed” is displayed, indicating the channel list is updated.

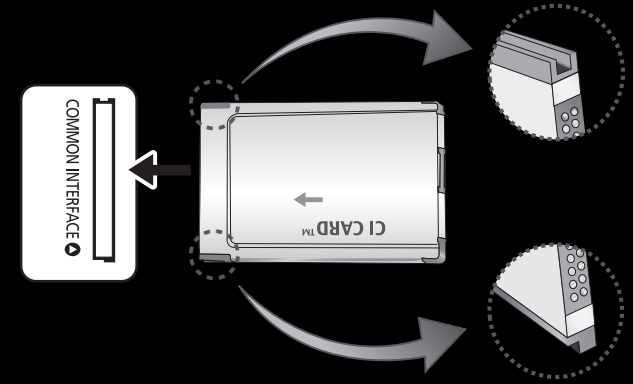

NOTE


- You must obtain a “CI or CI+ CARD” from a local cable service provider.
- When removing the “CI or CI+ CARD”, carefully pull it out with your hands since dropping the “CI or CI+ CARD” may cause damage to it.
- Insert the “CI or CI+ CARD” in the direction marked on the card.
- The location of the **COMMON INTERFACE** slot may be different depending on the model.
- “CI or CI+ CARD” is not supported in some countries and regions; check with your authorized dealer.



- If you have any problems, please contact a service provider.
- Insert the “CI or CI+ CARD” that supports the current antenna settings. The screen will be distorted or will not be seen.
- When you are watching the satellite TV, remove the “CI or CI+ CARD” of terrestrial and cable. The screen will be distorted or will not be seen.(For Satellite)



❑ Anti-theft Kensington Lock

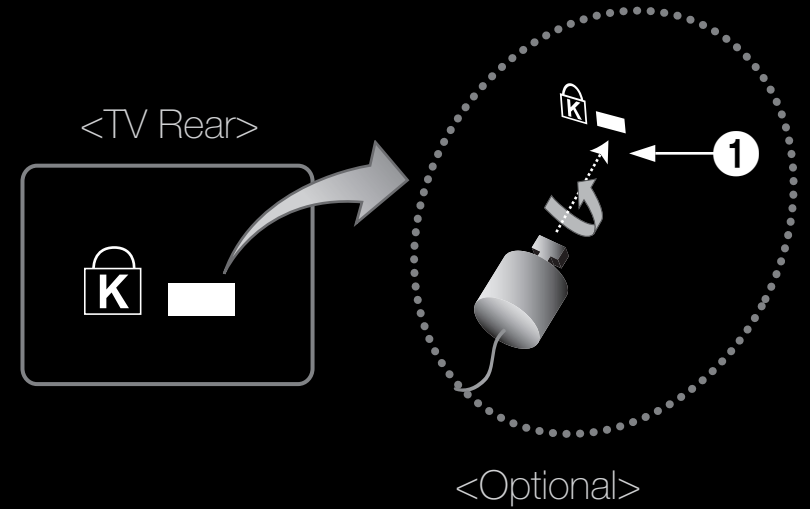
The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. The appearance and locking method may differ from the illustration depending on the manufacturer. Refer to the manual provided with the Kensington Lock for additional information on proper use.





✎ Please find a “” icon on the rear of the TV. A Kensington slot is beside the “” icon.

To lock the product, follow these steps:

1. Wrap the Kensington Lock cable around a large, stationary object such as desk or chair.
2. Slide the end of the cable with the lock attached through the looped end of the Kensington Lock cable.
3. Insert the locking device into the Kensington slot on the product **1**.
4. Lock the lock.


◀  These are general instructions. For exact instructions, see the User manual supplied with the locking device. ▶

 The locking device has to be purchased separately.

 The location of the Kensington slot may be different depending on the TV model.

□ Licence



TheaterSound, SRS and  symbol are trademarks of SRS Labs, Inc.
TheaterSound technology is incorporated under license form SRS Lab, Inc.



Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under licence under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks. & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product Includes software. © DTS, Inc. All Rights Reserved.



DivX Certified® to play DivX® video up to HD 1080p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under licence.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Covered by one or more of the following U.S. patents : 7,295,673; 7,460,668; 7,515,710; 7,519,274

Open Source Licence Notice

In the case of using open source software, Open Source Licences are available on the product menu.

Open Source Licence Notice is written only English.