 




Multimedia Projector

EB-755F **EB-725Wi**
EB-750F **EB-725W**
EB-735Fi **EB-720**
EB-735F

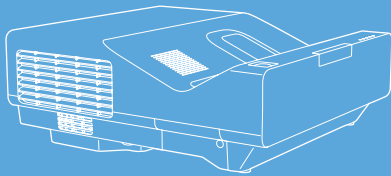

| | | | |
|----|-----------------------------|-----|-------------------------------------|
| EN | Quick Start Guide | LV | Ātrās darba uzsākšanas pamācība |
| DE | Kurzanleitung | LT | Trumpas pradžios vadovas |
| FR | Guide de démarrage rapide | EL | Οδηγός γρήγορης εκκίνησης |
| IT | Guida di avvio rapido | TR | Hızlı Başlangıç Kılavuzu |
| ES | Guía de inicio rápido | SL | Priročnik za hitri zagon |
| PT | Guia de Referência Rápida | HR | Kratke upute |
| NL | Introductiehandleiding | MK | Прирачник брз почеток |
| DA | Introduktion | SR | Uputstvo za brz početak |
| FI | Pika-aloitusopas | CA | Guia d'inici ràpid |
| NO | Hurtigveiledning | RU | Руководство по быстрой установке |
| SV | Snabbstartsguide | UK | Коротка інструкція "Початок роботи" |
| CS | Úvodní příručka | KK | Қысқа іске қосу нұсқаулығы |
| HU | Bevezetés | KO | 빠른 시작 가이드 |
| PL | Przewodnik szybkiego startu | ID | Panduan Ringkas |
| SK | Stručná príručka | AR | دليل البداية السريعة |
| BG | Ръководство за бърз старт | FA | راهنمای سریع برای شروع بکار |
| RO | Ghid de pornire rapidă | ZHS | 設定手册 |
| ET | Lühijuhend | ZHT | 設定説明書 |

  Product Box Contents

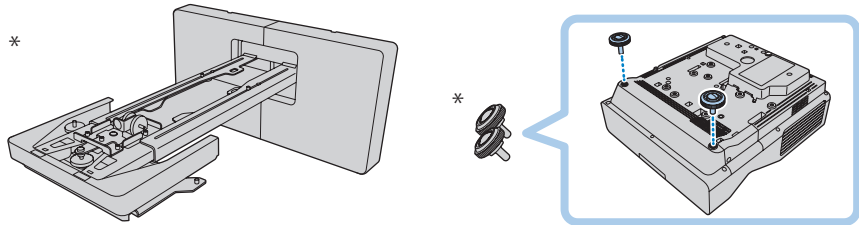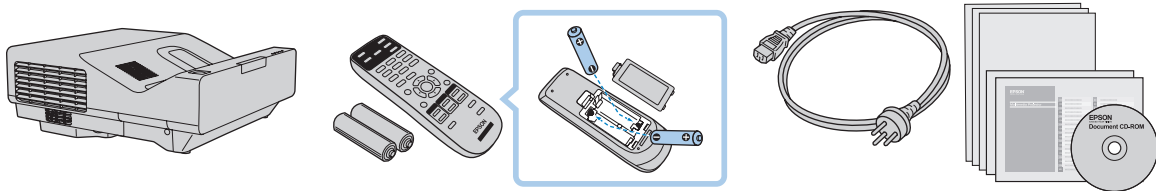


EB-735Fi/EB-735F
/EB-725Wi/EB-725W
/EB-720 only




* Bundled items vary depending on the country or the model.

1

 EB-735Fi/EB-725Wi only



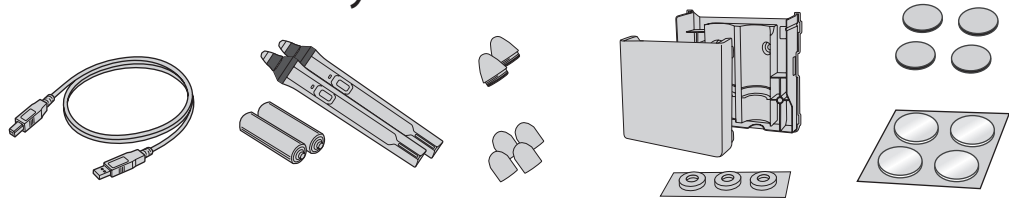


Connecting a Device



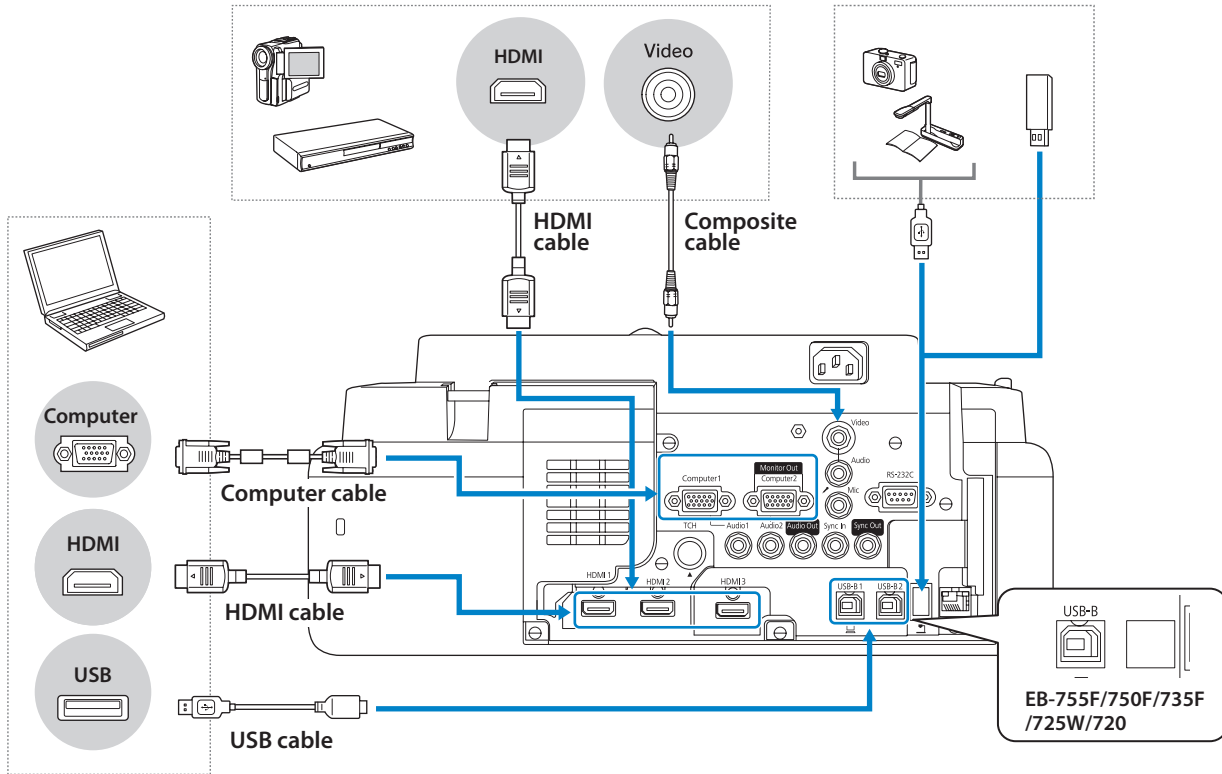 


Turning On the Projector

   3

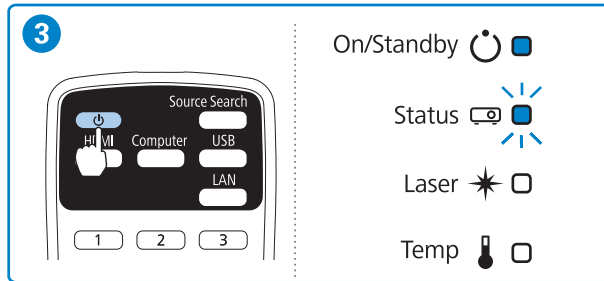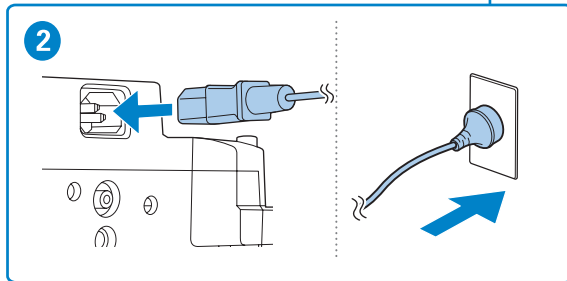
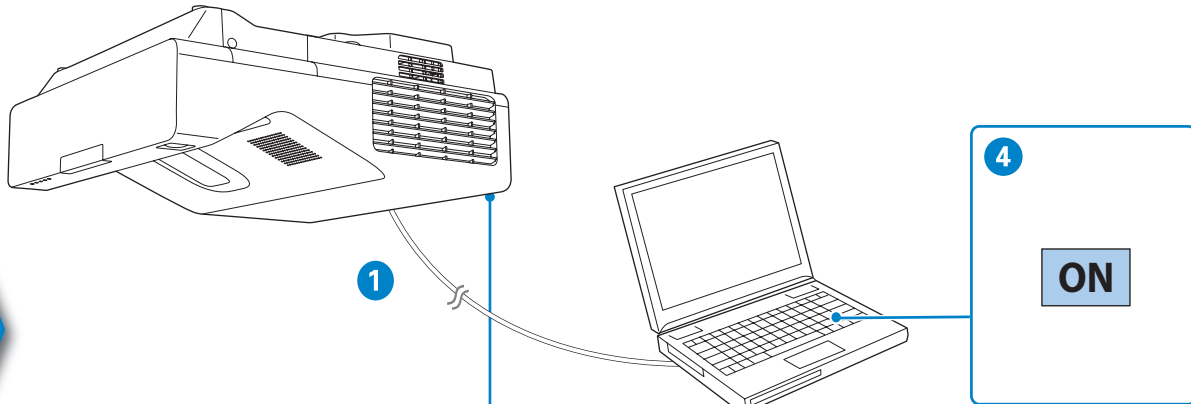


Initial Setting Wizard

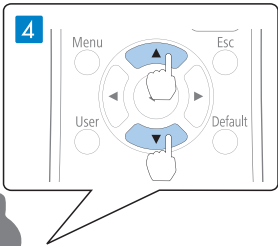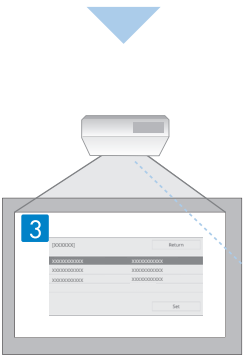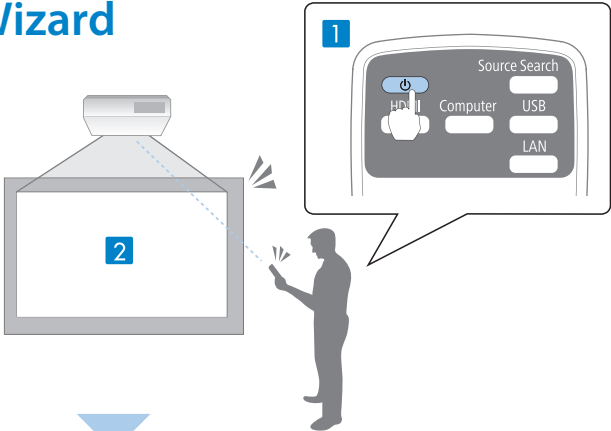   


Home Screen

 
 
5

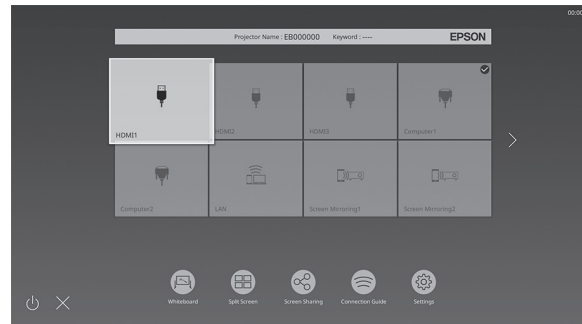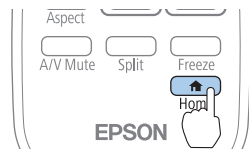

Adjusting the Image Shape

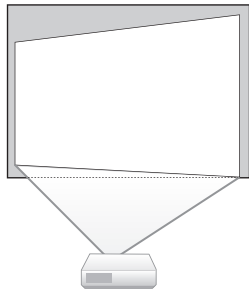 


1

  


2



 Changing the Projection Mode

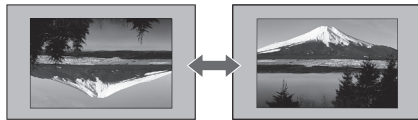


5 Sec.

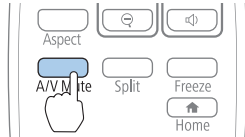 


Easy Interactive Function (EB-735Fi/EB-725Wi)

 
7

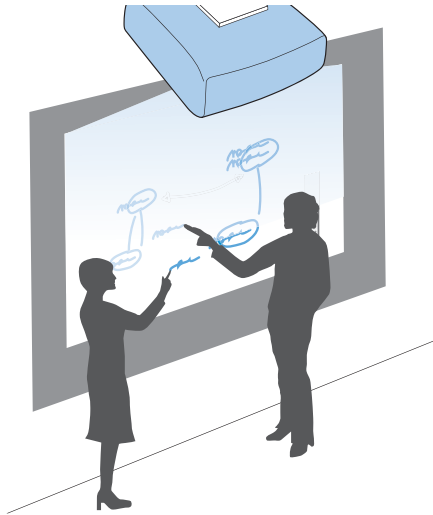




Pen Operation

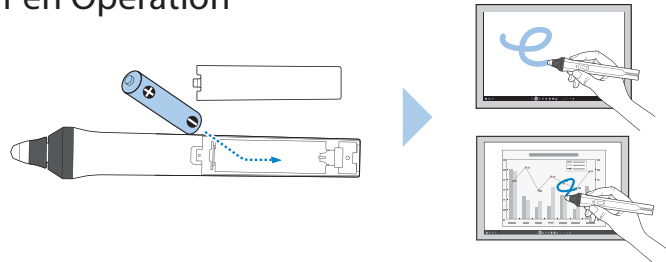 


Finger Touch Operation

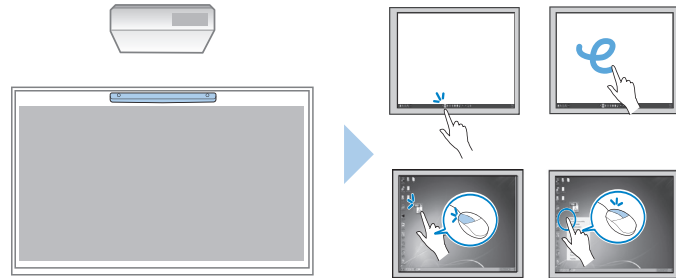 




Drawing (Whiteboard Mode)

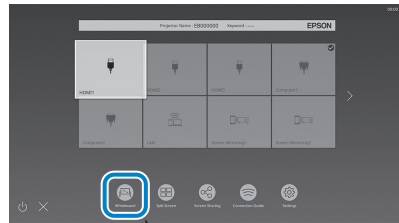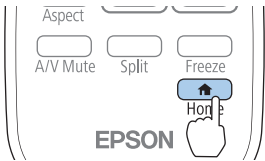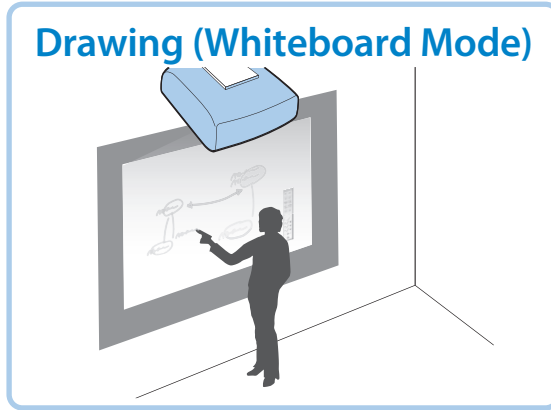   



Whiteboard

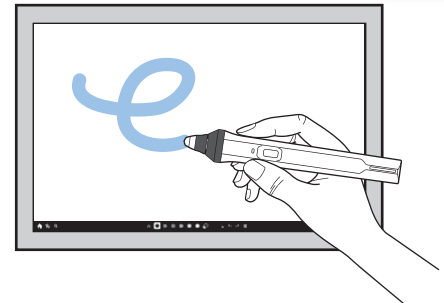 


Drawing (Annotation Mode)

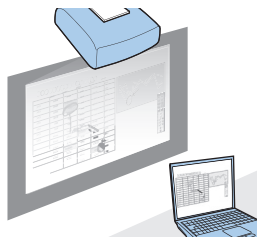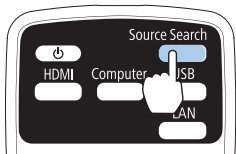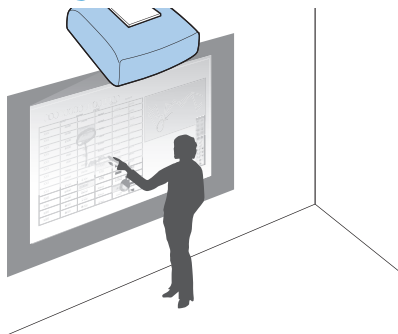   


PC Interactivity

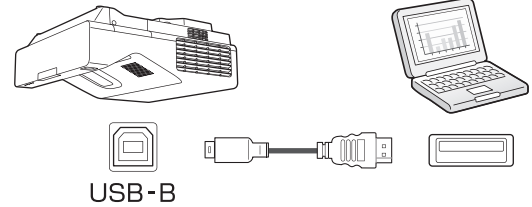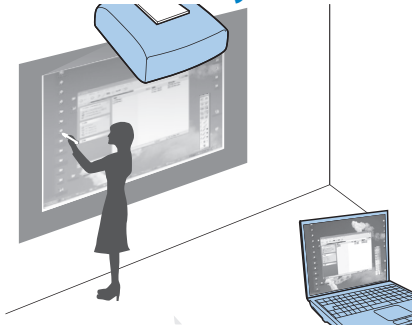  

10

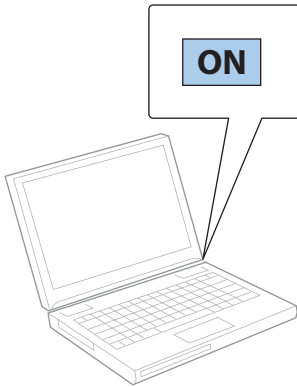 

 [Pen/Touch] > [PC Interactivity] > [Pen Tracking Mode]

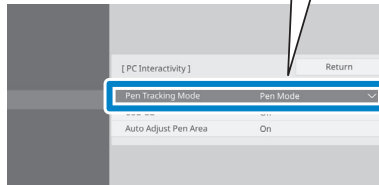

Windows/Mac: [Pen Mode]
Ubuntu: [Mouse Mode]



 
 
 
 
 
For More Information



or



epson.sn 

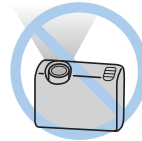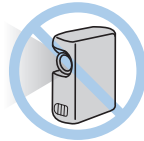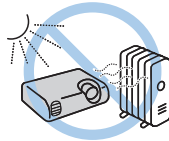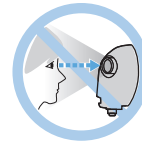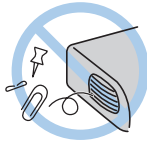

413961200