

User Manual

MODEL:PC-16B



PROKORD
V1.1

Schematic



- ① Blow nozzle
- ② Rotating handle
- ③ Washable filter
- ④ Vacuum cup
- ⑤ Brush vacuum nozzle
- ⑥ Brush blow nozzle
- ⑦ Swimming ring blow nozzle
- ⑧ Air bed blow nozzle
- ⑨ Air bed exhaust nozzle
- ⑩ Air duster head
- ⑪ Vacuum cleaner head

Parameters

Product model	PC-16B
Power	50W/70W/90W
Charge	5V=3A (Support 15W fast charging)
Battery Capacity	2500mAh*3pcs
Working time	1 st gear: About 30 minutes
	2 nd gear: About 20 minutes
	3 rd gear: About 15 minutes
Motor Speed	1 st gear: 50,000 rpm
	2 nd gear: 70,000 rpm
	3 rd gear: 90,000 rpm
Motor	BLDC motor
Material	ABS+PC
Charging time	2.5 hours

Accessories	Quantity
Air duster & vacuum cleaner	1
Type-C charging cable	1
User manual	1
Blow nozzle	1
Brush blow nozzle	1
Vacuum nozzle	1
Brush vacuum nozzle	1
Air bed blow nozzle	1
Air bed exhaust nozzle	1
Swimming ring blow nozzle	1
Washable filter	1
Vacuum cup	1
Flannel bag	1

Prokord

Box 1194, SE-131 27 Nacka Strand, Sweden

Made in China

PROKORD

Instructions & Operations

Firstly, take the PC-16B out of the box. Then, use up the battery for the first use. Finally, charge it with type-C cable.

LED Light

Pressing the LED light button to turn it on & off.

Blue Light

 
Pressing the switch button for 1.5 seconds to turn it on & off.

4 lights on, means the battery is fully charged.
1 light on, means the battery is with low power.

Green Light

0.3s flashing, means the 3rd gear wind speed.
0.7s flashing, means the 2nd gear wind speed.
1.5s flashing, means the 1st gear wind speed.
(Remark: The machine doesn't work during charging.)


How to use vacuum cleaner

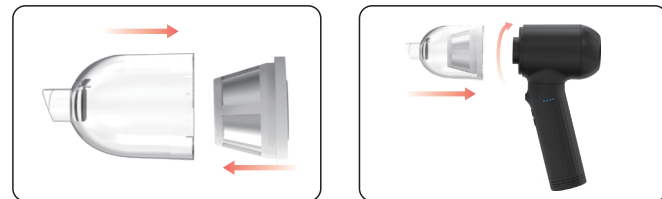


1. Install the filter into the duster suction cup.



 2. Fasten the vacuum cover and rotate clockwise until it clicks into place.

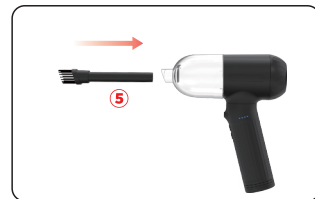

3. Attach the vacuum nozzle into the vacuum cover.

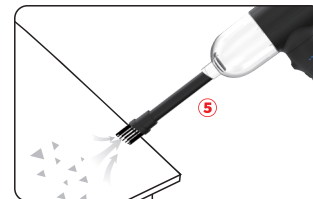 

4. Press the switch to start vacuuming.



5. Install air bed exhaust nozzle on the suction end.

 


6. The air bed exhaust nozzle could vacuum the air bed.



7. The vacuum head could vacuum the vacuum bag directly.

How to use air duster

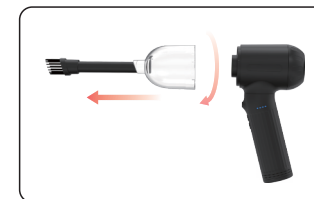

1. Rotate and remove vacuum cup.



2. Install the blow nozzle on the head of air duster.



3. Rotate 180 degrees clockwise to switch to the dust blowing.



4. Blow the dust off the keyboard.



5. The inflatable part is equipped with an inflator nozzle, which can inflate the air bed.

 


6. The inflatable part is equipped with an inflatable nozzle, which can inflate the swimming ring & yoga ball.

Clean the filter



1. Take the filter out of the vacuum cup.

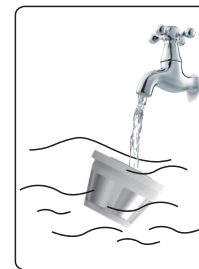

2. Clean the filter by water.



3. Dry the filter by air duster.