
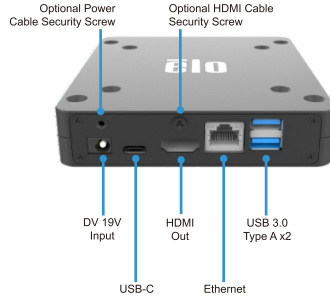


Box Contents:

1x Elo Backpack 4
1x 19v DC power brick with security screw
1x US power cable
1x EU power cable
2x Wifi antennas

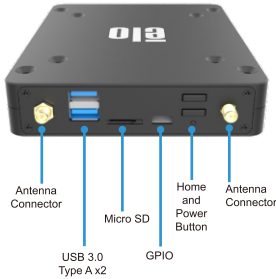

Quick Installation Guide

Elo Backpack® 4 for Linux

Elo Technical Support

Online self-help: www.elotouch.com/support

America

800-ELO-TOUCH
Tel +1 408 597 8000
EloSales.NA@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385
EloAsia@elotouch.com

Europe(EMEA)

Tel +32 (0)16 930 136
EMEA.Sales@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.


No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo, the Elo logo and Elo Backpack are either trademarks or registered trademarks of Elo Touch Solutions, Inc.

Revision A
P/N E275570

Step 1 - Optional Step for Permanent Mounting

The Elo Backpack® 4 has both a 75mm and 100mm through-hole mounting pattern. The mounting holes on the top side are countersunk for use with M4 flat-head screws. Screw length and type depends on mounting bracket thickness and what the Elo Backpack is being mounted to.

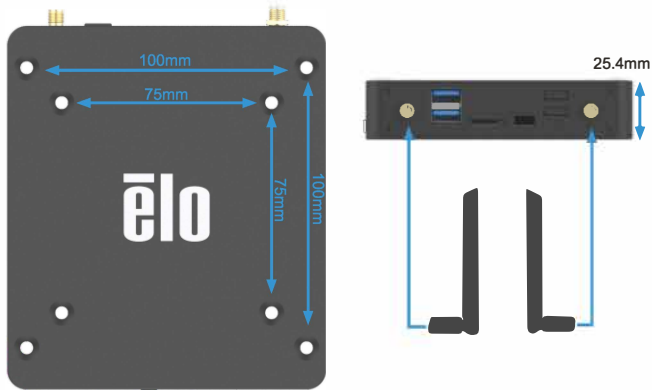

Step 2 - Connecting Device to an Elo Touch Monitor

- Connect 19V DC Power cable.
- Connect HDMI or USB-C cable between Elo touch monitor and Elo Backpack 4.
- If HDMI video is used, a USB cable must also be connected between the Elo Touch Monitor and the Elo Backpack 4 to enable touchscreen functionality.
- Connect Wifi antennas to the noted location above.
- Press the Power button to power on the Elo Backpack 4 if it does not power on automatically.