










































 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60	 Rezo 110AW	 Rezo 120AW	 Rezo 140AW	 Rezo 160AW	 Rezo 170AW	 Rezo TLZ 10	 Rezo TLZ 20
Aqfa	ePhoto Smile														
Argus	DC-3200														
	DC-3520/3640														
	DC-3810GB														
BenQ	DC C35/40/50/51/60/62														
	DC C500														
	DC C80c														
	DC E30/40/41/43/53														
	DC S40														
	DC X600														
	DC-2410														
	DC-341c														
Canon	Digital IXUS 430/500														
	Digital IXUS 55														
	Digital IXUS 750														
	Digital IXUS i/i5														
	Digital IXUS II/30/40														
	Digital IXUS Wireless														
	ELPH S100/110														
	Elura 60/65/70														
	Elura 80														
	Elura 85														
	Elura 90														
	EOS 20D w/kit lens														
	EOS 300 Digital Rebel w/kit lens														
	EOS 5D w/compact zoom														
	EOS Rebel XT/350D with kit lens														
	IXUS 30														
	IXUS 4c														
	IXUS 5c														
	IXUS 7c														
	IXUS V														
	MV800														
	MV830i														
	MV850i														
	MX330i														
	Optura 50														
	Optura 60														
	PowerShot A300/A310														
	PowerShot A400														
	PowerShot A41i														
	PowerShot A510/520														
	PowerShot A610														
	PowerShot A62i														
	PowerShot A80/A85														
	PowerShot A95														
	PowerShot G6														
	PowerShot Pro 1														
	PowerShot S1 IS														
	PowerShot S10/S20														
	PowerShot S110														
	PowerShot S2 IS														
	PowerShot S-200/230/400/410/500														
	PowerShot S30/40/45/50/55														
	PowerShot S-300														
	PowerShot S-33c														
	PowerShot S60														
	PowerShot S7c														
	PowerShot S8c														
	PowerShot SD10/SD20/IXY Digital														
	PowerShot SD-100/110/200/300														
	PowerShot SD30														
	PowerShot SD400														
	PowerShot SD430 Wireless														
	PowerShot SD450														
	PowerShot SD50i														
	PowerShot SD55i														
	ZR100														
	ZR20c														
Casio	EXILIM EX-M1 and S1 thru S3														
	EXILIM EX-M20U/S20U														
	EXILIM EX-P600/P700														
	EXILIM EX-S100														
	EXILIM EX-S50i														
	Exilim EX-S600														
	EXILIM EX-Z10														
	EXILIM EX-Z110														
	EXILIM EX-Z12i														
	EXILIM EX-Z3/Z4/Z4U														
	EXILIM EX-Z30/Z40/Z40LE														















*Availability may vary depending on country and location

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60	 Rezo 110AW	 Rezo 120AW	 Rezo 140AW	 Rezo 160AW	 Rezo 170AW	 Rezo TLZ 10	 Rezo TLZ 20
Concord	EXILIM EX-Z50/Z55		•												
	EXILIM EX-Z500		•												
	EXILIM EX-Z57/Z750		•												
	EXILIM Pro EX-P505							•							
	Eye-Q 4360Z			•											
	QV-R3/R4			•											
	QV-R40/41/51/61/62			•											
Contax	1500														
	3047														
	4042				•	•									
	ES 500Z			•											
	Eye-Q 3040				•										
	Eye-Q 3103				•										
	Eye-Q 3341z			•											
	Eye-Q 3346Z			•											
	Eye-Q 4060z				•										
	Eye-Q 4360Z			•											
	Eye-Q 5062AF			•											
	Eye-Q 5345Z				•										
Eye-Q 642				•											
Eye-Q Duo 2000				•											
Creative DXG	i4R		•												
	SL300RT	•													
	TVS				•										
Epson	DC-Cam 3000/3200z				•										
	202V														
	305V														
	308														
	321			•	•										
	503			•	•										
	528			•	•										
568				•											
Fuji	L500V				•										
	Photo PC L-410				•										
Hitachi	A-205				•										
	FinePix 2650							•							
	FinePix 2800/3800							•							
	FinePix 30i			•											
	FinePix 40i/50i			•											
	FinePix 4700			•											
	FinePix 4800/6800			•											
	FinePix 4900/6900z			•											
	FinePix A330/340				•										
	FinePix A345/A350			•											
	FinePix E-500/E510/E550							•							
	FinePix E900							•							
	FinePix F10 Zoom			•											
	FinePix F11 Zoor			•											
	FinePix F401/410			•	•										
	FinePix F402		•	•	•										
	FinePix F42i		•	•	•										
	FinePix F440/F450		•	•	•										
	FinePix F455		•	•	•										
	FinePix F46i		•	•	•										
	FinePix F601/610		•	•	•										
	FinePix F700/F710/F810			•		•									
	FinePix M603			•											
	FinePix S304/S3000/S3100/S3500								•		•				
	FinePix S5000/S5100/S5500									•	•				
	FinePix S5200									•	•				
	FinePix S560i									•	•				
	FinePix S602/S7000/S20 Pro									•	•				
	FinePix S9000									•	•				
	FinePix S950i									•	•				
FinePix Z1 Zoom									•	•					
FinePix Z2		•	•												
Q1 Digital					•										
HP	DZ-MV380														
	DZ-MV550/MV580														
	DZ-MV730A														
	DZ-MV780A														
	Photosmart 318xi/320					•									
Photosmart 435					•										
Photosmart 620/720					•										
Photosmart 635					•										
Photosmart 735/735xi					•										
Photosmart 850/850xi					•										
Photosmart 935/935xi					•										
Photosmart 945					•										
















*Availability may vary depending on country and location
















		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60	 Rezo 110AW	 Rezo 120AW	 Rezo 140AW	 Rezo 160AW	 Rezo 170AW	 Rezo TLZ 10	 Rezo TLZ 20
JVC	Photosmart C612/612xi														
	Photosmart C618														
	Photosmart E317														
	Photosmart M22/M23														
	Photosmart M307/M407														
	Photosmart M415														
	Photosmart M417/M517														
	Photosmart R507														
	Photosmart R707/R717														
	Photosmart R817														
Photosmart R818															
JVC	Everio GZ-MC100														
	Everio GZ-MC20														
	Everio GZ-MC50														
	GC-QX3U														
	GR-D240														
	GR-D275														
	GR-D295														
	GR-DF430US														
	GR-DVL 160/DVL367														
	GR-X5														
Kodak	CX4200/4230/6200/6230														
	CX6330														
	CX7220/7300/7310/7330/7430/7525/7530														
	DC3800														
	DX4330/4530														
	DX6330/6340/6440														
	DX6490/7590/Z7590														
	DX7630/7440														
	Easyshare C300														
	Easyshare C31														
	Easyshare C33														
	Easyshare C34														
	Easyshare C36														
	Easyshare LS743/753														
	Easyshare One														
	Easyshare P850														
	Easyshare P88														
	EasyShare Picture Viewer														
	EasyShare V530														
	EasyShare V555														
Easyshare Z700															
Easyshare Z731															
Easyshare Z741															
Easyshare Z761															
EZ-200															
LS443															
LS755															
V550															
Konica/Minolta	DG 5W														
	DiMAGE A1/A2														
	DiMAGE A200														
	DiMAGE E50														
	DiMAGE E500														
	DiMAGE G400														
	DiMAGE G500/600														
	DiMAGE G530														
	DiMAGE X/Xg/Xi/Xt														
	DiMAGE X1														
	DiMAGE X20/21/31														
	DiMAGE X50														
	DiMAGE X6														
	DiMAGE Z1 Thru Z3 and Z10														
	DiMAGE Z20														
	DiMAGE Z5/Z20														
	DiMAGE Z6														
	Dynax/Maxxum 5d w/short zoom														
	Maxxum/Dynax 7D w/short zoom														
	Kyocera	EZ Digital 1.3													
Finecam L3V/L4V/L30															
Finecam S3/S3L/S3X/S4/S5/S5R															
M400R															
Leica	SL300R/400R														
	Digitlux 2														
Leica	D-Lux														
	D-Lux 2														
	DiMAGE 2300/2330 Zoom														
Minolta	DiMAGE 5/7/7i HI														
	DiMAGE E-223														
	DiMAGE E323														

*Availability may vary depending on country and location
















LowePro															
		Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 40	Rezo 50	Rezo 60	Rezo 110AW	Rezo 120AW	Rezo 140AW	Rezo 160AW	Rezo 170AW	Rezo TLZ 10	Rezo TLZ 20
Mustek	DIMAGE F-100/200/300				•			•							
	DIMAGE S-304/404/414							•							
	EX Wide 1500							•							
	EX Zoom 1500 Ver. 2							•							
	RD3000							•							
Nikon	DV-3032							•							
	DV-400C							•							
	DV-450C							•							
	G-Smart 350							•							
	GSmart D35							•							
	MDC-5000			•				•							
	MDC-6500z							•							
	Coolpix 2100/3100/2200/3200														
	Coolpix 3700			•											
	Coolpix 4000/4300														
	Coolpix 4100														
	Coolpix 4200/5200			•											
	Coolpix 4500								•						
	Coolpix 4800/5600								•						
	Coolpix 4800								•						
Coolpix 5000/5400								•							
Coolpix 5700/8700								•						•	
Coolpix 5900/7900			•					•							
Coolpix 7600								•							
Coolpix 840C								•							
Coolpix 880								•							
Coolpix 8900								•							
Coolpix L1								•							
Coolpix P1			•												
Coolpix P1			•												
Coolpix P1			•												
Coolpix S1			•												
Coolpix S1			•												
Coolpix S1			•												
Coolpix S1			•												
Coolpix S1			•												
Coolpix SQ				•											
D200 w/compact zoom															
D50 w/kit zoom										•					
D70 w/kit zoom											•				
Olympus	μ digital 600			•											
	AZ-1/Ferrari Digital		•												
	AZ2			•											
	C-150/C-160/D-395					•									
	C-180					•									
	C2000 thru 5050 Zoom								•						
	C-300/D-550 Zoom								•						
	C-350/C-460z/460 Del Sol								•						
	C-360/C-450/C-460/D-395/D-575/D-580Z								•						
	C-40 Zoom/D-40 Zoom								•						
	C-470/D-590								•						
	C-50/C-60								•						
	C-5000 Zoom								•						
	C-5060/C-7070 Wide Zoom								•						
	C-5500/C-55 Sport Zoom								•						
	C-7000/C-70								•						
	C-745/750/760/765 UZ								•						
	C-765/770 Ultra Zoom								•						
	C-8080 Wide Zoom								•						
	C-990 Zoom								•						
	D-100/150/230 Brio								•						
	D-370L/D-380								•						
	D-390								•						
	D-425								•						
	D-435								•						
	D-510 Zoom								•						
	D-520								•						
	D-535z/C-370z								•						
	D-540/560/565								•						
	D-545								•						
	D-595								•						
	D-630								•						
	E-1			•											
	E-10/E-20P/E-20N														
	EVOLT E-500 w/compact zoom														
EVOLT/E-300 w/14-45mm zoom															
FE-100															
FE-11C															
FE-12C															
IR-300															
IR-500															
M:Robe 500			•												

*Availability may vary depending on country and location

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60	 Rezo 110AW	 Rezo 120AW	 Rezo 140AW	 Rezo 160AW	 Rezo 170AW	 Rezo TLZ 10	 Rezo TLZ 20
Panasonic	SP-310				.										
	SP-35C				.										
	SP-500UZ							.							
	SP-700			.											
	Stylus 300/400/410/Mju digital			.											
	Stylus 500/Mju Digital 500			.											
	Stylus 600			.											
	Stylus 800/Mju Digital 800			.	.										
	Stylus Verve/Verve S/µ-Mini/Mju Mini Digital		.												
	DMC-F1S/F1K				.										
	DMC-F7			.											
	DMC-FX1/FX1BS/FX5/FX5BS		.	.											
	DMC-FX2/FX2B/FX7/FX7B		.	.											
	DMC-FX8			.											
	DMC-FX1			.											
	DMC-FZ1/FZ2			.						.					
	DMC-FZ10/FZ10BB/FZ10BS			.					.	.					
	DMC-FZ15/FZ20/FZ20BB			
	DMC-FZ3/FZ3B/FZ4/FZ5			
	DMC-FZ30			
	DMC-LC1/LC1B			
	DMC-LC20			
DMC-LC33/43				
DMC-LC40				
DMC-LC5				
DMC-LC50/50B/70/70B/80/80B				
DMC-LC80				
DMC-LZ1/LZ2				
Lumix DMC-LS1				
Lumix DMC-LX				
NV-GS1/GS4/GS5				
NV-GS11B/15B				
NV-GS22B/33B/55B				
NV-GS50				
NV-GX7				
PalmCam PV-DC2090				
PV-GS150				
PV-GS19				
PV-GS250				
PV-GS31				
PV-GS3i				
PV-GS5i				
SV-AS10				
SV-AV100				
SV-AV25			
SV-AV5i				
VDR-M53				
VDR-M7i				
Pentax	*ist D w/kit zoom														.
	*ist DS w/kit zoom														.
	*st DS 2 w/kit zoom										.				.
	Optio 30			.											.
	Optio 33L/33LF			.		.									.
	Optio 33WR/43WR			.		.									.
	Optio 450/550/555			.		.									.
	Optio 50		.												.
	Optio 50L		.												.
	Optio 60		.												.
	Optio 750Z		.					.							.
	Optio MX/MX4		.						.						.
	Optio S/S4/S4i/S5i
	Optio S30	
	Optio S4C	
	Optio S4E	
	Optio S5C	
	Optio S5E	
	Optio S5n	
	Optio S5z	
	Optio S6	
	Optio S60	
Optio SV		
Optio WP		
Optio Wpi		
Optio X		
Polaroid	2300Z							.							.
	PDC-700							.							.
	PhotoMAX 320				.			.							.
	PhotoMAX Fun 640 SE				.			.							.
	PhotoMAX PDC 700				.			.							.
X530				.			.							.	

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60	 Rezo 110AW	 Rezo 120AW	 Rezo 140AW	 Rezo 160AW	 Rezo 170AW	 Rezo TLZ 10	 Rezo TLZ 20	
Praktica	DC 44															
	DC Slim 5		•													
	DCZ 5.3				•											
	G 2.0			•												
RCA	CDS4100							•								
	CDS6300							•								
Ricoh	Caplio 300G							•								
	Caplio 400G Wide							•								
	Caplio G3/G4				•											
	Caplio GX/GX-8						•									
	Caplio R1v			•												
	Caplio R2			•												
	Caplio R:			•												
	Caplio RR30				•											
	Caplio RR530			•												
	Caplio RX					•										
Rollei	GR Digital				•											
	d-24/d-30/d-530 Flex									•						
	d33/d41							•								
	d7 com							•								
	dp3210							•								
	dp8300			•												
	dr 5			•												
	Prego da6			•												
	Prego dp4200		•	•												
	Prego dp5300/6300			•												
	Prego dr5100			•												
	Samsung	Digimax 101/201							•							
		Digimax 200				•										
		Digimax 202				•										
Digimax 240/420					•											
Digimax 301					•											
Digimax 330					•											
Digimax 340					•											
Digimax 3500/4500					•											
Digimax 35MP3					•											
Digimax 370/430					•											
Digimax 530					•											
Digimax 800k				•												
Digimax A4/A5/A6				•												
Digimax A40				•												
Digimax A400				•												
Digimax A402				•												
Digimax A50				•												
Digimax A502				•												
Digimax A7				•												
Digimax i5			•													
Digimax L50			•													
Digimax L55W			•													
Digimax Pro 815																
Digimax U-CA 3																
Digimax U-CA 401			•													
Digimax U-CA 501/505			•													
Digimax U-CA5					•											
Digimax V5/V6/V50/V70					•											
Digimax V600/V700					•											
SCD6550 DuoCam								•	•							
SDC80						•										
VP-D10																
VP-D101/D103																
VP-D130																
VP-D230/D270i									•							
VP-D323/D325																
VPD5000i																
VP-D6040i/D6050i																
VP-D80i																
VP-D97																
VP-W90/VPL700/VPL900																
Sanyo	VPC-C1E Xacti					•										
	VPC-J2 Xacti				•											
	DSC-S5 Xacti				•											
	VPC DSC-J1				•											
	VPC-AZ3/VPC-MZ3				•											
	VPC-J4 Xacti				•											
	VPC-SX500				•											
	VPC-X360				•											
	VPC-Z400				•											
	Xacti DSC-E6		•													
Sharp	Xacti DSC-S6			•												
	VE-CG30U/40U							•								

*Availability may vary depending on country and location

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60	 Rezo 110AW	 Rezo 120AW	 Rezo 140AW	 Rezo 160AW	 Rezo 170AW	 Rezo TLZ 10	 Rezo TLZ 20
Sipix	V LZ900H														
Sony	SC 2300/3300														
	CCD-TRV138														
	DCR-DVD203E														
	DCR-DVD403														
	DCR-DVD92E														
	DCR-HC14E														
	DCR-HC21														
	DCR-HC42														
	DCR-HC90														
	DCR-IP1														
	DCR-PC1000E														
	DCR-PC120														
	DCR-PC55														
	DCR-PC8														
	DCR-TRV280														
	DCR-TRV48														
	DSC-F828														
	DSC-F88														
	DSC-H1														
	DSC-L1														
	DSC-M1														
	DSC-M1														
	DSC-N1														
	DSC-N1														
	DSC-P100/P120														
	DSC-P150/P20														
	DSC-P41/P43														
	DSC-P73/93														
	DSC-R1														
	DSC-S40														
	DSC-S6														
	DSC-S6														
	DSC-S8														
	DSC-S9														
	DSC-T1														
	DSC-T1														
	DSC-T33														
	DSC-T5														
	DSC-Ti														
	DSC-Ti														
	DSC-U40														
	DSC-V3														
	DSC-W15														
	DSC-W17														
	DSC-W5/W7														
	HDR-HC1														
	MVC-CD350														
	MVC-CD50														
	MVC-FD200														
	SDC-S90														
Thomson	VMD-160/170														
	VMD-270														
Toshiba	PDR-3340														
	PDR-M700														
	PDR-T30														
UMAX	AstraCam 1800														
	Astrapix 610														
	Astrapix A680														
	Powercam Z430														
Vivitar	DVR-210														
	V3315														
	V3345/3355														
	V3625														
	V365C														
	V3695														
	V3705/3715														
	V3740														
	V375C														
	V3755														
	V3825														
	V3826														
	Vivcam 25														
	Vivcam 4000														
	Vivcam 434E														
	Vivcam 10														
	Vivcam 3780														
	Vivcam 400C														
	Vivcam 5385														
	Vivcam V2775														
	Vivcam V320C														
	Vivcam V350C														