


# ESPRIMO P7XX / P9XX

---

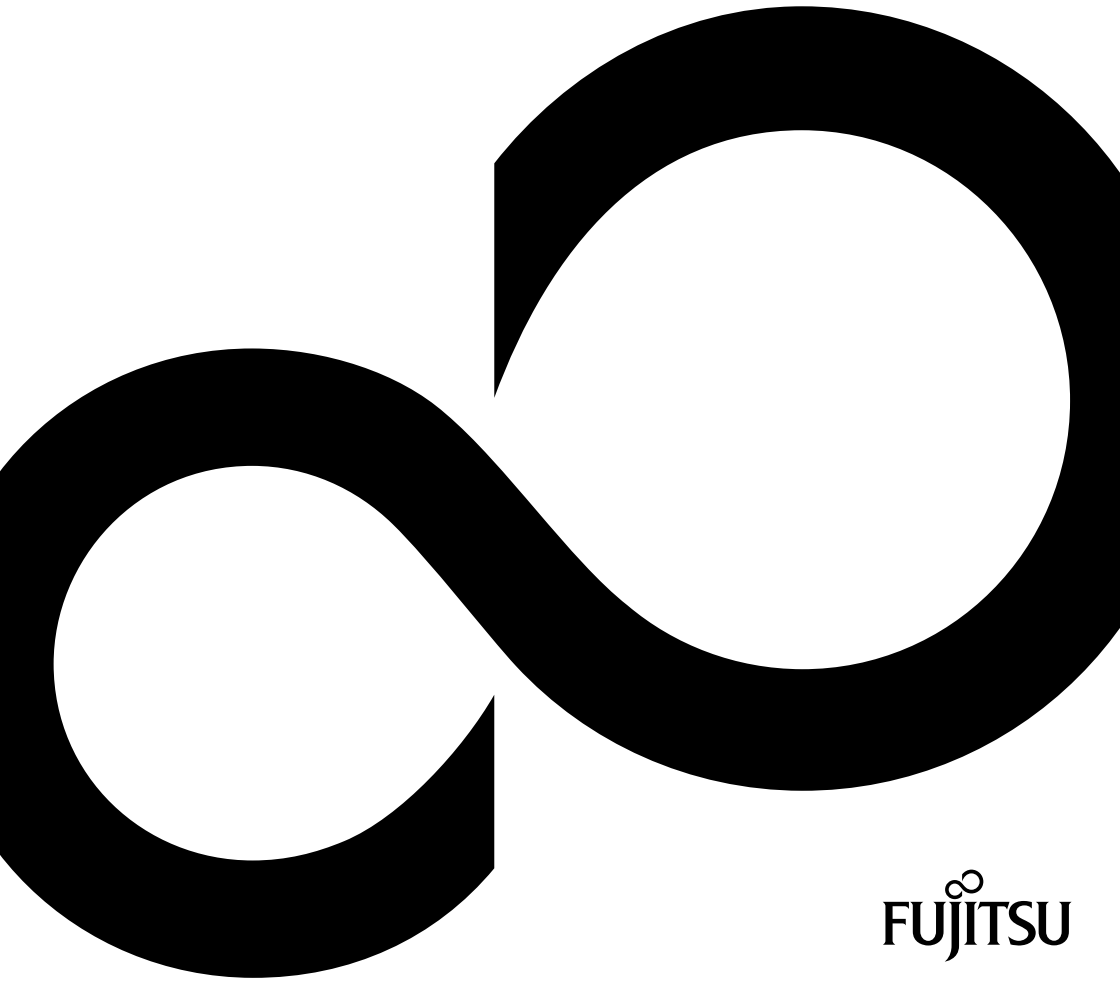

# Congratulations, you have decided to buy an innovative Fujitsu product.

The latest information about our products, useful tips, updates etc. is available on our website: ["http://ts.fujitsu.com"](http://ts.fujitsu.com)

For automatic driver updates, go to: ["http://support.ts.fujitsu.com/com/support/index.html"](http://support.ts.fujitsu.com/com/support/index.html)

Should you have any technical questions, please contact:

- our Hotline/Service Desk (see the Service Desk list or visit: ["http://ts.fujitsu.com/support/serviceDesk.html"](http://ts.fujitsu.com/support/serviceDesk.html))
- Your sales partner
- Your sales office

We hope you really enjoy using your new Fujitsu system.



**Copyright**

Fujitsu Technology Solutions 12/10

**Published by**

Fujitsu Technology Solutions GmbH  
Mies-van-der-Rohe-Straße 8  
80807 Munich, Germany

**Contact**

<http://ts.fujitsu.com/support>

All rights reserved, including intellectual property rights. Technical data subject to modifications and delivery subject to availability. Any liability that the data and illustrations are complete, actual or correct is excluded. Designations may be trademarks and/or copyrights of the respective manufacturer, the use of which by third parties for their own purposes may infringe the rights of such owner. You will find more information at "[http://ts.fujitsu.com/terms\\_of\\_use.html](http://ts.fujitsu.com/terms_of_use.html)"

Order No. Fujitsu Technology Solutions GmbH: A26361-K1015-Z320-1-7619, edition 1

# **ESPRIMO P7XX / P9XX**

## **Operating Manual**

|                                     |           |
|-------------------------------------|-----------|
| <b>Your ESPRIMO</b>                 | <b>5</b>  |
| <b>Ports and operating elements</b> | <b>7</b>  |
| <b>Important notes</b>              | <b>10</b> |
| <b>Getting started</b>              | <b>13</b> |
| <b>Operation</b>                    | <b>22</b> |
| <b>Troubleshooting and tips</b>     | <b>30</b> |
| <b>System expansions</b>            | <b>35</b> |
| <b>Technical data</b>               | <b>57</b> |
| <b>Index</b>                        | <b>58</b> |

ESPRIMO is a registered trademark of Fujitsu Technology Solutions GmbH.

Windows 7, Windows Vista and Windows XP are registered trademarks of Microsoft Corporation.

PS/2 is a registered trademark of International Business Machines, Inc.

Pentium is a registered trademark of Intel Corporation, USA.

Kensington and MicroSaver are registered trademarks of ACCO World Corporation.

All other trademarks referenced are trademarks or registered trademarks of their respective owners, whose protected rights are acknowledged.

Copyright © Fujitsu Technology Solutions GmbH 2010

All rights reserved, including rights of translation, reproduction by printing, copying or similar methods, either in part or in whole.

Noncompliance is subject to compensation for damages.

All rights reserved, including rights created by patent grant or registration of a utility model or design.

Subject to availability and technical modifications.

# Contents

|   |           |
|---|-----------|
| <b>Your ESPRIMO</b> .....   | <b>5</b>  |
| Notational conventions .....  | 6         |
| <b>Ports and operating elements</b> .....   | <b>7</b>  |
| Front .....   | 7         |
| Rear .....  | 8         |
| <b>Important notes</b> .....  | <b>10</b> |
| Safety information .....  | 10        |
| Transporting the device .....   | 10        |
| Cleaning the device .....   | 11        |
| Energy saving, disposal and recycling .....   | 11        |
| CE marking .....  | 11        |
| FCC Compliance Statement .....  | 12        |
| FCC Class B Compliance Statement .....  | 12        |
| <b>Getting started</b> .....  | <b>13</b> |
| Unpacking and checking the delivery .....   | 13        |
| Steps for initial setup .....   | 13        |
| Setting up the device .....   | 14        |
| Connecting the machine to the mains .....   | 14        |
| Connecting external devices .....   | 15        |
| Cable connecting .....  | 15        |
| Disconnecting cables .....  | 15        |
| Ports on the device .....   | 16        |
| Connecting a monitor .....  | 17        |
| Connecting the mouse .....  | 18        |
| Connecting the keyboard .....   | 18        |
| Connecting external devices to the parallel (optional) or serial port .....         | 18        |
| Connecting external devices to the USB ports .....                                  | 19        |
| Switching on for the first time: installing the software .....                      | 19        |
| Switching on monitor and device .....   | 20        |
| Installing the software .....   | 21        |
| <b>Operation</b> .....  | <b>22</b> |
| Switch the device on .....  | 22        |
| Switching on a device when the lithium battery is discharged (0-Watt devices) ..... | 22        |
| Switching off the device .....  | 23        |
| Indicators on the device .....  | 24        |
| Keyboard .....  | 25        |
| Important keys and keyboard shortcuts .....   | 25        |
| Settings in BIOS Setup .....  | 26        |
| Property and data protection .....  | 26        |
| Anti-theft protection and lead-sealing .....  | 27        |
| Mechanical casing lock (optional) .....   | 28        |
| BIOS setup security functions .....   | 29        |
| Access authorisation via SmartCard .....  | 29        |
| Operating the SmartCard reader (optional) .....                                     | 29        |
| <b>Troubleshooting and tips</b> .....   | <b>30</b> |
| Help if problems occur .....  | 30        |
| Troubleshooting .....   | 30        |

|   |           |
|---|-----------|
| Power indicator remains off after you have switched on your device  | 30        |
| The device cannot be switched off with the ON/OFF switch  | 31        |
| The device cannot be switched on with the ON/OFF switch (0-Watt devices)                                    | 31        |
| Monitor remains blank   | 31        |
| No mouse pointer displayed on the screen  | 33        |
| Time and/or date is not correct   | 33        |
| Error messages on the screen  | 33        |
| Installing new software   | 33        |
| Restoring the hard disk contents  | 34        |
| Tips  | 34        |
| <b>System expansions</b>  | <b>35</b> |
| Information about boards  | 36        |
| Opening the casing  | 37        |
| Closing the casing  | 38        |
| Overview of the drive bays and drives in your device  | 38        |
| Installing and removing the accessible 5 <sup>1</sup> / <sub>4</sub> inch drive                             | 39        |
| Fitting the drive cover for the 5 <sup>1</sup> / <sub>4</sub> inch drive                                    | 39        |
| Installing an accessible drive  | 40        |
| Removing an accessible drive  | 41        |
| Installing/removing the SmartCard reader and/or WLAN module (optional, 3 <sup>1</sup> / <sub>2</sub> -Zoll) | 42        |
| Removing the module holder  | 42        |
| Screwing the WLAN module onto the module holder   | 43        |
| Screwing the SmartCard reader onto the module holder  | 43        |
| Installing the module holder with SmartCard reader and/or WLAN module                                       | 44        |
| Removing the module holder with SmartCard reader and/or WLAN module   | 45        |
| Removing the SmartCard reader from the module holder  | 46        |
| Removing the WLAN module from the module holder   | 46        |
| Removing and installing the memory card reader (optional, 3 <sup>1</sup> / <sub>2</sub> inch, MultiCard)    | 46        |
| Installing the memory card reader   | 47        |
| Removing the memory card reader   | 47        |
| Installing and removing the hard disk drive   | 48        |
| Installing a hard disk drive  | 49        |
| Removing the hard disk drive  | 50        |
| Installing and removing a board   | 51        |
| Installing a board  | 51        |
| Removing a board  | 53        |
| Installing and removing heat sinks  | 54        |
| Removing the heat sink  | 54        |
| Installing the heat sink  | 55        |
| Mainboard expansions  | 55        |
| Upgrading main memory   | 55        |
| Replacing the processor   | 55        |
| Replacing the lithium battery   | 55        |
| <b>Technical data</b>   | <b>57</b> |
| <b>Index</b>  | <b>58</b> |

# Your ESPRIMO

... is available with various configuration levels which differ in terms of hardware and software equipment. You can install additional drives (for example a DVD drive) and other boards.

This manual tells you how to start using your device and how to operate it in daily use. This manual applies for all configuration levels. Depending on the chosen configuration level, some of the hardware components described may not be available on your PC. Please also read the notes about your operating system.

Depending on the configuration selected, the operating system is preinstalled on your hard disk (e.g. Windows 7).

Further information on this device is provided:







- in the poster "Getting Started"
- in the "Safety" manual
- in the "Warranty" manual
- in the operating manual for the monitor
- in the manual for the mainboard
- in your operating system documentation
- in the information files (e.g. \*.PDF, \*.HTML, \*.DOC, \*.CHM, \*.TXT, \*.HLP)



Some of the manuals listed can be found in electronic form on the "Drivers & Utilities" DVD.

You can access and view the required information using the *Acrobat Reader* program, which is also included on the DVD. You can of course also print out a copy of the manual if you prefer.


## Notational conventions

|  |   |
|--|---|
|  | Pay particular attention to text marked with this symbol. Failure to observe these warnings could pose a risk to health, damage the device or lead to loss of data. The warranty will be invalidated if the device becomes defective through failure to observe these warnings.   |
|  | Indicates important information for the proper use of the device.   |
|  | Indicates an activity that must be performed  |
|  | Indicates a result  |
| <b>This font</b>   | indicates data entered using the keyboard in a program dialogue or at the command line, e.g. your password ( <b>Name123</b> ) or a command used to start a program ( <b>start.exe</b> )   |
| This font  | indicates information that is displayed on the screen by a program, e.g.:<br>Installation is complete.  |
| <i>This font</i>   | indicates <ul style="list-style-type: none"> <li>terms and texts used in a software interface, e.g.: Click on <i>Save</i></li> <li>names of programs or files, e.g. <i>Windows</i> or <i>setup.exe</i>.</li> </ul>  |
| "This font"  | indicates <ul style="list-style-type: none"> <li>cross-references to another section, e.g. "Safety information"</li> <li>cross-references to an external source, e.g. a web address: For more information, go to <a href="http://ts.fujitsu.com">"http://ts.fujitsu.com"</a></li> <li>Names of CDs, DVDs and titles or designations for other materials, e.g.: "CD/DVD Drivers &amp; Utilities" or "Safety/Regulations" manual</li> </ul> |
|  | indicates a key on the keyboard, e.g:    |
| <b>This font</b>   | indicates terms and texts that are emphasised or highlighted, e.g.: <b>Do not switch off the device</b>   |

# Ports and operating elements

This chapter presents the individual hardware components of your device. This will provide you with an overview of the ports and operating elements on the device. Please familiarise yourself with these components before starting to work with your device.

## Front

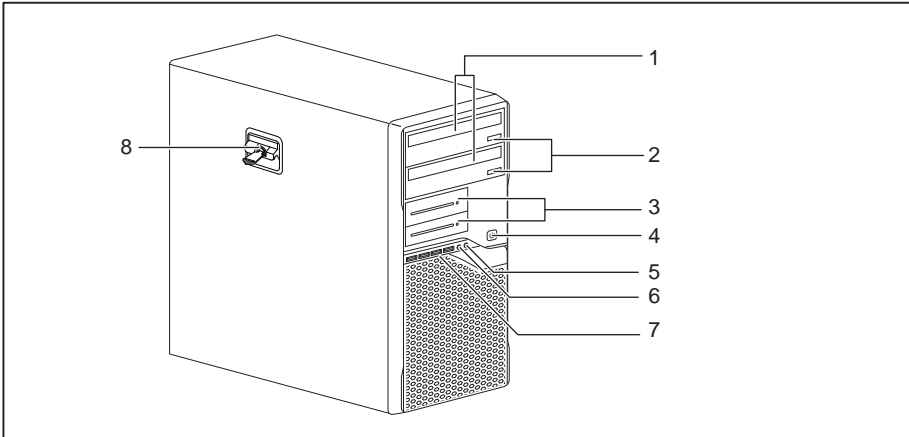


- |  |                                     |
|--|-------------------------------------|
| 1 = Module bay for 5 <sup>1</sup> / <sub>4</sub> inch drives | 5 = Headphone port                  |
| 2 = Insert/eject button (CD/DVD) (optional)                  | 6 = Microphone jack                 |
| 3 = Module bay for 3 <sup>1</sup> / <sub>2</sub> inch drives | 7 = USB ports                       |
| 4 = ON/OFF switch  | 8 = Latch with optional casing lock |

## Rear

The power supply of your device depends on the selected configuration level:

- Device with alternating voltage socket, monitor socket and emergency on button
- Device with alternating voltage socket and main power switch
- Device with alternating voltage socket and monitor socket

### Device with alternating voltage socket, monitor socket and emergency on button

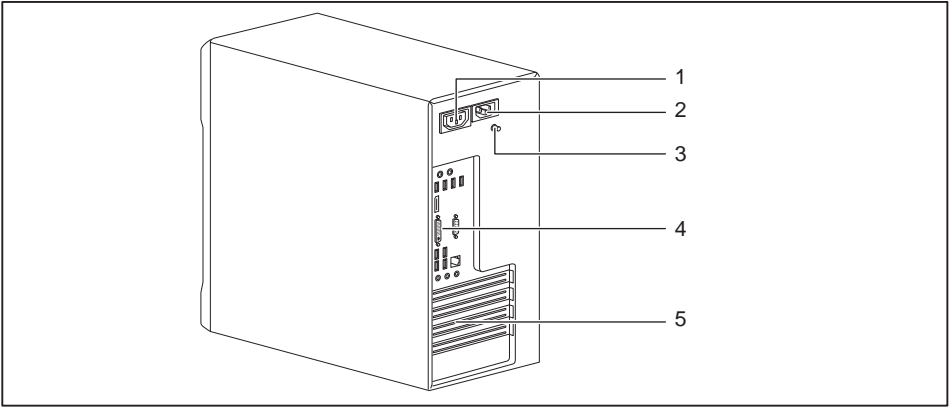

1 = Monitor socket (AC OUT)


2 = Alternating voltage socket (AC IN)

3 = Emergency on button

4 = Ports for external devices  
(device-dependent)


5 = Slot covers

**Device with alternating voltage socket and main power switch**

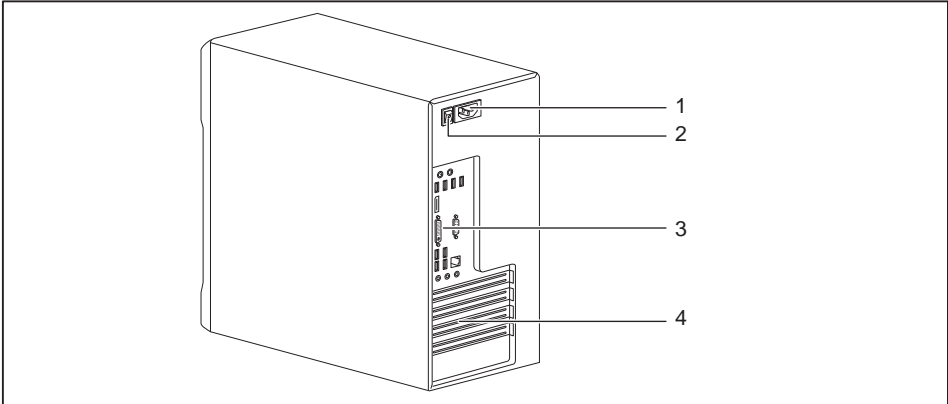

- 1 = Alternating voltage socket (AC IN)
- 2 = Main switch
- 3 = Ports for external devices (device-dependent)
- 4 = Slot covers

**Device with alternating voltage socket and monitor socket**

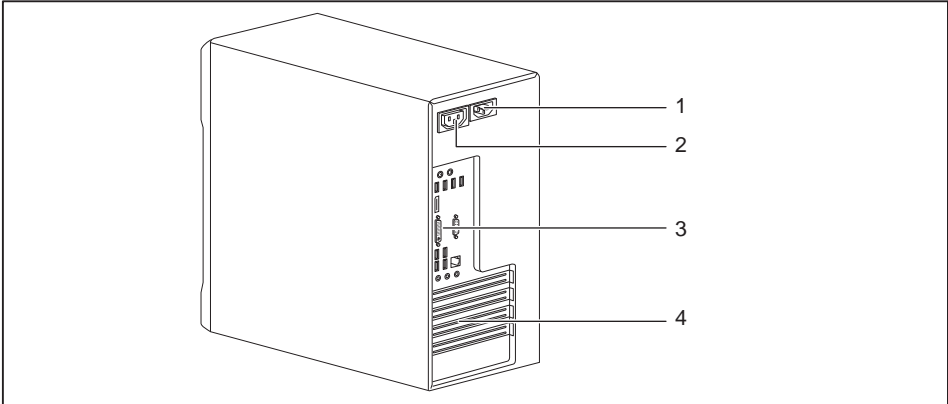

- 1 = Alternating voltage socket (AC IN)
- 2 = Monitor socket (AC OUT)
- 3 = Ports for external devices (device-dependent)
- 4 = Slot covers

# Important notes

In this chapter you will find information regarding safety which it is essential to take note of when working with your device.

## Safety information



Please note the information provided in the "Safety/regulations" manual and in the following safety notes.

When installing and operating the device, please observe the notes on environmental conditions in Chapter ["Technical data", Page 57](#) as well as the instructions in Chapter ["Getting started", Page 13](#).

When setting up the device, make sure there is clearance all around it so that the casing receives enough ventilation. In order to avoid overheating, do not cover the ventilation areas of the monitor or the device.

You must only operate the device if the rated voltage used by the device is set to the local mains voltage.

The main switch (if present) and the ON/OFF switch do not disconnect the device from the mains voltage. To completely disconnect from the mains voltage, remove the power plug from the power socket.

Replace the lithium battery on the mainboard in accordance with the instructions in ["Replacing the lithium battery", Page 55](#).

Caution, components in the system can get very hot.

The activities described in these instructions must always be performed with the greatest care.

Repairs to the device must only be performed by qualified technicians. Incorrect repairs could put the user at great risk or cause serious damage to the equipment (electric shock, risk of fire).

## Transporting the device



Transport all parts separately in their original packaging or in a packaging which protects them from knocks and jolts, to the new site.

Do not unpack them until all transportation manoeuvres are completed.

If the device is brought from a cold environment into the room where it will be used, condensation may occur. Before operating the device, wait until it is absolutely dry and has reached approximately the same temperature as the installation site.

## Cleaning the device



Turn off all power and equipment switches and disconnect the power plug from the mains outlet.

Do not clean any interior parts yourself, leave this job to a service technician.

Do not use any cleaning agents that contain abrasives or may corrode plastic (alcohol, thinner or acetone).

Never clean the device with water! Water entering into the device could present a serious risk to users (e.g. electric shock).

Ensure that no liquid enters the system.

The surface can be cleaned with a dry cloth. If particularly dirty, use a cloth that has been moistened in mild domestic detergent and then carefully wrung out.

Use disinfectant wipes to clean the keyboard and the mouse.

## Energy saving, disposal and recycling

Further information can be found on the "Drivers & Utilities" DVD.

## CE marking



The shipped version of this device complies with the requirements of EEC directives 2004/108/EC "Electromagnetic compatibility" and 2006/95/EC "Low voltage directive".



### CE marking for devices with radio component

This equipment complies with the requirements of Directive 1999/5/EC of the European Parliament and Commission from 9 March, 1999 governing Radio and Telecommunications Equipment and mutual recognition of conformity.

This equipment can be used in the following countries:

|                |               |           |            |
|----------------|---------------|-----------|------------|
| Belgium        | Bulgaria      | Denmark   | Germany    |
| Estonia        | Finland       | France    | Greece     |
| UK             | Ireland       | Iceland   | Italy      |
| Latvia         | Liechtenstein | Lithuania | Luxembourg |
| Malta          | Netherlands   | Norway    | Austria    |
| Poland         | Portugal      | Rumania   | Sweden     |
| Switzerland    | Slovakia      | Slovenia  | Spain      |
| Czech Republic | Hungary       | Cyprus    |            |

Contact the corresponding government office in the respective country for current information on possible operating restrictions. If your country is not included in the list, then please contact the corresponding supervisory authority as to whether the use of this product is permitted in your country.

## FCC Compliance Statement

If the device complies with the FCC regulations, the FCC sign can be found on the type rating plate.

## FCC Class B Compliance Statement

The following statement applies to the products covered in this manual, unless otherwise specified herein. The statement for other products will appear in the accompanying documentation.

### NOTE:

This equipment has been tested and found to comply with the limits for a "Class B" digital device, pursuant to Part 15 of the FCC rules and meets all requirements of the Canadian Interference-Causing Equipment Standard ICES-003 for digital apparatus. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in strict accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Fujitsu Technology Solutions GmbH is not responsible for any radio or television interference caused by unauthorized modifications of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by Fujitsu Technology Solutions GmbH. The correction of interferences caused by such unauthorized modification, substitution or attachment will be the responsibility of the user.

The use of shielded I/O cables is required when connecting this equipment to any and all optional peripheral or host devices. Failure to do so may violate FCC and ICES rules.

# Getting started



Please observe the safety information in the ["Important notes", Page 10](#) chapter.

## Unpacking and checking the delivery

It is recommended not to throw away the original packaging material! It may be required for reshipment at some later date.

- ▶ Unpack all the individual parts.
- ▶ Check the contents of the package for any visible damage caused during transport.
- ▶ Check whether the delivery conforms to the details in the delivery note.
- ▶ Should you discover that the delivery does not correspond to the delivery note, notify your local sales outlet immediately.

## Steps for initial setup

Only a few steps are necessary to put your new device into operation for the first time:

- Select a location for device and set up device
- Connecting external devices
- Check the voltage at the mains outlet and connect the device to an electrical outlet
- Switch the device on

You will learn more about the individual steps in the following sections.

### External devices



If you have received other external devices in addition to your own device (e.g. a printer), do not connect these until after the initial installation. The following sections describe how to connect these external devices.

### Drives and boards



If you have received drives or boards with your device, please do not install them until after first-time setup. How to install drives and boards is described in the ["System expansions", Page 35](#) chapter.

## Setting up the device



When installing your device, please read the recommendations and safety notes in the "Safety/regulations" manual.

We recommend that you place your device on a surface which is not slippery. In view of the many different finishes and varnishes used on furniture, it is possible that the rubber feet will mark the surface they stand on.

Depending on the location of your device, troublesome vibrations and noises may occur. To prevent this, a distance of at least 10 mm should be maintained from other devices on casing sides without ventilation surfaces.


In order to avoid overheating, do not cover the ventilation areas of the monitor or the device.

A minimum distance of 200 mm from the device must be observed for ventilation areas.

Do not stack several devices on top of each other.

Do not expose the device to extreme ambient conditions (see ["Technical data", Page 57](#), section "Ambient conditions"). Protect the device against dust, humidity and heat.

## Connecting the machine to the mains

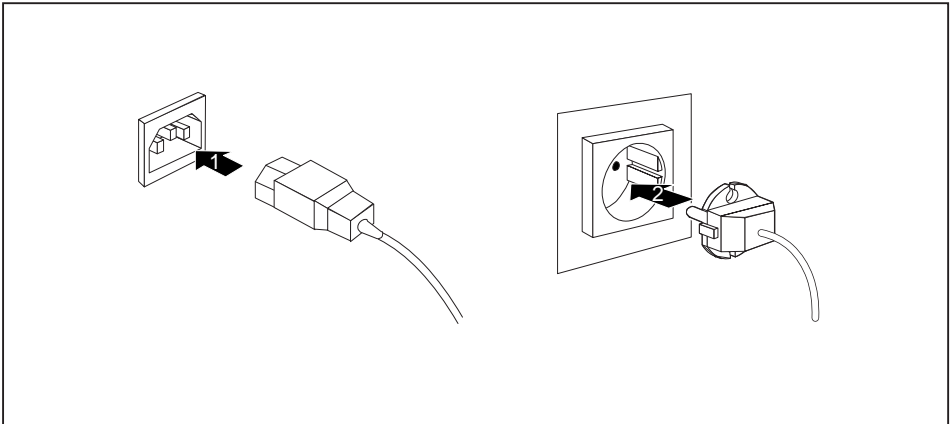

- ▶ Connect the mains cable to the machine (1).
- ▶ Plug the mains plug into a three-pin socket (2).

## Connecting external devices



Read the documentation on the external device before connecting it.

With the exception of USB devices, always remove all power plugs before connecting external devices!

Do not connect or disconnect cables during a thunderstorm.

Always take hold of the actual plug when disconnecting a cable. Never pull the cable!

Connect and disconnect the cables in the order described below.

### Cable connecting

- ▶ Switch off all affected devices.
- ▶ Remove power plugs from the mains outlets for all devices.
- ▶ Plug all cables into the device and peripherals. Please make sure that you always observe the safety notes provided in ["Important notes", Page 10](#).
- ▶ Plug all data communication cables into the sockets provided for the data / telecommunication networks.
- ▶ Plug all power cables into the grounded mains outlets.



USB devices are hot-pluggable. This means you can connect and disconnect USB cables while your device is switched on.

 













Additional information can be found in ["Connecting external devices to the USB ports", Page 19](#) and in the documentation for the USB devices.

### Disconnecting cables

- ▶ Switch off all affected devices.
- ▶ Remove power plugs from the mains outlets for all devices.
- ▶ Unplug all data communication cables from the utility sockets.
- ▶ Unplug all cables from the device and peripherals.

## Ports on the device

The ports are located on the front and back of the device. The ports available on your device depend on the configuration level you have selected. The standard ports are marked with the symbols shown below (or similar). Detailed information on the location of the ports is provided in the manual for the mainboard.


|  |   |   |   |
|--|---|---|---|
|  | PS/2 keyboard port, purple  |  | Parallel port/printer (optional)                                  |
|  | Serial port 1, turquoise  |  | Serial port 2, turquoise  |
|  | VGA monitor connection, blue  |  | Microphone port, pink (back of device) or black (front of device) |
|  | Headphones, light green (back of device) or black (front of device) |  | Audio input (Line in), light blue                                 |
|  | Audio output (Line out), light green                                |  | PS/2 mouse port, green  |
|  | USB - Universal Serial Bus, black                                   |  | LAN port  |
|  | DVI-I monitor port  |  | DisplayPort   |



Some of the connected devices require special software (e.g. drivers) (refer to the documentation for the connected device and operating system).

## Connecting a monitor

Depending on requirements, you can use the monitor ports of the mainboard (1) or the monitor ports of an optional display adapter in one of the board slots (2) to connect a monitor to your device.

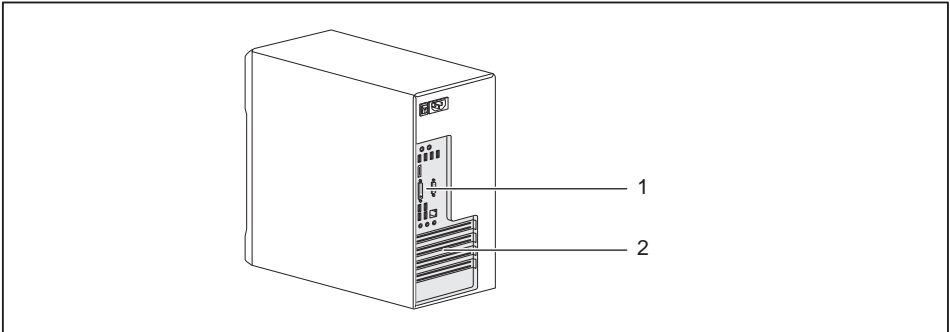


1 = Mainboard monitor ports

2 = Monitor ports of the display adapter

- ▶ Follow the instructions contained in the monitor manual to prepare the monitor for operation (e.g. connecting cables).
- ▶ Connect the data cable to a suitable monitor port of the device (VGA, DVI-I, DisplayPort).



The monitor power cable may only be connected to the monitor socket of the device if the monitor current consumption is less than 1.0 A at 230 V or 2.0 A at 100 V. The values for the monitor current consumption can be found in the technical data on the monitor or in the operating manual for the monitor.

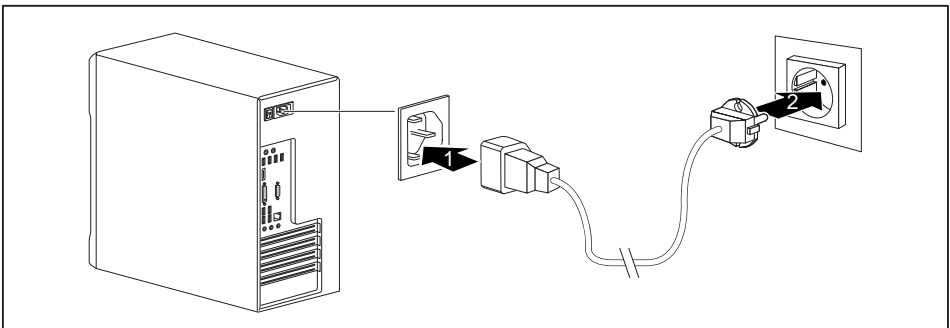

- ▶ Depending on your device configuration level, plug the monitor power cable into either the monitor socket of the device (1) or a grounded power outlet (2).



When you connect the monitor to the monitor socket of the device, it automatically switches off as soon as the device switches off.

## Connecting the mouse

Depending on the equipment level selected, your device will be supplied with a USB mouse or a PS/2 mouse.

### Connecting a USB mouse

- ▶ Connect the USB mouse to one of the USB ports on the device.

### Connecting a PS/2 mouse

- ▶ Connect the PS/2 mouse to the PS/2 mouse port of the device.

## Connecting the keyboard

Depending on the equipment level selected, your device will be supplied with a USB keyboard or a PS/2 keyboard.

### Connecting a USB keyboard

Use the supplied keyboard cable only.

- ▶ Plug the rectangular connector of the keyboard cable into the rectangular socket on the underside or on the rear of the keyboard.
- ▶ Insert the flat rectangular USB plug of the keyboard cable into one of the device's USB ports.

### Connecting a PS/2 keyboard

Use the supplied keyboard cable only.

- ▶ Plug the rectangular connector of the keyboard cable into the rectangular socket on the underside or on the rear of the keyboard.
- ▶ Plug the round plug of the keyboard cable into the keyboard port on the device.

## Connecting external devices to the parallel (optional) or serial port

External devices can be connected to the parallel or serial port (e.g. a printer or a modem).

- ▶ Connect the data cable to the external device.
- ▶ Depending on the device, connect the data cable to the parallel port or the serial port.



For an exact description of how to connect external devices to the corresponding port, please refer to the documentation of the external device.

## Port settings



You can change the port settings (e.g. address, interrupt) in the *BIOS Setup*.

## Device drivers



The devices connected to the parallel or serial port require drivers. Your operating system already includes many drivers. If the required drive is missing, install it. Current drivers are usually available on the Internet or will be supplied on a data carrier.

## Connecting external devices to the USB ports

You can connect a wide range of external devices to the USB ports (e.g. printer, scanner, modem or keyboard).



USB devices are hot-pluggable. This means you can connect and disconnect USB cables while your device is switched on.

Additional information can be found in the documentation for the USB devices.

- ▶ Connect the data cable to the external device.
- ▶ Connect the data cable to one of the USB ports on your device.

## Device drivers



The external USB devices you connect to the USB ports usually require no driver of their own, as the required software is already included in the operating system. However, if the external USB device requires its own software, please install it from the data carrier provided with the USB device.

To ensure the transmission capacity of USB 2.0, the cable from the external USB device to the USB port of your device must not be longer than 3 m.

## Switching on for the first time: installing the software



Once the installation has been started the device must not be switched off, unless the installation has been completed.

During installation, the device may only be rebooted when you are requested to do so!

The installation will otherwise not be carried out correctly and the contents of the hard disk must be completely restored.



If the device is integrated into a network, the user and server details as well as the network protocol are required during the software installation.

Contact your network administrator if you have any questions about these settings.

When you switch on the device for the first time, the supplied software is installed and configured. Plan a reasonable amount of time for this, as this process must not be interrupted.

You may need the licence number for Windows during the installation. The licence number is located on a sticker on your device.

## Switching on monitor and device




In order to avoid overheating, do not cover the ventilation areas of the monitor or the device.



Depending on the version, the device may be equipped with a main power switch on the back of the device in addition to the ON/OFF button on the front. As a result, there are different ways to switch on the two variants.

- ▶ Switch the monitor on (see the operating manual for the monitor).
- ▶ Switch the device on. To do this, follow the instructions below.

### Switching on the device (for devices with main power switch)

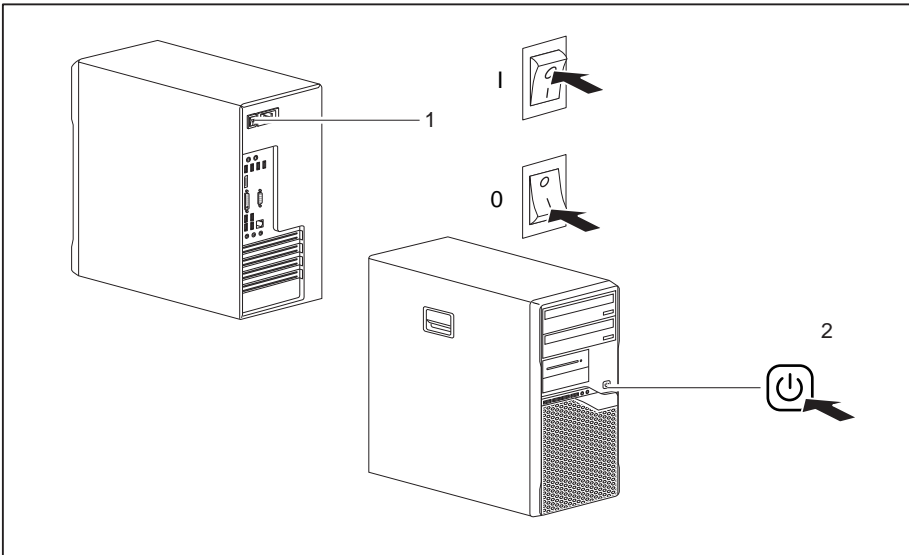


0 = Device is off

I = Device is on

- ▶ Switch the device on with the main power switch (1) on the back of the device.
- ▶ Press the ON/OFF switch (2) on the front of the device.
- ↳ The ON/OFF switch lights up white and the device starts up.

## Switching on the device (for devices without main power switch)

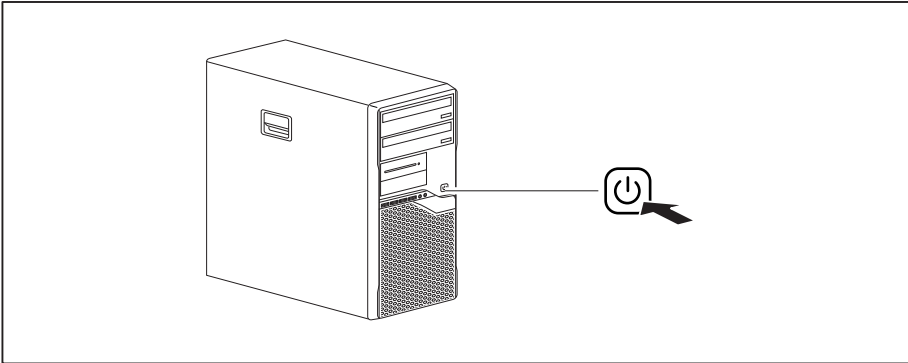

- ▶ Press the ON/OFF switch on the front of the device.
- ↳ The ON/OFF switch lights up white and the device starts up.

## Installing the software

- ▶ During installation, follow the on-screen instructions.
- ▶ If anything is unclear regarding the data you are asked to input, read the online Help in your operating system.



You will find more information on the system, as well as drivers, utilities and updates on the "Drivers & Utilities" DVD and on the Internet under ["http://ts.fujitsu.com/support/"](http://ts.fujitsu.com/support/).

# Operation

## Switch the device on


- ▶ If necessary, switch the monitor on (see the operating manual for the monitor).
- ▶ Press the ON/OFF switch on the front of the device.
- ↳ The power-on indicator glows white and the device is started.

## Switching on a device when the lithium battery is discharged (0-Watt devices)

A 0-Watt device consumes no current when it is switched off and in the quiescent state.

Your 0-Watt device is equipped with an emergency on button (primary resume button) which can be used if it can no longer be started, for instance because the lithium battery is discharged.

After the emergency on button (1) has been pressed for a short time, the device can be switched on again using the ON/OFF switch at the front of the device.

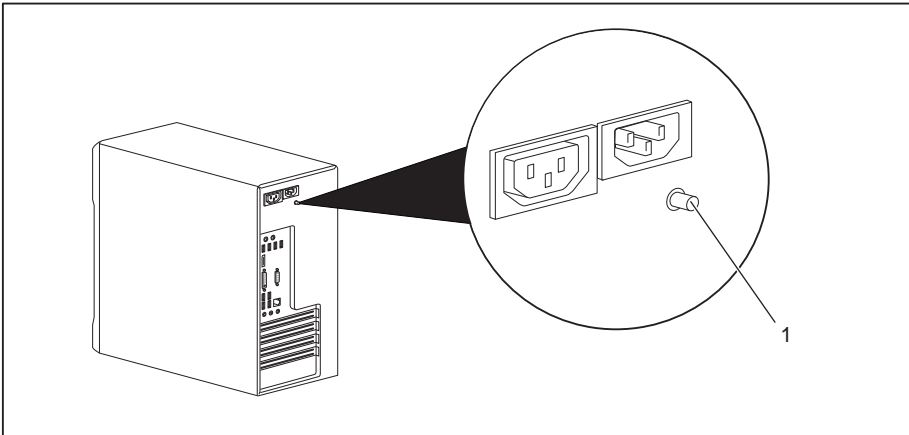

- ▶ Press the emergency on button (1) to start the device.

---

## Switching off the device

- ▶ Shut down the operating system in a defined manner. In Windows: via the *Start* menu and the *Turn Off Computer* function.
- ▶ If the operating system does not automatically switch the device into energy-saving mode or switch it off, press the ON/OFF switch. Warning, this could lead to a loss of data!
- ▶ Switch the device off at the main switch (if present).
- ↳ The device consumes energy as follows (depending on the power supply of your device):
  - Device with alternating voltage socket, monitor socket and emergency on button:
    - with activated zero watts function: no energy
    - with unactivated zero watts function: low energy
  - Device with alternating voltage socket and main power switch: no energy
  - Device with alternating voltage socket and monitor socket: low energy




The main switch and the ON/OFF switch do not disconnect the device from the mains voltage. To completely disconnect from the mains voltage, remove the power plug from the power socket.

- ▶ If necessary, switch the monitor off (see the operating manual for the monitor).

## Indicators on the device

The indicators are on the front of the casing. Which indicators are available on your device depends on the configuration level you have selected.

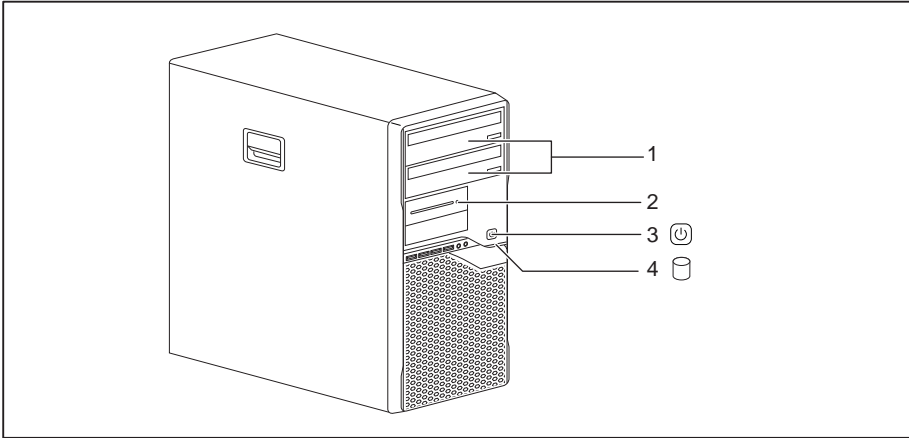


| No. | indicator  | Description  |
|-----|--|--|
| 1   | Drive indicators   | The indicator lights up when the CD-ROM or DVD drive of the device is accessed. You must never under any circumstances remove the CD/DVD while the indicator is lit.   |
| 2   | Indicator for optional components, e.g. SmartCard reader | The indicator lights up when the optional component, e.g. the SmartCard reader, is accessed.   |
| 3   | Power-on indicator                                       | <p><b>Caution:</b> In energy-saving mode the device must not be switched off with the main power switch (if present) or disconnected from the mains, as this may result in data loss.</p> <ul style="list-style-type: none"> <li>The indicator lights up white:<br/>The device is switched on.</li> <li>The indicator flashes white (depending on device type):<br/>The device is in energy-saving mode. After being switched on with the ON/OFF switch, the device powers up or returns to the state it was in before it entered energy-saving mode.</li> <li>The indicator is not illuminated:<br/>The device is switched off (main power switch at 0 or disconnected from the mains). If the device is ready it can be switched on with the ON/OFF switch.</li> </ul> |
| 4   | Hard disk indicator                                      | The indicator lights up blue when the hard disk drive of the device is accessed.   |

# Keyboard



The illustrated keyboard is an example and may differ from the model you use.

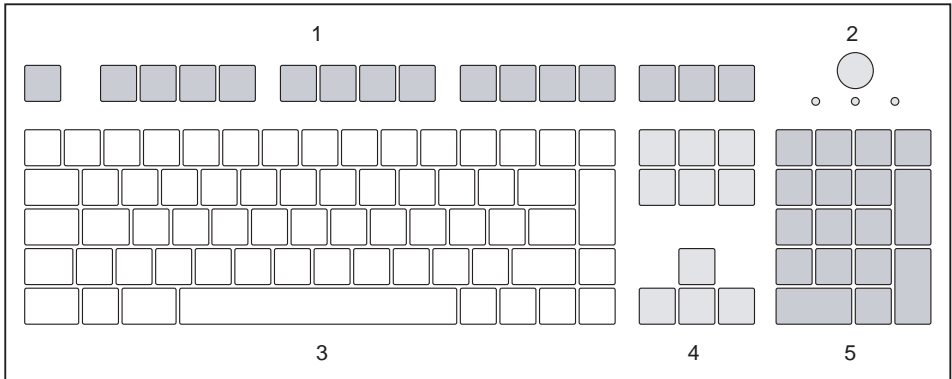

1 = Function keys

4 = Cursor keys

2 = On/off switch (optional)

5 = Numeric keypad (calculator keypad)

3 = Alphanumeric keypad

## Important keys and keyboard shortcuts

The description of the following keys and keyboard shortcuts applies to Microsoft operating systems. Details of other keys and keyboard shortcuts can be found in the documentation for the relevant application program.



### On/off switch (optional)

Depending on the setting in the *BIOS Setup*, the device can be switched on or off with this switch. Some operating systems allow you to configure additional functions of the ON/OFF switch in the Control Panel.

With some keyboards the ON/OFF switch can only be used with an ACPI (Advanced Configuration and Power Management Interface). Otherwise the key is inoperative. The mainboard must support this function.

### Enter key

confirms the highlighted selection. The Enter key is also referred to as the "Return" key.





### Start key

calls up the Windows *Start* menu.



### Menu key

calls up the menu for the marked item (Windows).



### Shift key

enables upper-case letters and the upper key symbols to be displayed.



### Alt Gr key

produces a character shown on the bottom right of a key (e.g. the @ sign on the [Q] key).



### Num Lock key

By pressing the Num Lock key you switch between the upper- and lower-case levels of the calculator keypad.

When the Num Lock indicator is lit the numeric keypad and arithmetic keys are active.

When the Num Lock indicator is not lit the cursor control functions on the Numeric keypad are active.



### Ctrl key

performs a special operation when pressed in conjunction with another key. The [Ctrl] key is also referred to as "Control" or the "Control key".



### Windows security/Task-Manager

Diese Tastenkombination startet das Fenster Windows-Sicherheit/Task-Manager.


## Settings in BIOS Setup

In *BIOS Setup*, you can set the system functions and the hardware configuration of the device. When the PC is delivered, the default entries are valid (see "BIOS Setup" manual or manual for the mainboard). You can customise these settings to your requirements in the *BIOS Setup*.

## Property and data protection

Software functions and mechanical locking offer a broad range of functions for protecting your device and your personal data from unauthorised access. You can also combine these functions.

## Anti-theft protection and lead-sealing

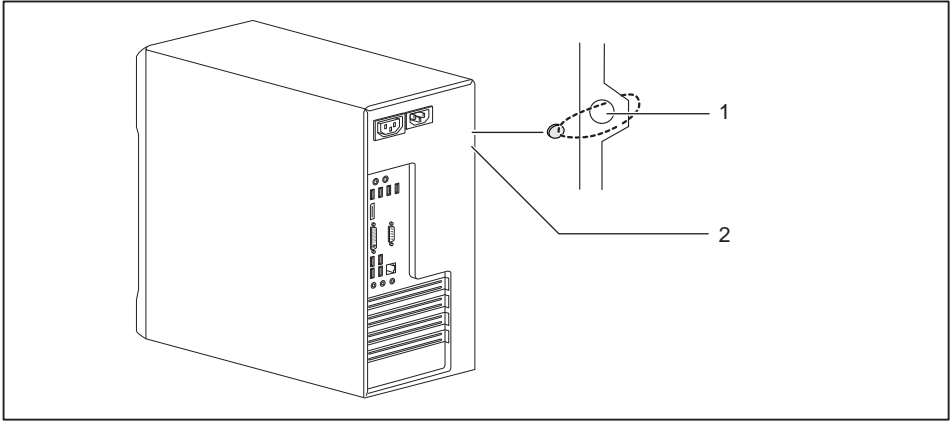

1 = Holes for padlock

2 = Fixture for Kensington Lock

### Anti-theft protection

You can protect your device from theft

- with the holes (1) and a padlock and chain which you have connected to a fixed object beforehand.
- with the fixture for the Kensington Lock (2) and a Kensington MicroSaver.  
Consult the manual for your Kensington Lock.

### Lead-sealing

To prevent unauthorised persons from opening the casing, the casing can be lead-sealed. To do this, feed the sealing chain through the holes (1) and seal the chain with the lead seal.


## Mechanical casing lock (optional)

With the casing lock you can mechanically lock the casing to prohibit unauthorised persons from opening it. The keys can be found on the rear panel of your device.



In addition to the casing lock, an open and a closed lock are also illustrated.

- Key turned towards the closed lock: The device is locked.
- Key turned towards the open lock: The device is unlocked.

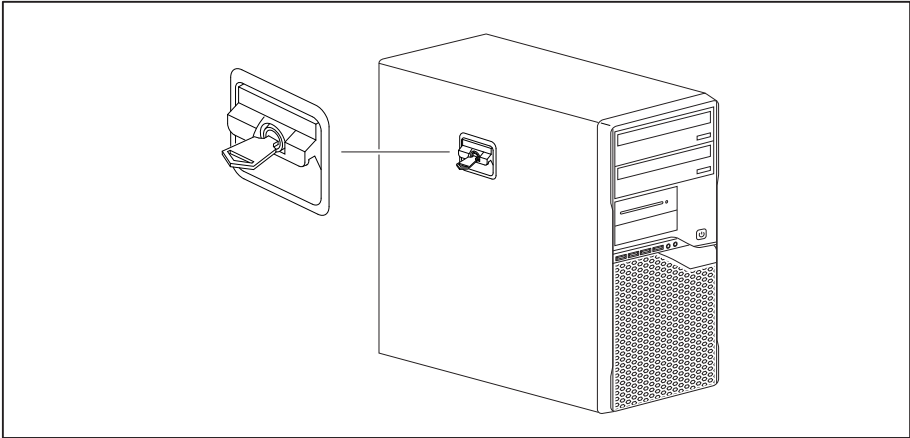

### Locking the casing

- ▶ Turn the key towards the closed lock.

### Unlocking the casing

- ▶ Turn the key towards the open lock.

## BIOS setup security functions

The *Security* menu in *BIOS Setup* offers you various options for protecting your personal data against unauthorized access, e.g.:

- Prevent unauthorized access to *BIOS Setup*
- Prevent unauthorised system access
- Prevent unauthorised access to the settings of boards with their own BIOS
- Activate virus warnings
- Protect BIOS from overwriting
- Protect the device from being switched on by an external device

You can also combine these functions.

You will find a detailed description of the *Security* menus and how to assign passwords in the manual for the mainboard or in the "BIOS Setup" manual.

## Access authorisation via SmartCard

In systems equipped with a SmartCard reader, access can be restricted to those users who have a corresponding SmartCard.

## Operating the SmartCard reader (optional)

- ▶ Connect the external SmartCard reader to your system as described in the instructions for the SmartCard reader.
- ↳ After the device is switched on, you will be prompted to insert your SmartCard.

# Troubleshooting and tips



Refer to the safety notes in the "Safety/regulations" manual and in the ["Getting started", Page 13](#) chapter when connecting or disconnecting cables.

If a fault occurs, try to correct it as described in the following documentation:

- in this chapter
- in the documentation for the connected devices
- in the help systems of the software used
- in the documentation for your operating system

## Help if problems occur

Should you ever have a problem with your computer that you cannot solve yourself, in many cases you can solve it quickly using the *SystemDiagnostics* program pre-installed on your computer.

- ▶ To start the *SystemDiagnostics* program, click *Start symbol - Program - Fujitsu - SystemDiagnostics*.
- ▶ If a problem is detected during the test run, the *SystemDiagnostics* program outputs a code (e.g. DIFS code YXXX123456789123).
- ▶ Make a note of the output DIFS code and the identity number of your device. You can find the identity number on the type rating plate of your device.
- ▶ For further clarification of the problem, contact the Help Desk for your country (see the Help Desk list or visit the Internet at "<http://ts.fujitsu.com/support>"). When you do this, please have ready the identity number and serial number of your system and the DIFS code.

## Troubleshooting

### Power indicator remains off after you have switched on your device

| Cause                               | Remedy  |
|-------------------------------------|---|
| The mains voltage supply is faulty. | <ul style="list-style-type: none"> <li>▶ Check that the power cable is correctly plugged into the device and into a grounded mains outlet.</li> <li>▶ Check that the main switch at the rear of the monitor is set to the "I" position.</li> <li>▶ Switch the device on.</li> </ul> |
| Internal power supply overloaded.   | <ul style="list-style-type: none"> <li>▶ Pull the power plug of the device out of the mains outlet.</li> <li>▶ Wait a moment.</li> <li>▶ Plug the power plug into a properly grounded mains outlet again.</li> <li>▶ Switch the device on.</li> </ul>                               |

## The device cannot be switched off with the ON/OFF switch

| Cause   | Remedy  |
|---|---|
| The device has not been switched on with the ON/OFF switch. | ▶ Press the ON/OFF switch again.  |
| System crash  | <p>▶ Keep the on/off switch pressed for at least 4 seconds until the machine switches off.</p> <p>Caution: This can lead to a loss of data!</p> <p>This procedure does not allow the operating system to shut down in an orderly way. The next time the system is started there may well be error messages.</p> |

## The device cannot be switched on with the ON/OFF switch (0-Watt devices)

| Cause                              | Troubleshooting  |
|------------------------------------|--|
| The lithium battery is discharged. | ▶ Press the emergency on button at the rear of the device, see chapter " <a href="#">Switching on a device when the lithium battery is discharged (0-Watt devices)</a> ", Page 22. |

## Monitor remains blank

| Cause   | Remedy   |
|---|--|
| Monitor is switched off.                          | ▶ Switch your monitor on.  |
| Power saving has been activated (screen is blank) | <p>▶ Press any key on the keyboard.</p> <p>or</p> <p>▶ Deactivate the screen saver. If necessary, enter the appropriate password.</p>  |
| Brightness control is set to dark                 | ▶ Adjust the brightness control. For detailed information, please refer to the operating manual supplied with your monitor.  |
| Power cable not connected                         | <p>▶ Switch off the monitor and the device.</p> <p>▶ Check that the monitor power cable is properly connected to the monitor and to a grounded mains outlet or to the monitor socket of the device.</p> <p>▶ Check that the device power cable is properly plugged into the device and a grounded mains outlet.</p> <p>▶ Switch on the monitor and the device.</p> |

| Cause  | Remedy  |
|--|---|
| Monitor cable not connected                        | <ul style="list-style-type: none"> <li>▶ Switch off the monitor and the device.</li> <li>▶ Check that the monitor cable is properly connected to the device and monitor.</li> <li>▶ Switch on the monitor and the device.</li> </ul>  |
| Wrong monitor has been set under Window XP         | <ul style="list-style-type: none"> <li>▶ Restart the device.</li> <li>▶ Press <b>[F8]</b> while the system is booting.</li> </ul> <p>Either the <i>Windows Advanced Start Options</i> menu or the menu for selecting the operating system appears.</p> <ul style="list-style-type: none"> <li>▶ If the menu for selecting the operating system appears, press <b>[F8]</b>.</li> <li>▶ Select <i>Safe Mode</i> or <i>Safe Mode with Network</i>.</li> <li>▶ Go to <i>Start – Settings – Control Panel – Display</i> and the tabs <i>Appearance, Themes, Settings</i> to set the correct values for the connected monitor as described in the operating manual of the monitor.</li> </ul>                 |
| Incorrect setting for the monitor in Windows Vista | <ul style="list-style-type: none"> <li>▶ Restart the device.</li> <li>▶ Press <b>[F8]</b> while the system is booting.</li> </ul> <p>Either the <i>Windows Advanced Start Options</i> menu or the menu for selecting the operating system will appear.</p> <ul style="list-style-type: none"> <li>▶ If the menu for selecting the operating system appears, press the <b>[F8]</b> key.</li> <li>▶ Select <i>Safe Mode</i> or <i>Safe Mode with Network</i>.</li> <li>▶ Go to <i>Start symbol – (Settings) – Control Panel – Appearance and Personalization – Personalization</i> and enter the correct values for the connected monitor as described in the operating manual of the monitor.</li> </ul> |
| Wrong monitor has been set under Windows 7         | <ul style="list-style-type: none"> <li>▶ Restart the device.</li> <li>▶ Press <b>[F8]</b> while the system is booting.</li> </ul> <p>Either the <i>Windows Advanced Start Options</i> menu or the menu for selecting the operating system appears.</p> <ul style="list-style-type: none"> <li>▶ If the menu for selecting the operating system appears, press <b>[F8]</b>.</li> <li>▶ Select <i>Safe Mode</i> or <i>Safe Mode with Network</i>.</li> <li>▶ Go to <i>Start – Control Panel – Appearance and Personalization – Display</i> to enter the correct values for the connected monitor as described in the operating manual of the monitor.</li> </ul>  |

## No mouse pointer displayed on the screen

| Cause                                 | Remedy  |
|---------------------------------------|---|
| The mouse is not correctly connected. | <ul style="list-style-type: none"> <li>▶ Shut down the operating system properly.</li> <li>▶ Switch the device off.</li> <li>▶ Check that the mouse cable is properly connected to the system unit. If you use an adapter or extension lead with the mouse cable, check the connections.</li> <li>▶ Make sure that only one mouse is connected.</li> <li>▶ Switch the device on.</li> </ul> |
| The mouse controller is not enabled.  | <ul style="list-style-type: none"> <li>▶ Check in the <i>BIOS-Setup</i> whether the mouse controller is <i>enabled</i>.</li> <li>▶ Check that the mouse driver is properly installed and is present when the application programme is started. Detailed information can be found in the user guide for the mouse and application programme.</li> </ul>                                      |

## Time and/or date is not correct

| Cause                              | Remedy   |
|------------------------------------|--|
| Time and date are incorrect.       | <ul style="list-style-type: none"> <li>▶ Set the correct time and date within the operating system you are using.</li> </ul> <p style="text-align: center;"><b>or</b></p> <ul style="list-style-type: none"> <li>▶ Set the correct time and/or date in the <i>BIOS Setup</i>.</li> </ul> |
| The lithium battery is discharged. | <ul style="list-style-type: none"> <li>▶ If the time and date are repeatedly wrong when you switch on your device, replace the lithium battery (see "<a href="#">Replacing the lithium battery</a>", Page 55).</li> </ul>  |

## Error messages on the screen

Error messages and their explanations are provided:

- in the technical manual for the mainboard
- in the documentation for the programs used

## Installing new software

When installing programs or drivers, important files may be overwritten and modified. To be able to access the original data in the event of any problems following installation, you should backup your hard disk prior to installation.

## Restoring the hard disk contents

The instructions on how to restore the content of the hard disk drive under Windows 7 can be found in the "Recovery Guide" manual.

### Tips

| Topic                   | Tip   |
|-------------------------|---|
| Out of system resources | ▶ Close unnecessary applications.<br><br>or<br>▶ Run the applications in a different order. |

# System expansions



Repairs to the device must only be performed by qualified technicians. Incorrect repairs may greatly endanger the user (electric shock, fire risk) and will invalidate your warranty.

After consulting the Hotline/Help Desk, you may remove and install the components described in this manual yourself.



As the device has to be shut down in order to install/deinstall system hardware components, it is a good idea to print out the relevant sections of this chapter beforehand.

The following illustrations may differ slightly from your device, depending on its configuration level.

If further documentation was delivered with your device, please also read this through carefully.

In addition, before removing or installing system components, please pay attention to the following:



The device must be switched off when installing/removing the system expansions and may not be in energy-saving mode.

Remove the power plug before opening the device.

Be careful that no wires become trapped when removing or installing components.

When installing components that become very hot, make sure that the maximum permissible temperature of the components in operation is not exceeded.



An update of the BIOS may be required for a system expansion or hardware upgrade. Further information can be found in the BIOS help section or if necessary in the Technical Manual for the mainboard.

# Information about boards

Take care with the locking mechanisms (catches and centring pins) when you are replacing boards or components on boards.

Note that some components on the mainboard may be very hot if the device was in use shortly before the casing was removed.

To prevent damage to the board or the components and conductors on it, please take care when you insert or remove boards. Make sure expansion boards are inserted straightly.

Never use sharp objects (screwdrivers) for leverage.



Boards with electrostatic sensitive devices (ESD) are identifiable by the label shown.

When handling boards fitted with ESDs, you must always observe the following points:

- You must always discharge static build up (e.g. by touching a grounded object) before working.
- The equipment and tools you use must be free of static charges.
- Only touch or hold the boards by the edge or, if present, at the areas marked green (Touch Points).
- Never touch pins or conductors on boards fitted with ESDs.

## Opening the casing

- ▶ Switch the device off. The device must not be in power-saving mode.




Please observe the safety information in ["Important notes", Page 10](#).

Disconnect the mains plug from the mains outlet.

Only insert the power plug after you have closed the casing.


- ▶ Remove any connected wires which are in the way.
- ▶ On devices with a casing lock: Unlock the casing.
- ▶ Lay the device on its side in the manner shown.

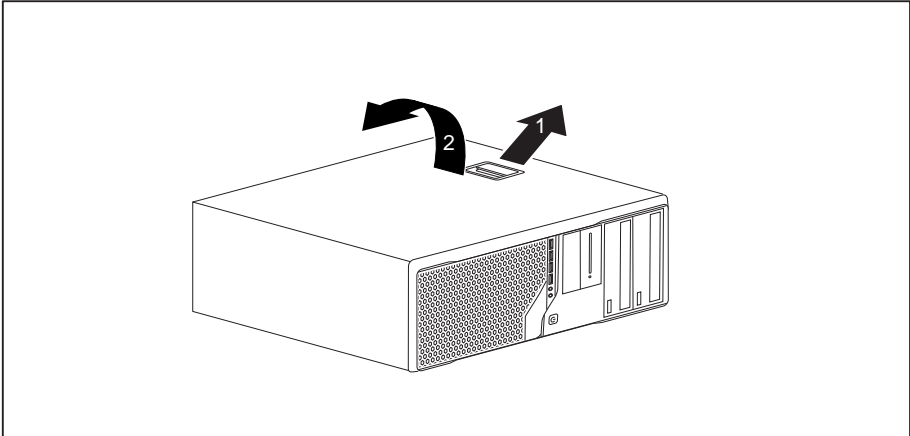

- ▶ Pull the locking device (1) and swivel the side part in the direction of the arrow (2).

## Closing the casing

- ▶ Insert the side part in the guide rail on the lower part of the casing.

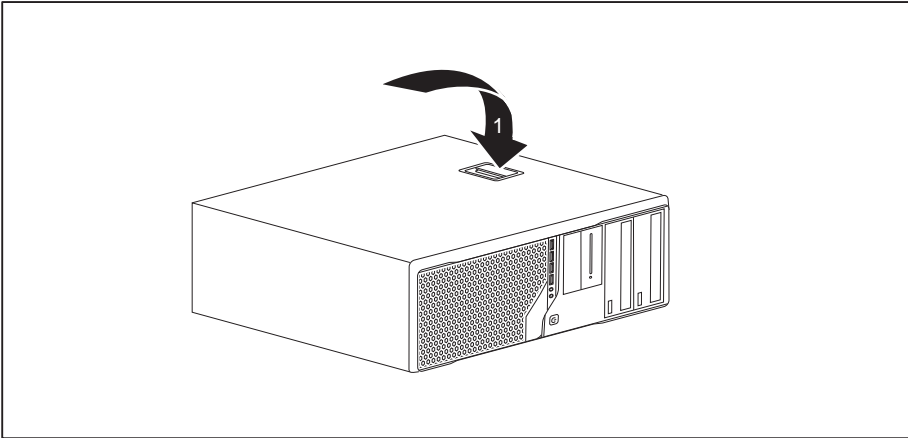

- ▶ Swivel the side cover in the direction of the arrow (1) until it engages.
- ▶ On devices with a casing lock: Lock the casing.
- ▶ Reconnect the cables that you disconnected before.

## Overview of the drive bays and drives in your device

The casing has space for several accessible and non-accessible drives:

- two drive bays for accessible 5<sup>1</sup>/<sub>4</sub> inch drives
- two drive bays for accessible 3<sup>1</sup>/<sub>2</sub> inch drives or one accessible 3<sup>1</sup>/<sub>2</sub> inch drive and one module bay with different components (e.g. multiscard reader)
- two drive bays for non-accessible 3<sup>1</sup>/<sub>2</sub> inch drives
- one drive bay for a non-accessible 2<sup>1</sup>/<sub>2</sub> inch drive (hard disk)




"Accessible drives" are e.g. DVD or CD ROM drives, into which a data medium can be inserted from outside. "Non-accessible drives" are for example hard disk drives.

## Installing and removing the accessible 5 1/4 inch drive


### Fitting the drive cover for the 5 1/4 inch drive

To use the latch function of the accessible 5 1/4 inch drive, you must fit the corresponding drive cover before installing the drive in the casing. Proceed as follows:

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).

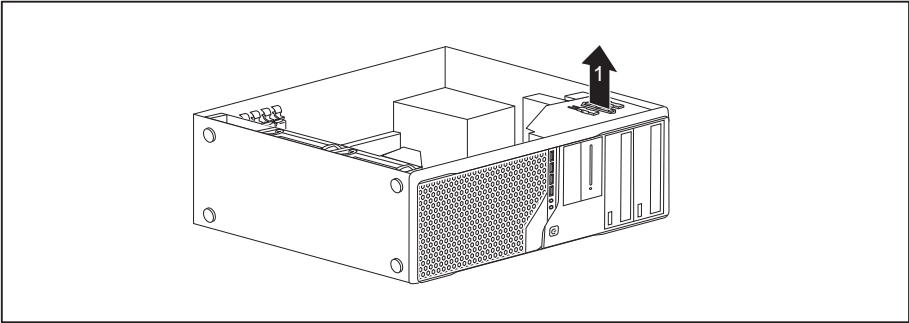

- ▶ Remove the drive cover from the bracket in the direction of the arrow (1).

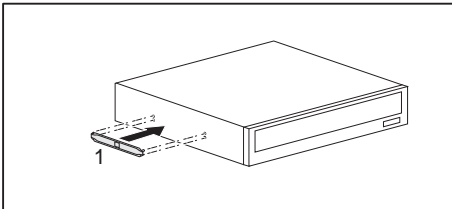


- ▶ Connect the drive cover to the drive (1).

## Installing an accessible drive

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).
  - ▶ If you are installing the drive in the upper bay and a cover (optional) is already in place, please remove it.
- or
- ▶ If you are installing the drive in the lower bay and a cover (optional) is already in place, please remove it.
  - ▶ Break out the pre-stamped metal cover on the drive bay.
  - ▶ Fit the drive cover for the 5<sup>1</sup>/<sub>4</sub> inch drive (see ["Fitting the drive cover for the 5 <sup>1</sup>/<sub>4</sub> inch drive", Page 39](#)).



Do not throw away the cover. For cooling and protection against fire you must refit the cover if you remove the drive again later (see ["Removing an accessible drive", Page 41](#)).

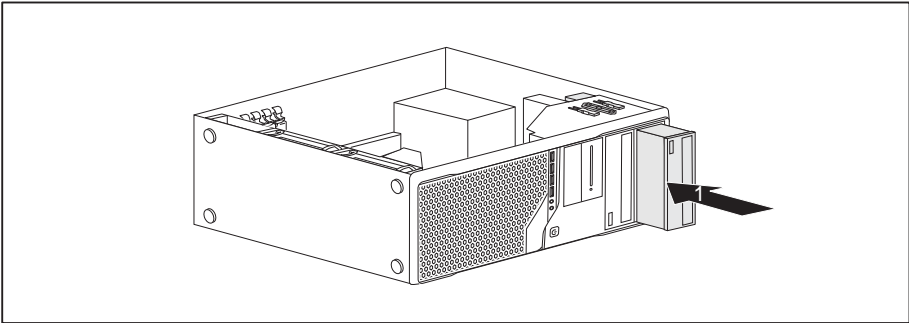


- ▶ Slide the accessible drive into the casing until it snaps in place (1).
- ▶ Connect the cables to the drive. Make sure the polarity is correct.
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).




It may be necessary to modify the entry for the drive in the *BIOS Setup*.

## Removing an accessible drive


- ▶ Open the casing (see ["Opening the casing", Page 37](#)).

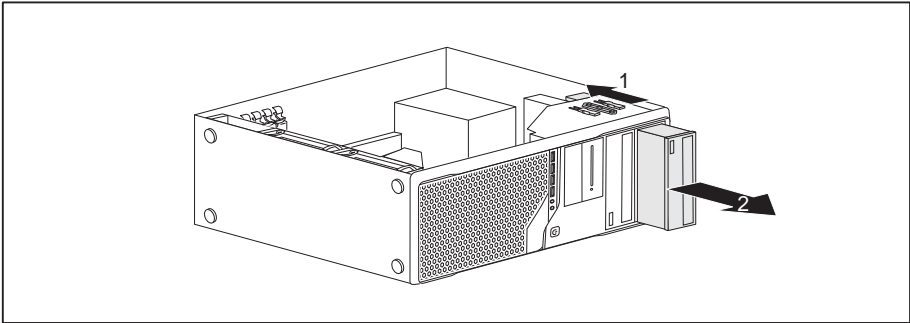

- ▶ Disconnect the cables connected to the drive.
- ▶ Slide the clip in the direction of the arrow (1).
- ▶ Pull the drive out of the casing in the direction of the arrow (2).

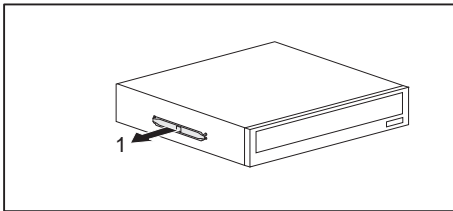

- ▶ Remove the drive cover from the drive (1).

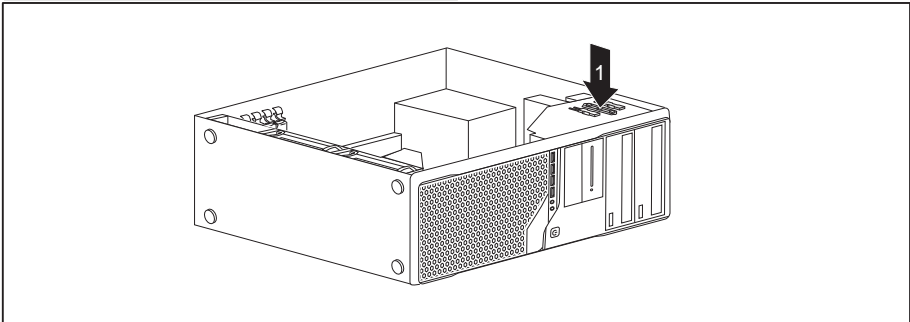

- ▶ Place the drive cover on the holder in the direction of the arrow (1).
- ▶ If necessary, make the required settings on the remaining hard disk drives.
- ▶ If you are not installing a new drive, reinstall the previously removed cover (optional) for the purposes of cooling, fire protection and to prevent foreign objects from getting into the casing.
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).



It may be necessary to modify the entry for the drive in the *BIOS Setup*.

## Installing/removing the SmartCard reader and/or WLAN module (optional, 3½-Zoll)

You can also install a SmartCard reader and/or a WLAN module for wireless LAN (Local Area Network) or a memory card reader in the drive bays for 3½ inch drives (see ["Removing and installing the memory card reader \(optional, 3½ inch, MultiCard\)", Page 46](#)).




The SmartCard reader and WLAN module can be installed together in one module holder (optional). If you have ordered a device with a WLAN module and SmartCard reader, the module holder, SmartCard reader and WLAN module will already be installed at the time of delivery.

However, you can only install one of the two boards. The WLAN module is installed in the lower slot of the carrier and the SmartCard reader in the upper slot of the carrier. If you want to install the SmartCard reader and the WLAN module together, first install the WLAN module. Removal is performed in the reverse order.

If you have ordered a device without a WLAN module or SmartCard reader, a blind cover is installed instead of the module holder.


## Removing the module holder

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).
- ▶ Disconnect the cables connected to the module holder.

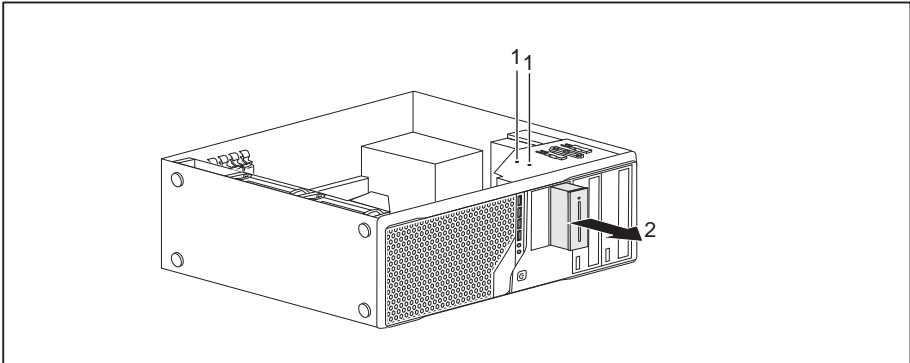


- ▶ Remove the screws (1) on the module holder.
- ▶ Push the module holder out of the casing in the direction of the arrow (2).

## Screwing the WLAN module onto the module holder

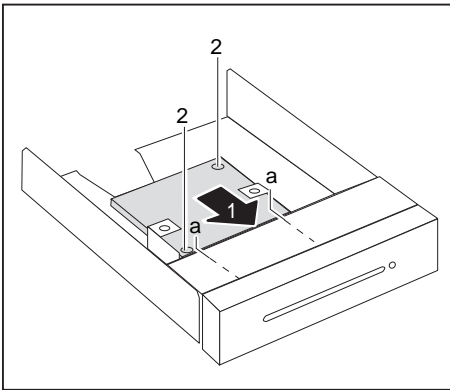


- ▶ Push the WLAN module - with the component side facing downwards - in the direction of the arrow (1) into the guide on the module holder (a).
- ▶ Fasten the WLAN module with the screws (2).

## Screwing the SmartCard reader onto the module holder

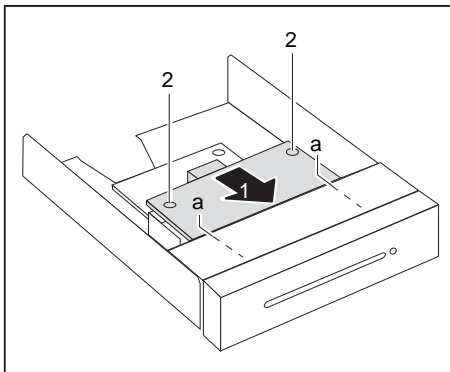

- ▶ Push the SmartCard reader - with the component side facing downwards - into the guide on the module holder (a) in the direction of the arrow (1).
- ▶ Secure the SmartCard reader with the screws (2).


## Installing the module holder with SmartCard reader and/or WLAN module

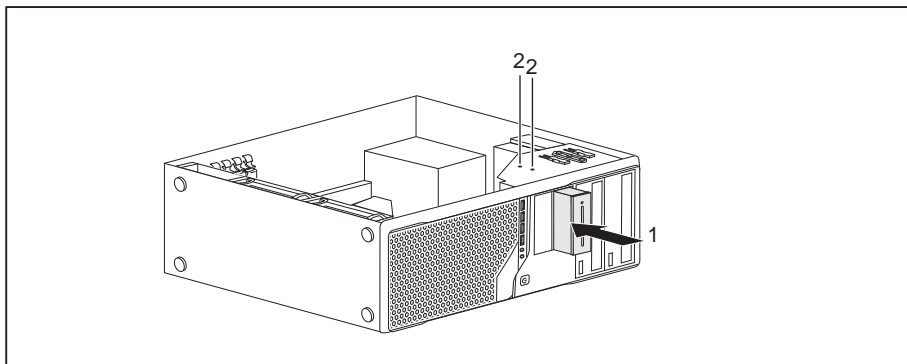

- ▶ Push the module holder into the casing in the direction of the arrow (1).
- ▶ Fasten the module holder with the screws (2).
- ▶ Connect the cables to the boards and the mainboard. Make sure the polarity is correct.
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).


## Removing the module holder with SmartCard reader and/or WLAN module

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).
- ▶ Disconnect the cables connected to the module holder.

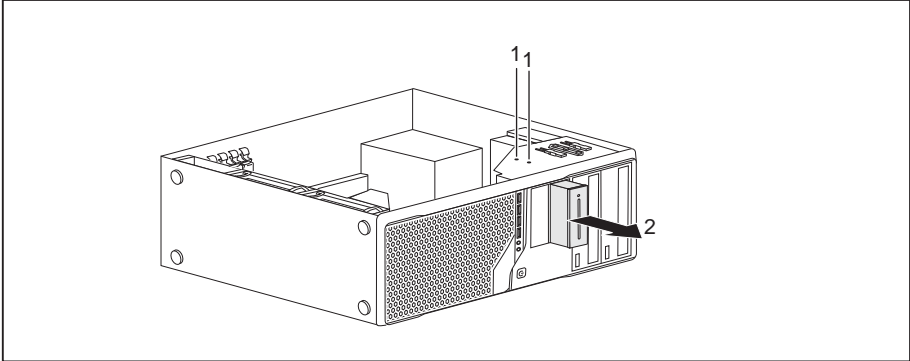


- ▶ Remove the screws (1).
  - ▶ Push the module holder out of the casing in the direction of the arrow (2).
  - ▶ Remove the SmartCard reader and WLAN module from the module holder (see ["Removing the SmartCard reader from the module holder", Page 46](#) and ["Removing the WLAN module from the module holder", Page 46](#)) and install the module holder again (corresponds to ["Installing the module holder with SmartCard reader and/or WLAN module", Page 44](#)).
- or
- ▶ Remove the SmartCard reader and WLAN module from the module holder (see ["Removing the SmartCard reader from the module holder", Page 46](#) and ["Removing the WLAN module from the module holder", Page 46](#)) and install a blind cover in the drive bay.
  - ▶ Close the casing (see ["Closing the casing", Page 38](#)).

## Removing the SmartCard reader from the module holder

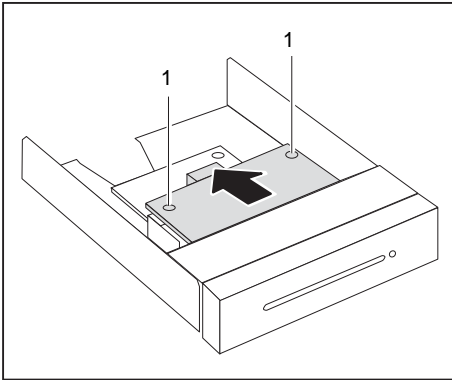

- ▶ Undo the screws (1).
- ▶ Pull the SmartCard reader out of the module holder in the direction of the arrow (2).

## Removing the WLAN module from the module holder

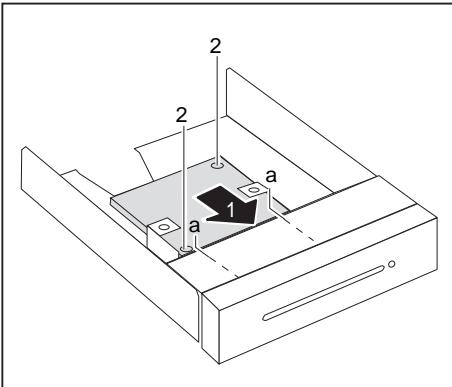

- ▶ Undo the screws (1).
- ▶ Pull the WLAN module out of the module holder in the direction of the arrow.


## Removing and installing the memory card reader (optional, 3½ inch, MultiCard)

You can also install a memory card reader or a SmartCard reader and/or a WLAN module for wireless LAN (Local Area Network) in the drive bay for 3½ inch drives (see ["Installing/removing the SmartCard reader and/or WLAN module \(optional, 3½-Zoll\)"](#), Page 42).



The memory card reader can, unlike the SmartCard reader and WLAN module, be installed directly in the device without a module holder.


## Installing the memory card reader

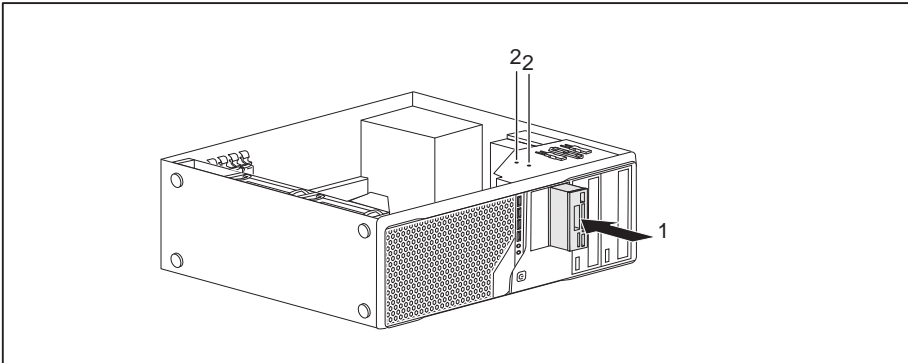

- ▶ Push the memory card reader into the casing in the direction of the arrow (1).
- ▶ Fasten the memory card reader with the screws (2).
- ▶ Connect the cables to the memory card reader and to the mainboard. Make sure the polarity is correct.
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).

## Removing the memory card reader

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).
- ▶ Disconnect the cables connected to the memory card reader.

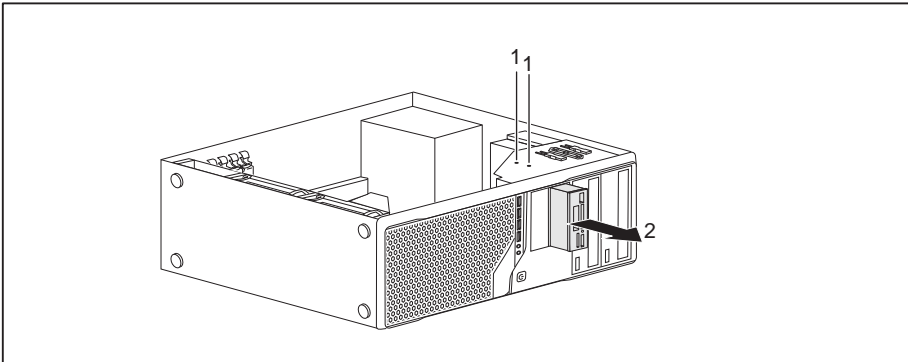


- ▶ Remove the screws (1).
- ▶ Slide the memory card reader out of the casing in the direction of the arrow (2).
- ▶ Install a blind cover in the drive bay.
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).

## Installing and removing the hard disk drive



The following description applies both to 3<sup>1</sup>/<sub>2</sub> inch drives and to 2<sup>1</sup>/<sub>2</sub> inch drives. The installation and removal procedure is the same for both types.

You can find EasyChange rails for a second 3<sup>1</sup>/<sub>2</sub> inch hard disk drive on the drive cage. EasyChange rails for a second 2<sup>1</sup>/<sub>2</sub> inch hard disk drive are provided together with the drive.

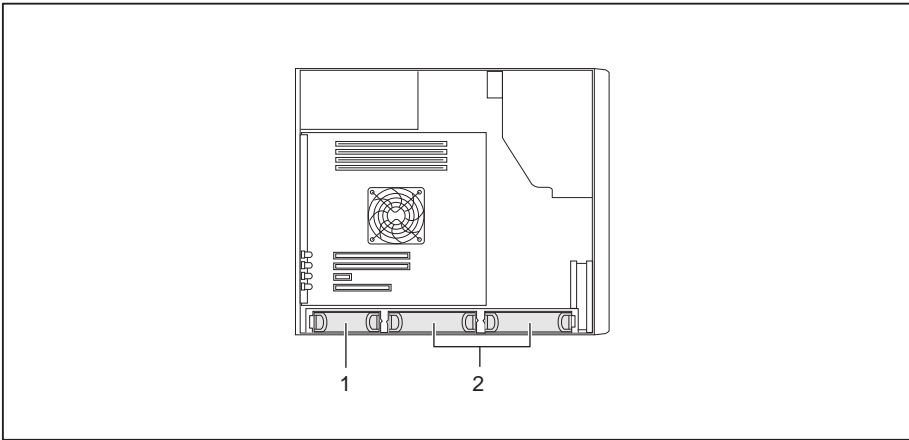


1 = 2<sup>1</sup>/<sub>2</sub> inch hard disk


2 = 3<sup>1</sup>/<sub>2</sub> inch hard disks

## Installing a hard disk drive

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).

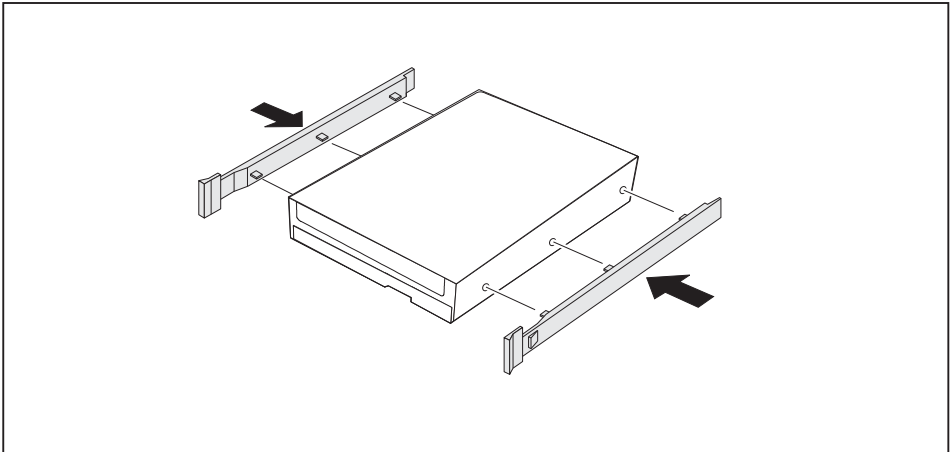

- ▶ Secure the EasyChange rails to the side of the hard disk drive by inserting the upper pins of the EasyChange rail in the corresponding holes of the hard disk.

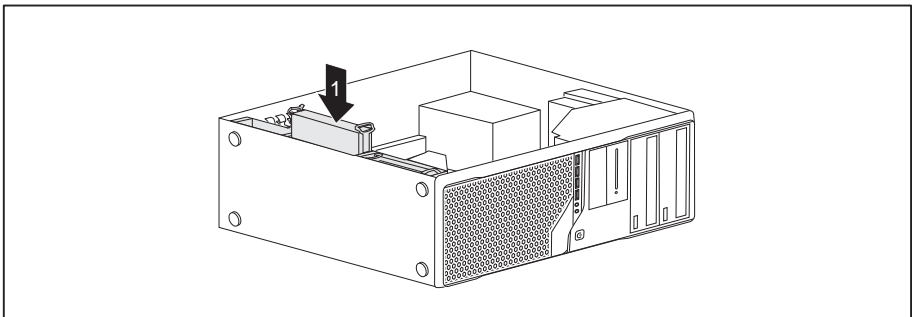


- ▶ Slide the hard disk drive with the EasyChange rails into the drive cage in the direction of the arrow (1). Check that the component side of the hard disk drive faces inwards towards the casing floor.
- ▶ Connect the cables to the hard disk drive.
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).




It may be necessary to modify the entry for the drive in the *BIOS Setup*.

## Removing the hard disk drive

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).

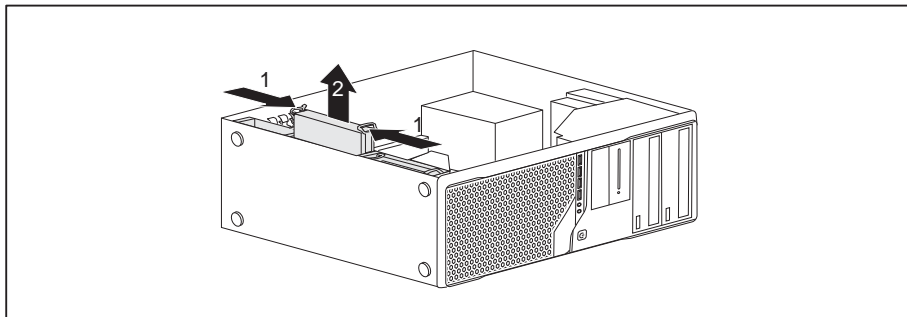

- ▶ Slightly press together the EasyChange rails mounted on the hard disk drive (1) and carefully pull the hard disk drive slightly out of the drive cage in the direction of the arrow (2).
- ▶ Disconnect the cables connected to the hard disk drive.
- ▶ Slightly press together the EasyChange rails mounted on the hard disk drive (1) and pull the hard disk drive completely out of the drive cage in the direction of the arrow (2).

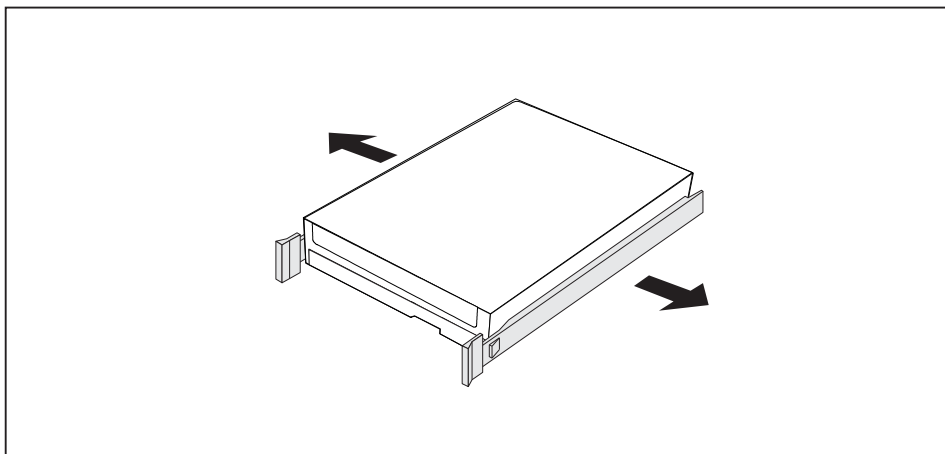

- ▶ Pull the EasyChange rails off the hard disk drive.
- ▶ If you no longer need the EasyChange rails, secure them again at their location in the drive cage.



It may be necessary to modify the entry for the drive in the *BIOS Setup*.


## Installing and removing a board

You can install additional modules in order to increase the performance of your machine.

The number, position and arrangement of the board slots on the mainboard can be found in the manual for the mainboard. Boards may already be installed on shipment.

### Installing a board


- ▶ Open the casing (see ["Opening the casing", Page 37](#)).

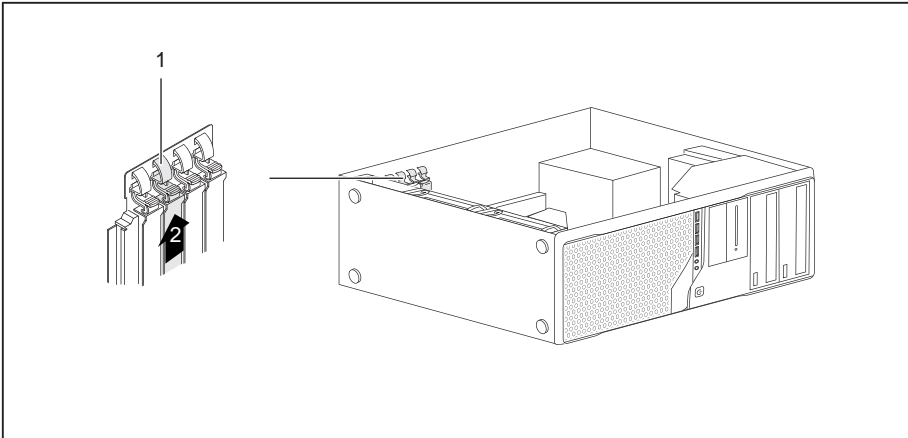

- ▶ Swivel the retaining clamp (1) around towards the back wall of the device.
- ▶ Pull the slot cover out of the slot in the direction of the arrow (2).



Do not throw away the slot cover. For cooling, protection against fire and in order to comply with EMC regulations, you must refit the slot cover if you remove the board.

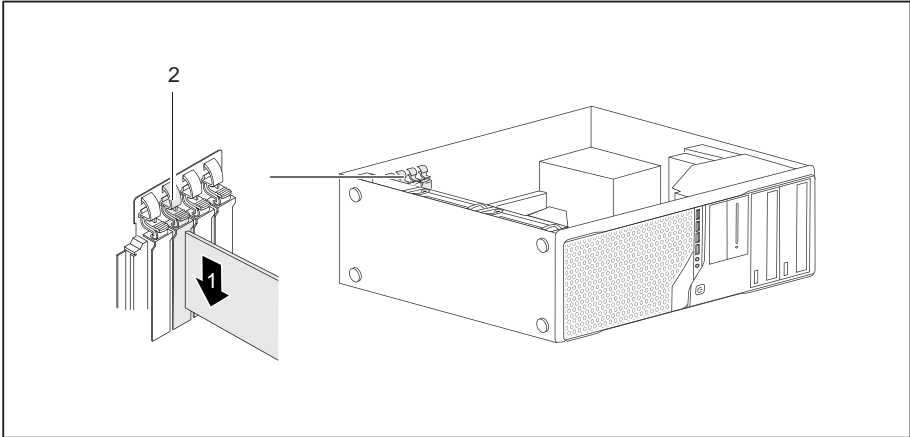


- ▶ Push the board into the slot (1).
- ▶ Swivel the retaining clamp back again until you feel it click into place (2).
- ▶ If necessary, connect the cables to the board.
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).



If you have installed or removed a board, please check the relevant PCI slot settings in the *BIOS Setup*. If necessary, change the settings. Further information is provided in the PCI board documentation.

## Removing a board

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).
- ▶ Disconnect the cables connected to the board.

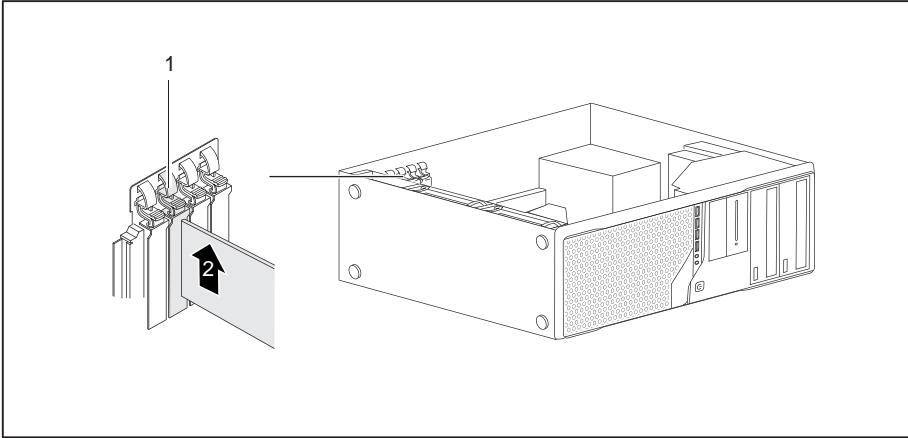

- ▶ Swivel the retaining clamp (1) around towards the back wall of the device.


**i**

Boards in the PCI-Express x16 slot are additionally secured to the slot at the bottom with a plastic catch. Push the plastic catch to the side to release the card. You can then remove the card as described below.

- ▶ Pull the board out of the slot in the direction of the arrow (2).
- ▶ Place the board in suitable packaging.



For cooling, protection against fire, and in order to comply with EMC (electromagnetic compatibility) regulations, you must refit the slot cover.

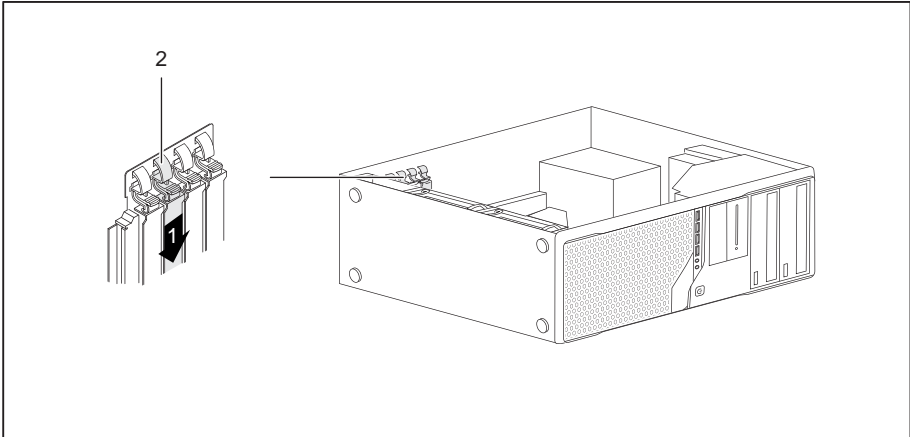

- ▶ Slide the slot cover into the slot (1).
- ▶ Swivel the retaining clamp back again until you feel it click into place (2).
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).



If you have installed or removed a PCI board, please check the relevant PCI slot settings in the *BIOS Setup*. If necessary, change the settings. Further information is provided in the PCI board documentation.

## Installing and removing heat sinks

### Removing the heat sink

The shape and position of the heat sink are device-dependent.

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).
  - ▶ Disconnect the cable of the fan (FAN1) from the mainboard.
  - ▶ Undo the screws on the heat sink.
  - ▶ Lift the heat sink out of the casing.
- ↳ You can now replace the processor.



Never operate the device without a heat sink! Before initial startup, install the heat sink again in the same way as it was installed in the device before removal.

## Installing the heat sink

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).



Install the heat sink again in the same way as it was fitted in the device at the time of removal.

- ▶ Insert the heat sink into the casing. To do this, correctly align the screw holes on the heat sink with the screw holes on the mainboard.
- ▶ Tighten the screws.
- ▶ Connect the fan cables to the mainboard.

## Mainboard expansions

Details on how to upgrade the main memory or the processor of your device can be found in the manual for the mainboard.

### Upgrading main memory

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).
- ▶ Upgrade the main memory according to the description in the manual for the mainboard.
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).

### Replacing the processor

- ▶ Open the casing (see ["Opening the casing", Page 37](#)).
- ▶ Remove the heat sink (see ["Removing the heat sink", Page 54](#)).
- ▶ Replace the processor as described in the manual for the mainboard.
- ▶ Install the heat sink again (see ["Installing the heat sink", Page 55](#)).
- ▶ Close the casing (see ["Closing the casing", Page 38](#)).

### Replacing the lithium battery

In order to permanently save the system information, a lithium battery is installed to provide the CMOS-memory with a current. A corresponding error message notifies the user when the charge is too low or the battery is empty. The lithium battery must then be replaced.

For 0-Watt devices: As an interim solution, the device can be started using the emergency on button at the rear, see chapter ["Switching on a device when the lithium battery is discharged \(0-Watt devices\)", Page 22](#).





Incorrect replacement of the lithium battery may lead to a risk of explosion!

The lithium battery may be replaced only with an identical battery or with a type recommended by the manufacturer.

Do not throw lithium batteries into the household waste. They are taken back, free of charge, by the manufacturer, dealer or their agents, in order to be disposed of in accordance with local regulations concerning special waste.

Make sure that you observe the correct polarity when replacing the lithium battery. The plus pole must be on the top!

The lithium battery holder exists in different designs that function in the same way.

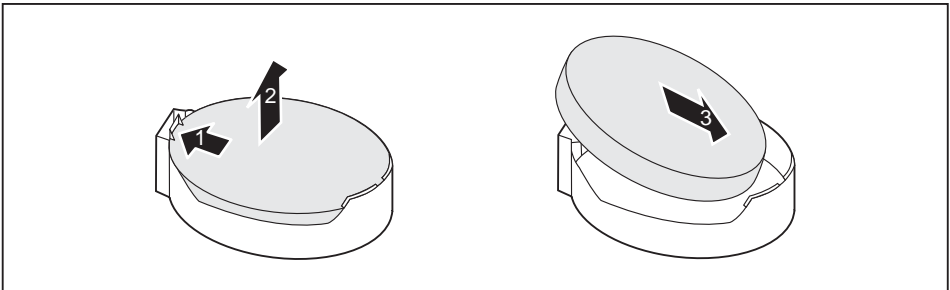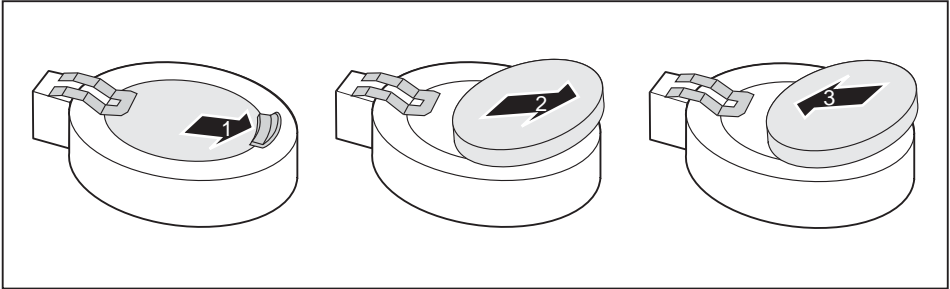

- ▶ Press the catch in the direction of the arrow (1).
- ↳ The battery jumps out of the holder slightly.
- ▶ Remove the battery (2).
- ▶ Push the new lithium battery of the same type into the holder (3) and press it downward until it engages.

# Technical data

| <b>Electrical data</b>  |  |
|---|--|
| Safety standards complied with:   | IEC 60950-1, EN 60950-1, UL 60950<br>CSA 22.2 No.60950-1 |
| Protection class:   | I  |
| Rated voltage range   | 100 V – 240 V  |
| Rated frequency   | 50 Hz – 60 Hz  |
| Max. rated current<br>(with monitor socket):                                      | 100 V – 240 V<br>5.0 – 2.5 A                             |
| Max. rated current<br>(without monitor socket):                                   | 100 V – 240 V<br>4.0 – 2.0 A                             |
| Max. rated current<br>(optional monitor socket):                                  | 100 V – 240 V<br>2.0 – 1.0 A                             |
| <b>Dimensions</b>   |  |
| Width/depth/height:   | 175 mm x 419 mm x 395 mm                                 |
| <b>Weight</b>   |  |
| in basic configuration:   | approx. 11 kg  |
| <b>Ambient conditions</b>   |  |
| Environment class 3K2   | DIN IEC 721 part 3-3                                     |
| Environment class 2K2   | DIN IEC 721 part 3-2                                     |
| <b>Temperature</b>  |  |
| Operation (3K2)   | 10 °C .... 35 °C   |
| Transportation (2K2)  | -25 °C .... 60 °C  |
| The formation of condensation is not permitted while the device is in operation ! |  |
| Clearance required to ensure adequate ventilation:                                |  |
| without air vents   | min. 10 mm   |
| with air vents  | min. 200 mm  |



The data sheets of these devices contain further technical data. The data sheets can be found on our website ["http://ts.fujitsu.com"](http://ts.fujitsu.com).

# Index

- A**
  - Access permission, SmartCard 29
  - Alphanumeric keypad 25
  - Anti-theft protection 27
  - Audio input 16
  - Audio output 16
- B**
  - Battery 56
  - BIOS Setup 26
    - security functions 29
  - BIOS Setup,
    - configuration 26
    - settings 26
    - system settings 26
  - Board
    - installing 51
    - removing 53
  - Board,
    - installing 51
    - removing 51
  - Button,
    - ON/OFF switch 25
- C**
  - Cable
    - connecting 15
    - disconnecting 15
  - Casing
    - Mechanical lock 28
  - Casing lock 28
  - Casing mechanical lock 28
  - Casing,
    - closing 38
    - Lead-sealing 27
    - opening 37
  - CE marking 11
  - Chain 27
  - Components
    - installing/removing 35
  - Connecting a PS/2 keyboard 18
  - Connecting,
    - keyboard 18
    - mouse 18
    - PS/2 keyboard 18
    - PS/2 mouse 18
    - USB keyboard 18
  - Contents of delivery 13
  - Cord
    - see Cable 15
  - Ctrl+Alt+Del 26
  - Cursor keys 25
- D**
  - Data protection 26
  - Device
    - Connections 16
      - setting up 14
    - Device drivers
      - Parallel port 19
    - Device drivers,
      - Serial port 19
  - Device,
    - Anti-theft protection 27
    - closing 38
    - Lead-sealing 27
    - opening 37
    - switching off 23
    - switching on 20, 22
    - transporting 10–11
    - upgrades 35
  - Devices
    - connecting 18
  - Devices,
    - connecting 19
  - Disposal 11
  - Drivers & Utilities DVD 11
- E**
  - Electromagnetic compatibility 11
  - Energy saving 11
  - Ergonomic
    - Workstation 14
  - External devices
    - connecting 18
    - Ports 16
  - External devices,
    - connecting 19
- F**
  - Function keys 25
- G**
  - Getting started 13
- H**
  - Headphones 16

- I**
- Important notes 10
  - Installing,
    - software 19, 21
    - switching on for the first time 19
- K**
- Kensington Lock 27
  - Keyboard 25
  - Keyboard port 16
  - keyboard shortcuts 26
  - Keyboard shortcuts 25
  - Keyboard,
    - alphanumeric keypad 25
    - connecting 18
    - cursor keys 25
    - function keys 25
    - numeric keypad 25
    - port 18
  - Keys 25
  - Keys,
    - Alt Gr 26
    - Control 26
    - Ctrl 26
    - Ctrl key 26
    - Ctrl+Alt+Del 26
    - cursor keys 25
    - Enter 25
    - Enter key 25
    - menu key 26
    - Num Lock 26
    - Return 25
    - shift 26
    - shift key 26
    - Start key 26
- L**
- LAN port 16
  - Lead-sealing 27
  - Line in 16
  - Line out 16
  - Lithium battery 55
    - replacing 56
  - Lock 28
  - Low voltage directive 11
- M**
- Main memory 55
    - upgrading 55
  - Mainboard
    - Upgrades 55
  - Mains adapter,
    - connecting 14
  - Microphone jack 16
  - Monitor port 16
  - Monitor,
    - switching off 23
    - switching on 20, 22
  - Mouse port 16
  - Mouse,
    - connecting 18
- N**
- Note
    - safety 10
  - Notes
    - CE marking 11
    - important 10
  - Numeric keypad 25
- O**
- ON/OFF switch 25
  - Overview
    - Device 5
- P**
- Packaging 13
  - Packaging,
    - unpacking 13
  - Parallel port 16, 18
    - Connecting devices 18
    - Settings 18
  - Ports 7, 16
  - Preparing for first use, overview 13
  - Preparing for use,
    - overview 13
  - Printer 16
  - Processor 55
  - Property protection 26
  - PS/2 mouse port 16
  - PS/2 mouse,
    - connecting 18
    - port 18
- R**
- Recycling 11
  - Replacing
    - lithium battery 56
  - Replacing, lithium battery 56
  - Retransportation 10–11
- S**
- Safety information 10

- Security functions
  - BIOS Setup 29
- Security functions,
  - SmartCard 29
- Security measures 26
- Serial port 16, 18
  - Connecting devices 18
- Serial port,
  - Settings 18
- Servicing 35
- Setup,
  - see BIOS Setup 26
- SmartCard reader,
  - operating 29
- Software,
  - installing 19, 21
- System expansion 35
- System settings,
  - BIOS Setup 26
- System unit, see Device 11

## T

- Transportation 10–11

## U

- Universal Serial Bus 16
- Upgrades
  - Mainboard 55
- Upgrades,
  - device 35
- USB devices,
  - connecting 19
- USB port 18
- USB port,
  - connecting devices 19
  - connecting keyboard 18
  - connecting the mouse 18
- User Documentation DVD 11

## W

- Workstation 14