

# Welcome to HTC

## Quick Start Guide

For a more complete guide in using your phone,  
download the User Manual PDF from:

<http://www.htc.com/europe/support.aspx>

<http://www.htc.com/mea-en/support.aspx>

### Please Read Before Proceeding

THE BATTERY IS NOT FULLY CHARGED WHEN YOU TAKE IT OUT OF THE DEVICE.

DO NOT REMOVE THE BATTERY PACK WHEN THE PHONE IS CHARGING. YOUR WARRANTY IS INVALIDATED IF YOU DISASSEMBLE OR ATTEMPT TO DISASSEMBLE THE DEVICE.

### PRIVACY RESTRICTIONS

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your phone.

### Limitation of Damages

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HTC OR ITS PROVIDERS BE LIABLE TO USER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES OF ANY KIND, IN CONTRACT OR TORT, INCLUDING, BUT NOT LIMITED TO, INJURY, LOSS OF REVENUE, LOSS OF GOODWILL, LOSS OF BUSINESS OPPORTUNITY, LOSS OF DATA, AND/OR LOSS OF PROFITS ARISING OUT OF, OR RELATED TO, IN ANY MANNER, OR THE DELIVERY, PERFORMANCE OR NONPERFORMANCE OF OBLIGATIONS, OR USE OF THE WEATHER INFORMATION, DATA OR DOCUMENTATION HEREUNDER REGARDLESS OF THE FORESEEABILITY THEREOF.

### \*\*\* IMPORTANT REMINDER \*\*\*

Some applications on the phone need a constant Internet connection. **It is strongly recommended** that you subscribe to a flat-rate data plan. If you do not have a flat-rate data plan, you may incur significant data connection charges when the phone accesses the Internet. We strongly advise you to check with your mobile operator for the data rates first before using phone applications that access the Internet.

## Contents

 
1. Inside the Box.....	4
2. Get to Know Your Phone.....	4
3. Before You Turn On Your Phone.....	5
4. Get Started.....	8
5. Home Screen.....	9
6. Lock Screen.....	10
7. Get Your Contacts into the Phone .....	11
8. Make Calls .....	12
9. Use the Onscreen Keyboard .....	12
10. Get On the Internet.....	13
11. Get Your Messages Across .....	15
12. Sync With Your Computer.....	17
13. How to Reset Your Phone .....	18
14. Troubleshooting Tips.....	19
Appendix: Safety and Other Notices.....	21

## 1. Inside the Box

- HTC Touch2
- USB sync cable
- Battery
- 3.5 mm stereo headset
- AC adapter
- Quick Start Guide

## 2. Get to Know Your Phone


You will find the following controls on the front panel:

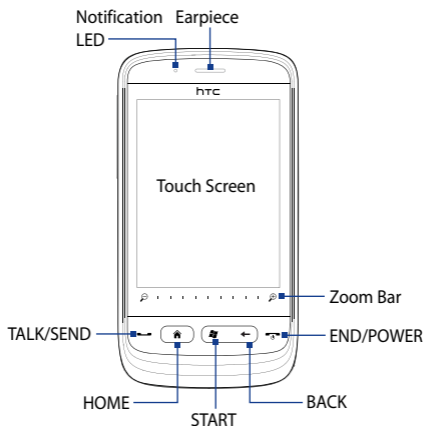


VOLUME UP and DOWN buttons for adjusting volume are located on the left panel of the phone.

The audio jack on the top panel allows you to connect the supplied 3.5mm stereo headset. On the bottom panel, there is a sync connector for charging your phone's battery or for connecting your phone to the computer.


### 3. Before You Turn On Your Phone

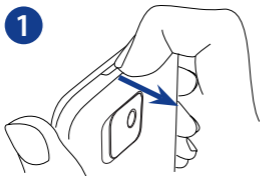 

 
**1** **Remove the back cover**  
Lift open the top of the back cover. (There's a narrow opening where you can use your finger to remove the back cover.)

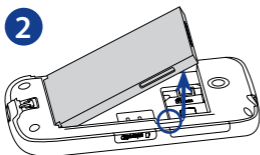

 **2** **Remove the battery**  
Lift up the battery from the small opening on the right side of the battery compartment.

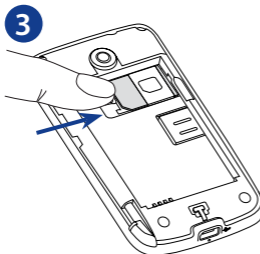

 **3** **Insert the SIM card**  
Insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot. Slide the SIM card completely into the slot.

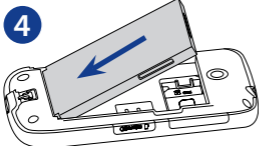


### IMPORTANT

Before you reinstall the battery, remove the thin film that covers the battery.

### Put the battery back in

 1. Align the battery's exposed copper contacts with the battery connectors inside the battery compartment.
2. Insert the contact side of the battery first then gently push the battery into place.

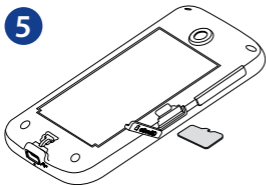

### Insert the microSD card

1. From the side of the phone, open the microSD slot cover.
2. Insert the microSD card into the slot with its gold contacts facing down until it clicks into place.
3. Close the microSD slot cover.



### Replace the back cover

1. Secure the bottom part of the back cover first by aligning into the two openings located at the bottom part of the back of the phone.
2. Press the sides and the top part of the back cover down to lock the cover into place. You will hear a click when the back cover is locked in place.



### Charge the battery

1. Connect the USB connector of the power adapter to the sync connector on your phone.
2. Plug in the power adapter to an electrical outlet to start charging the battery.

After installing the SIM card, battery, and microSD card and charging the battery, you are now ready to turn on your phone for the first time. Read on and learn what you can do with your phone.

## 4. Get Started

Press the END/POWER button to turn on your phone.

When you turn on your phone for the first time:

- A tutorial on how to use the onscreen keyboard will be presented. Follow through the tutorial to learn how to use the onscreen keyboard.
- You will be guided to connect your phone to a Wi-Fi network, if available, and set up your email accounts. Follow the onscreen instructions to complete the setup, or you can skip the setup and do it at another time.
- Some applications on your phone such as Weather require Google's location service to automatically determine your current location. You can choose whether to allow Google's location service to collect information about your location.

## 5. Home Screen

The Home screen allows finger-touch access to the most important functions of your phone such as contacts, text messages, email, Internet, and more.



A digital clock, the weather of your current location and your upcoming appointment are shown on the Home tab. Tap the respective item to change the date or time, update the weather information, or access the Calendar.


To switch between the tabs of the Home screen, press and hold your finger on the active tab, and then slide your finger right or left to the desired tab. You can also directly tap a tab.

**Tip** While on any other screen, press the HOME button on your phone to return to the Home tab.

## 6. Lock Screen

The Lock screen is displayed whenever your phone is locked. This prevents accidental button or touch screen presses.



Your phone automatically locks when the display is turned off (automatically or you have pressed the END/POWER button) and your phone goes to sleep mode. When you see the Lock screen, slide the **Lock** button (  ) left or right to unlock your phone.

For more information about the Lock screen, refer to the “Getting Started” chapter in the User Manual PDF.

## 7. Get Your Contacts into the Phone

There are several ways you can add contacts to your phone.

### Creating new contacts

1. On the Home screen, slide to the **People** tab and then tap **All People**.
2. On the Contacts screen, tap **New**, select **Outlook Contact**, and enter the contact information.
3. To add a photo of the contact, tap **Select a picture**, and then select the photo. You can also tap **Camera** to take a photo of the contact.
4. You can also assign a ring tone to the contact.
5. When finished, tap **OK**.

**Tip** You can also create an email or messaging group.

### Synchronizing Outlook contacts

If you have Outlook contacts on your computer or the Exchange Server (Outlook work account), you can sync them with your phone. For more information about synchronizing your phone with your computer, see "Sync With Your Computer" in this guide. Refer to the User Manual PDF to learn how to sync your phone with the Exchange Server.

 
### Synchronizing With Microsoft® My Phone

Microsoft® My Phone syncs information between your phone and a password-protected website hosted by Microsoft. You can back up and restore your contacts, calendar appointments, photos, and other information. Refer to the User Manual PDF for details.

## 8. Make Calls

Press the TALK/SEND button to open the Phone dialer.

The **Smart Dial** feature makes it quick and easy for you to place a call. Simply enter the phone number or the first few letters of a contact name. From the filtered list, tap the number or contact you want to call.

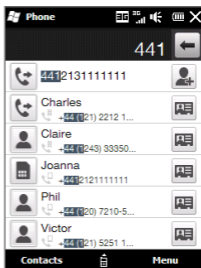


While viewing a received text or email message, you can also press TALK/SEND to directly call the sender (if the sender's phone number is stored in your contacts).

## 9. Use the Onscreen Keyboard

 When you start a program or select a field that allows you to enter text or numbers, the onscreen keyboard becomes available. You can choose from three keyboard layouts: **Full QWERTY**, **Compact QWERTY**, and **Phone Keypad**.

The onscreen keyboard offers word prediction and auto correction features, helping you type faster and more accurately. Don't worry about pressing the right key every time – just get close and let the onscreen keyboard do the rest.

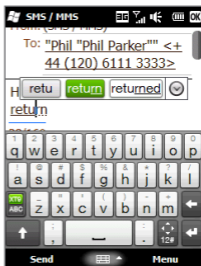

Full QWERTY

## 10. Get On the Internet

Connect to the world through a data connection or Wi-Fi connection. Browse the Web, download applications from Marketplace, and send/receive email.

### Using a data connection

Your phone automatically connects to the Internet using 3G/GPRS/EDGE when you begin using a function that accesses the Internet such as email or the Web browser.

To save battery, you can switch off the data connection when not in use. On the Home screen, slide to the **Settings** tab, tap **Communications**, and then tap the Data Connection option's **ON/OFF** slider.


### Using Wi-Fi

 
If you skipped Wi-Fi setup when you first turned on your phone, follow the steps below to connect your phone to a Wi-Fi network.

1. On the Home screen, slide to the **Settings** tab and then tap **Communications**.
2. Tap **Wi-Fi**. Detected wireless networks are displayed on the screen.
3. Tap the desired Wi-Fi network.
  - If you selected an open (unsecured) network, you are automatically connected to the network.
  - If you selected a secured network, enter the security key and then tap **Done**. You are then connected to the network.

## Browsing the Web

Experience rich Internet browsing with Opera Mobile™. On the Home screen, slide to the **Internet** tab and then tap **Launch Browser** to open Opera Mobile.

Opera Mobile displays in two modes: full-screen and normal viewing modes. Full-screen mode hides the address bar and the browser controls. To change from full-screen to normal viewing mode, tap the **Restore** icon (  ) at the bottom right corner of the browser screen.

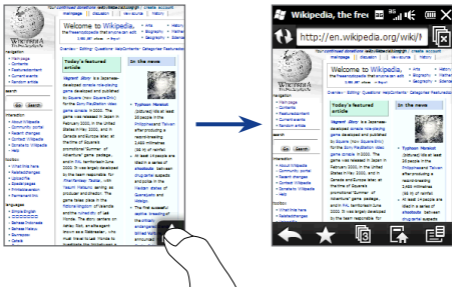


Use the Zoom bar below the touch screen to zoom in and out when viewing Web pages. Zoom in by sliding your finger from left to right across the Zoom bar, or zoom out by sliding from right to left

## 11. Get Your Messages Across

Keep in touch with the important people in your life.

### Sending text messages

Send short text messages (SMS) to other mobile phones. If your message exceeds 160 characters, your text message is delivered as one but will be billed as more than one message.

1. On the Home screen, slide to the **Messages** tab and then tap .
2. In the **To** field, enter a mobile phone number, or tap **To** and select a contact from the Contacts list.
3. Compose your message and then tap **Send**.

### Sending multimedia messages

Send multimedia messages (MMS) that include photos, videos, or audio clips.

1. On the Home screen, slide to the **Messages** tab and then tap **All Messages**.
2. Tap **Menu > New > MMS**, and then tap **Custom**.
3. Enter the recipient's mobile number or email address in the **To** field and enter a subject.
4. Fill in the MMS message slide by tapping **Insert picture/video**, **Insert text here**, and **Insert audio**.
5. When finished, tap **Send**.

### Setting up and using email

Set up email accounts on your phone, which can include your personal email and your work accounts. (Refer to the User Manual PDF to learn how to set up your Outlook work account.)


### To set up an Internet email account

1. On the Home screen, slide to the **Mail** tab.
2. If this is your first time to set up an email account, tap **New Account**. Otherwise, tap **Menu > New Account**.
3. Select an email provider. If your email provider is not listed, tap **Other**.
4. Enter your email address and password, and then tap **Next**.
5. Enter your name and the account display name, and then tap **Next**.

**Note** If the type of email account you want to set up is not in the phone database, the subsequent screens will prompt you to enter more details, such as the incoming and outgoing email server settings. Obtain these settings from your email provider.

6. Choose how frequent you want your phone to automatically send and receive email.
7. Tap **Done**.

### To send email

1. On the Home screen, slide to the **Mail** tab and tap an email account to use on the right side of the screen.
2. Tap  to create a new email message.
3. Tap **To**. Select a contact that has a stored email address or select an email group.
4. Enter your subject and message, and then tap **Send**.

## 12. Sync With Your Computer

You can take information from your computer wherever you go by synchronizing it to your phone.

To find out how you can download and install Microsoft ActiveSync (for Windows XP) or Windows Mobile Device Center (for Windows Vista) on your computer, visit the following website:

<http://www.windowsmobile.com/getstarted>

### Setting up ActiveSync

1. Connect your phone to your computer. The Synchronization Setup Wizard automatically starts. Click **Next** to proceed.
2. To sync your phone with your computer, clear the **Synchronize directly with a server running Microsoft Exchange** check box, then click **Next**.
3. Select the information types that you want to sync, then click **Next**.
4. Select or clear the **Allow wireless data connections** check box according to your preference.
5. Click **Finish**.

 
### Setting up Windows Mobile Device Center

1. Connect your phone to your computer. Windows Mobile Device Center configures itself, then opens.
2. On the license agreement screen, click **Accept**.
3. On the Windows Mobile Device Center's Home screen, click **Set up your device**.
4. Select the items you want to sync and then click **Next**.
5. Enter a name for your phone and then click **Set Up**.

## 13. How to Reset Your Phone

Perform a soft reset to clear all active program memory and shut down all active programs. This is useful when your phone is running slower than normal, or a program is not performing properly.

1. Lift open the top of the back cover to remove the back cover.
2. Remove the stylus to reveal the RESET button that is located at the bottom of the stylus compartment.
3. Use the stylus tip to press the RESET button.

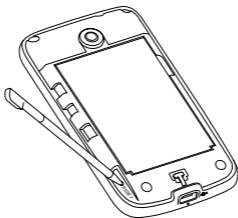

Your phone restarts and displays the Home screen.

4. Replace the back cover and insert the stylus back into its compartment.

**Note** Refer to the “Managing Your Phone” chapter in the User Manual PDF if you need instructions on performing a clear storage or hard reset. Please be informed that after performing either action, all your data will be deleted and your phone will be set back to factory default settings. Make sure you back up first any additional installed programs, your data, and your files before you perform either action.

## 14. Troubleshooting Tips

Below are basic troubleshooting tips and additional information to help you understand more about your phone.

- Q.** What should I do if the phone hangs or is operating slowly?
- You can try restarting your phone or free up memory on the phone.
  - Try uninstalling extra plug-ins from the phone to eliminate any functional instability that they may cause.
  - After backing up your data and files, tap **Start > Settings > System > Clear Storage** to restore the phone to its factory default settings. If your phone hanged and you are unable to enter Windows Mobile, perform a hard reset. For more information about hard reset, refer to the “Managing Your Phone” chapter in the User Manual PDF.
- Q.** The phone’s standby time seems to be decreasing.
- Standby time may differ, depending on how you use your phone. Turning on and using wireless functions such as Bluetooth or Wi-Fi will use up the battery faster.
  - Long duration calls, camera usage, Internet connection, and more will use up the battery faster.
  - Batteries are consumable items and should be replaced every eight months to a year.
  - For more information, you can also visit HTC’s support website. On the support website, select your phone model and refer to the “FAQs”.

- Q. The phone heats up when I'm charging the battery or when I'm making long duration calls.
- It is normal for the phone to heat up during charging. After charging, it will return to its normal temperature.
  - It is normal for the phone to heat up when you are using the same function for a long time, such as making long duration calls or recording a long video clip.
  - Please rest assured that all HTC phones are factory tested before released.

## Appendix: Safety and Other Notices

### Disclaimers

THE WEATHER INFORMATION, DATA AND DOCUMENTATION ARE PROVIDED "AS IS" AND WITHOUT WARRANTY OR TECHNICAL SUPPORT OF ANY KIND FROM HTC. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HTC AND ITS AFFILIATES expressly disclaim any and all representations and warranties, express or implied, arising by law or otherwise, regarding the Weather Information, Data, Documentation, or any other Products and services, including without limitation any express or implied warranty of merchantability, express or implied warranty of fitness for a particular purpose, non-infringement, quality, accuracy, completeness, effectiveness, reliability, usefulness, that the Weather Information, Data and/or Documentation will be error-free, or implied warranties arising from course of dealing or course of performance.

Without limiting the foregoing, it is further understood that HTC and its Providers are not responsible for Your use or misuse of the Weather Information, Data and/or Documentation or the results from such use. HTC and its Providers make no express or implied warranties, guarantees or affirmations that weather information will occur or has occurred as the reports, forecasts, data, or information state, represent or depict and it shall have no responsibility or liability whatsoever to any person or entity, parties and non-parties alike, for any inconsistency, inaccuracy, or omission for weather or events predicted or depicted, reported, occurring or occurred. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, YOU ACKNOWLEDGE THAT THE WEATHER INFORMATION, DATA AND/OR DOCUMENTATION MAY INCLUDE INACCURACIES AND YOU WILL USE COMMON SENSE AND FOLLOW STANDARD SAFETY PRECAUTIONS IN CONNECTION WITH THE USE OF THE WEATHER INFORMATION, DATA OR DOCUMENTATION.

### Important Health Information and Safety Precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

### ELECTRICAL SAFETY

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

### SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

**CAUTION:** Connecting to an improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

### SAFETY PRECAUTIONS FOR POWER SUPPLY UNIT

#### • Use the correct external power source

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

#### • Handle battery packs carefully

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 60°C (140°F).



**WARNING:** Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.



### • Take extra precautions

- Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- The phone should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.
- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult the doctor immediately if the battery is swallowed.
- If the battery leaks:
  - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
  - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
  - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

### SAFETY PRECAUTIONS FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

### PREVENTION OF HEARING LOSS



**CAUTION:** Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

**NOTE:** For France, Earphone (listed below) for this device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1.

- Earphone, manufactured by HTC, Model HS G235.

### **SAFETY IN AIRCRAFT**

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when on board an aircraft, remember to turn off your phone by switching to Airplane Mode.

### **ENVIRONMENT RESTRICTIONS**

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fuelling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

### **EXPLOSIVE ATMOSPHERES**

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **ROAD SAFETY**

Vehicle drivers in motion are not permitted to use telephony services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

### **SAFETY PRECAUTIONS FOR RF EXPOSURE**

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.

- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

### **INTERFERENCE WITH MEDICAL EQUIPMENT FUNCTIONS**

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### **HEARING AIDS**

 
Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

### **NONIONIZING RADIATION**

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

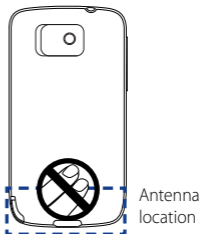

### General Precautions

- **Avoid applying excessive pressure to the device**

Do not apply excessive pressure on the screen and the device to prevent damaging them and remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use the device stylus or your finger when interacting with the touch screen. Cracked display screens due to improper handling are not covered by the warranty.

- **Device getting warm after prolonged use**

When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery or browsing the Web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.

- **Heed service markings**

Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself. Service needed on components inside the device should be done by an authorized service technician or provider.

- **Damage requiring service**

Unplug the product from the electrical outlet and refer servicing to an authorized service technician or provider under the following conditions:

- Liquid has been spilled or an object has fallen onto the product.
- The product has been exposed to rain or water.
- The product has been dropped or damaged.

- There are noticeable signs of overheating.
- The product does not operate normally when you follow the operating instructions.

- **Avoid hot areas**

The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

- **Avoid wet areas**

Never use the product in a wet location.

- **Avoid using your device after a dramatic change in temperature**

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

**NOTICE:** When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.

- **Avoid pushing objects into product**

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

- **Mounting accessories**

Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

- **Avoid unstable mounting**

Do not place the product with an unstable base.

- **Use product with approved equipment**

This product should be used only with personal computers and options identified as suitable for use with your equipment.

- **Adjust the volume**

Turn down the volume before using headphones or other audio devices.

- **Cleaning**

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

### Regulatory Agency Identifications

For regulatory identification purposes, your product is assigned a model number of **PB74100**.

To ensure continued reliable and safe operation of your device, use only the accessories listed below with your **PB74100**.

The Battery Pack has been assigned a model number of **TOPA160**.

**Note** This product is intended for use with a certified Class 2 Limited Power Source, rated 5 Volts DC, maximum 1 Amp power supply unit.

### Telecommunications & Internet Association (TIA)

#### Safety Information

##### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference. If you have any reason to suspect that interference is taking place, turn the phone OFF immediately.

##### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

##### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn the phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## WEEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal.



The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

## RoHS Compliance

This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

[www.htc.com](http://www.htc.com)



90H01304-06M Rev.A