 


HTC HD2

Quick Start Guide

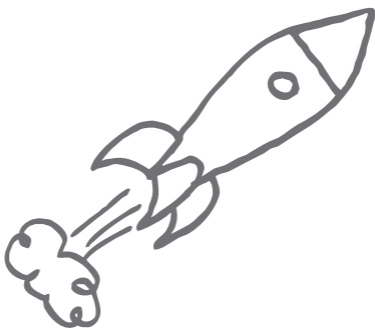

htc
quietly brilliant

Please Read Before Proceeding

THE BATTERY IS NOT FULLY CHARGED WHEN YOU TAKE IT OUT OF THE BOX.

DO NOT REMOVE THE BATTERY PACK WHEN THE PHONE IS CHARGING.

YOUR WARRANTY IS INVALIDATED IF YOU DISASSEMBLE OR ATTEMPT TO DISASSEMBLE THE DEVICE.

PRIVACY RESTRICTIONS

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your phone.

Limitation of Damages

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HTC OR ITS PROVIDERS BE LIABLE TO USER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES OF ANY KIND, IN CONTRACT OR TORT, INCLUDING, BUT NOT LIMITED TO, INJURY, LOSS OF REVENUE, LOSS OF GOODWILL, LOSS OF BUSINESS OPPORTUNITY, LOSS OF DATA, AND/OR LOSS OF PROFITS ARISING OUT OF, OR RELATED TO, IN ANY MANNER, OR THE DELIVERY, PERFORMANCE OR NONPERFORMANCE OF OBLIGATIONS, OR USE OF THE WEATHER INFORMATION, DATA OR DOCUMENTATION HEREUNDER REGARDLESS OF THE FORESEEABILITY THEREOF.

*** IMPORTANT REMINDER ***

Many applications on the phone need a constant Internet connection. **It is strongly recommended** that you subscribe to a flat-rate (or unlimited) data plan. If you're on a standard data plan, you may incur significant data connection charges when the phone accesses the Internet. We strongly advise you to check with your mobile operator for the data rates first before using phone applications that access the Internet.

Contents

 
1. Inside the Box.....	4
2. Get to Know Your Phone	4
3. Before You Turn On Your Phone	5
4. Get Started	8
5. Start Screen	9
6. Lock Screen.....	9
7. Get Your Contacts into the Phone.....	10
8. Experience HTC Sense	11
9. Get On the Internet.....	20
10. Get Your Messages Across	22
11. Use the Camera	25
12. Share Photos and Videos on Facebook, Twitter, and YouTube.....	27
13. Manage Your Phone's Wireless Controls.....	30
14. Sync With Your Computer	31
15. How to Reset Your Phone	32
16. Troubleshooting Tips	33
Appendix: Safety and Other Notices.....	35

1. Inside the Box

- HTC HD2 phone with battery
- USB sync cable
- AC adapter
- Power plug
- 3.5 mm stereo headset
- microSD card
- Pouch
- Quick Start Guide

2. Get to Know Your Phone


You will find the following controls on the front panel:

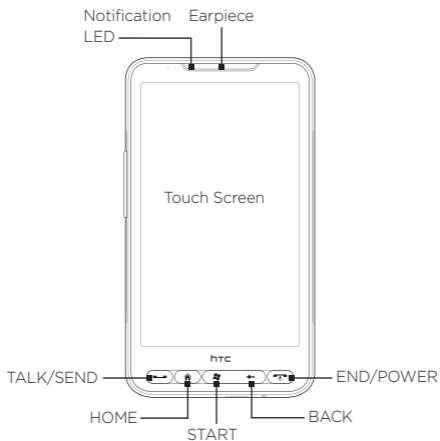

VOLUME UP and DOWN buttons for adjusting volume are located on the left panel of the phone.


The audio jack on the bottom panel allows you to connect the supplied 3.5mm stereo headset. On the bottom panel, there is also a sync connector for charging your phone's battery or for connecting your phone to the computer.

 3. Before You Turn On Your Phone

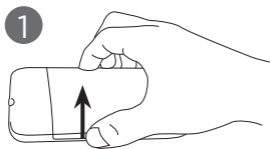


Take the back cover off

 1. Hold your phone securely with the front facing down.
2. With your thumb or finger, open the back cover by lifting up from the left side of the cover.

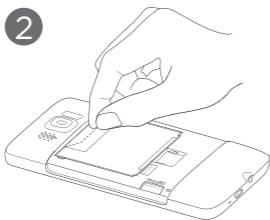

Remove the thin film and battery

 
1. Pull the upper flap of the thin film to disengage the battery from the phone, along with the film.
2. Remove and discard the film.
3. Remove the battery.

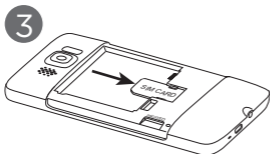

Put the SIM card in

1. Insert the SIM card with its gold contacts facing down and its cut-off corner facing out.
2. Slide the SIM card completely into the slot.

 
4

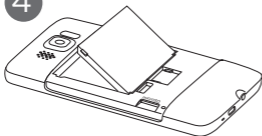

Put the battery back in

1. Align the battery's exposed copper contacts with the battery connectors inside the battery compartment.
2. Insert the contact side of the battery first then gently push the battery into place.

 
5

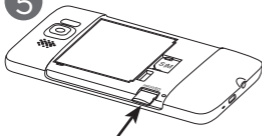

Insert the microSD card


Insert the microSD card into the slot with its gold contacts facing down and push it in until it clicks into place.

 6

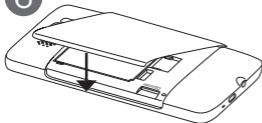

Put the back cover on

 Secure the right side of the back cover first and then press down the cover into place.

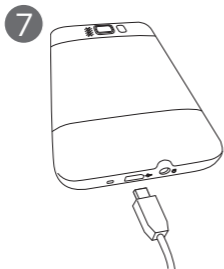

Charge the battery

1. Attach the power plug to the AC adapter.
2. Connect one end of the USB sync cable to the sync connector on your phone.
3. Connect the other end of the USB sync cable to the USB port of the AC adapter.
4. Plug in the AC adapter to an electrical outlet to start charging the battery.

After installing the SIM card, battery, and microSD card and charging the battery, you are now ready to turn on your phone for the first time. Read on and learn what you can do with your phone.

 
4. Get Started



Press the END/POWER button to turn on your phone.

When you turn on your phone for the first time:

- If you did not insert your SIM card and you turned on your phone for the first time, your phone displays a tutorial showing how to install the SIM card and battery. Turn off your phone, insert your SIM card, and reinsert the battery before proceeding to use the phone.
- Your phone automatically sets up GPRS/3G, MMS, and WAP connections based on your SIM card.
- Your phone walks you through a tutorial on how to use the onscreen keyboard. Follow through the tutorial to learn how to use the onscreen keyboard.
- Your phone guides you to connect to a Wi-Fi network, if available, and lets you set up your email accounts and favorite social networks such as Facebook®, YouTube™, and Twitter™. Follow the onscreen instructions to set up and log into your accounts, or you can skip the setup and do it at another time.
- Some phone features such as Weather and Footprints require Google's location service to automatically determine your current location. You can choose whether to allow Google's location service to collect information about your location.
- Your phone attempts to auto detect your time zone and set the time automatically. Set your local time if auto detection is unsuccessful.
- When your phone displays the Web address from which the PC synchronization software can be downloaded, note down the Web address so you can download and install it on your computer.

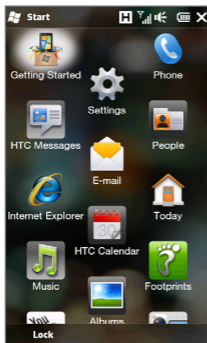
5. Start Screen

 


Tap the **Start** icon () on the top-left corner of the screen or press the **START** () button on your phone to open the Start screen. The Start screen gives you access to the essential features and programs of your phone.

6. Lock Screen

The Lock screen is displayed whenever your phone is locked. This prevents accidental button or touch screen presses.

Your phone automatically locks when the display is turned off (automatically or you have pressed the END/POWER button) and your phone goes to sleep mode. When you see the Lock screen, slide the **Lock** button () left or right to unlock your phone.

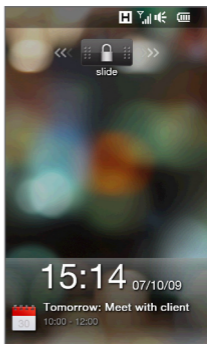


For more information about the Lock screen, refer to the “Getting Started” chapter in the User Manual PDF.

7. Get Your Contacts into the Phone

There are several ways you can add contacts to your phone.

Creating new contacts

You can create new contacts and enter their phone number, email address, and other details on your phone.

1. On the Home screen, slide to the **People** tab, tap **All People**, and then tap **New**.
2. To add a photo of the contact, tap the **Contact Photo** icon () on the upper-right corner of the New Contact Card screen. Choose whether to use the person's photo from Facebook, select a photo from Albums, or take the person's photo using the Camera.
3. Enter the contact details in the fields provided. You can also assign a ringtone to the contact.
4. When done, tap **Done**.

Tip On the New Contact Card screen, scroll down to the bottom of the screen and then tap **More** to enter additional contact details.

Synchronizing Outlook contacts

If you have Outlook contacts on your computer or the Exchange Server (Outlook work account), you can sync them with your phone. For more information about synchronizing your phone with your computer, see "Sync With Your Computer" in this guide. Refer to the User Manual PDF to learn how to sync your phone with the Exchange Server.

Synchronizing With Microsoft My Phone

Microsoft® My Phone syncs information between your phone and a password-protected website hosted by Microsoft. You can back up and restore your contacts, calendar appointments, photos, and other information. Refer to the User Manual PDF for details.

8. Experience HTC Sense

HTC HD2 is the first Windows Mobile® phone to embody HTC Sense™, a holistic experience based on three core principles — make it mine, stay close, and discover the unexpected.

Make it mine

Personalized Home screen

See the time and weather of your current location on the weather clock of the Home screen. The Home screen also displays your upcoming appointment. Tap the respective item when you want to change the weather clock to display another location, update the weather information, or access the Calendar.



Essential features that you commonly use, such as **People**, **Messages**, **Mail**, **Internet**, and more, are readily accessed up front on the Home screen. The tabs at the bottom of the Home screen correspond to the different phone features. Simply press and hold the active tab and then slide your finger right or left to the feature you want to use. You can also directly tap a tab.



 
You can also personalize the Home screen with an animated or picture wallpaper (by tapping **Menu > Home Wallpaper**), rearrange the tabs, as well as add quick links to people who matter most to you, your favorite websites, and applications.

Stay close


It's all about people

Bringing people who matter most closer to you – that's what your phone is all about.


Put people you keep in touch with often up front on your Home screen's **People** tab. Simply tap the photo of a contact to quickly place a call or create a new message to send to this contact.

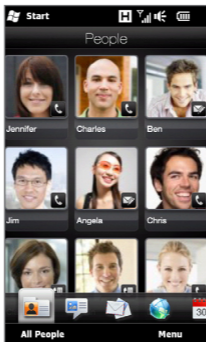


Since your phone organizes text and multimedia messages, email conversations, and phone logs of a contact all in one place, you get to see at a glance all communications with that person. Your phone also keeps you in tune with your social circles by seamlessly integrating Facebook information into the personal details of your stored contacts. You can instantly see what they're doing and know whether they have new photos or other updates. More importantly, you are well informed about their birthday and other important events.

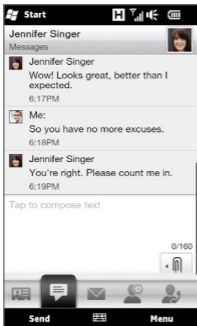 


Text messages

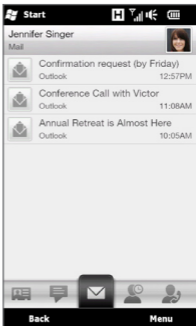 

Email

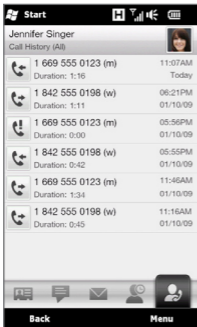 

Calls

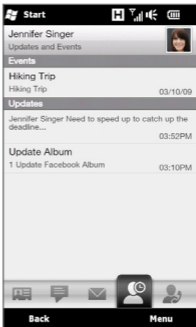 


Facebook updates and events

Sending messages to multiple contacts is made easier, too. Slide to the **Groups** tab and create a group of selected contacts so you can easily send a text, multimedia, or email message to the group without having to add the addressed contacts to your message one by one.

Social networking

 Enjoy twittering directly from your phone.

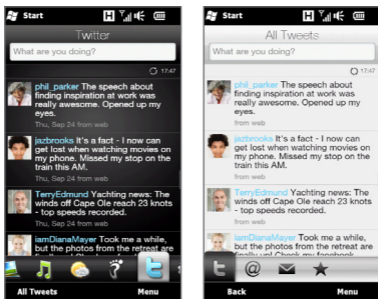


With the phone's high-resolution camera, you can take a photo and immediately upload it to your Facebook album. While twittering, you can also send a photo with your tweet message. What's more, you can capture a video and share it on YouTube. See "Share Photos and Videos on Facebook, Twitter, and YouTube" in this guide for details.

Discover the unexpected

Smart Dial

 Your phone also makes it quick and easy to go from reading a text, multimedia or email message to calling the sender (if the sender's phone number is stored in your contacts). While viewing the message, press the TALK/SEND button to call the sender.

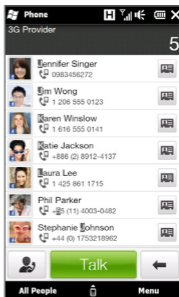

Onscreen keyboard

 
 
To enter text, choose from three onscreen keyboard layouts: Full QWERTY, Compact QWERTY, and Phone Keypad.

The onscreen keyboard offers word prediction and auto correction features, helping you type faster and more accurately. Don't worry about pressing the right key every time—just get close and let the onscreen keyboard do the rest.



Full QWERTY

When you're filling in the recipient in your message, you simply need to input the first few letters of the recipient's name. A matching list of names from your stored contacts will be displayed. Tap the recipient's number or email address to which you want to send your message.

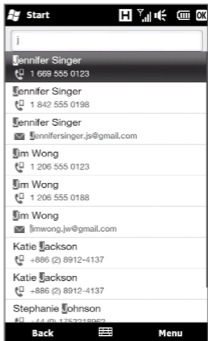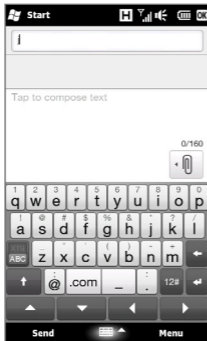

Internet and multimedia entertainment on the big screen

With the high-resolution, extra large screen of your phone, you get full enjoyment when surfing the Web and playing multimedia.


When viewing Web pages, glancing through your photos and videos, or browsing through music albums, you can turn your phone sideways to the left to change the screen to landscape view.



Swipe your finger left or right across the screen when flipping through photos, videos, or music albums in landscape view.

Tap a photo, video, or music album to bring it up to the center of the screen.



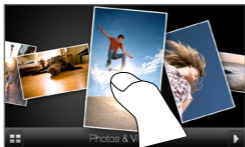 

Tap the center photo or video to view it in full screen, or tap the center album to display the music tracks in that album and start listening to the music.

Pinch zooming

The capacitive touch screen of your phone is built for pure finger touch control. When you're viewing Web pages, photos, messages, or documents, zoom in and out freely with just a simple pinch of your fingers. Using your thumb and index finger, press on the touch screen and spread your fingers apart to zoom in. Pinch your fingers together to zoom out.



 
Zooming in




Zooming out

On certain screens wherein some onscreen controls or icons appear small and hard to tap on, you can also use pinch zooming to zoom in and out. After zooming in, the onscreen control or icon becomes larger and you can easily tap it with your finger. You will also see a small preview window, and you can

drag your finger around this window to pan around the zoomed screen.

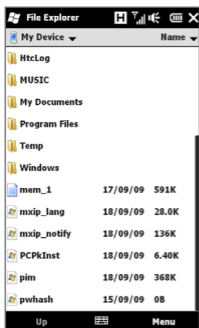

Normal screen

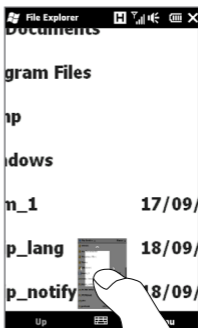 

Zoomed screen

Note When holding your phone in one hand and scrolling with the thumb of the same hand, be careful not to touch the screen with your other fingers or palm, as the phone may interpret this as a pinch zooming gesture.

HTC Footprints

Use HTC Footprints™ to record the chronicles of your life. Wherever you go, you can take photos of the places you visited and store their GPS location and other details to your phone. From the Home screen's **Footprints** tab, you can then easily flip through the photos and find your favorite places again.

For more information about using Footprints, refer to the "Finding and Recording Places" chapter in the User Manual PDF.



Simply intuitive

Some design features of HTC HD2 are far better experienced than can ever be explained. Like the ringer volume level that scales down when the phone detects that you have picked it up, or the display that automatically adjusts to the light level in your surroundings and turns off to prevent false screen touches during a call. It's also the capacitive touch experience combined with an interface optimized for the spacious display that lets you easily adjust the settings, set up calendar appointments, browse through photos, and navigate through menus with only the touch of a finger.

9. Get On the Internet

Connect to the world through a data connection or Wi-Fi connection. Browse the Web, download applications from Windows® Marketplace, and send/receive email.

Using a data connection

Your phone automatically connects to the Internet using 3G/GPRS/EDGE when you begin using a function that accesses the Internet such as email or the Web browser.

To save battery life, you can switch off the data connection when not in use. On the Home screen, slide to the **Settings** tab, tap **Wireless controls**, and then tap the Data connection option's **Off/On** slider.


Using Wi-Fi

 
If you skipped Wi-Fi setup when you first turned on your phone, follow the steps below to connect your phone to a Wi-Fi network.

1. On the Home screen, slide to the **Settings** tab and then tap **Wireless controls**.
2. Tap **Wi-Fi**. Detected wireless networks are displayed on the screen.
3. Tap the desired Wi-Fi network.
 - If you selected an open (unsecured) network, you are automatically connected to the network.
 - If you selected a secured network, enter the security key and then tap **Done**. You are then connected to the network.

Browsing the Web

Experience rich Internet browsing with Opera Mobile™. On the Home screen, slide to the **Internet** tab and then tap **Launch Browser** to open Opera Mobile.

Opera Mobile displays in two modes: full-screen and normal viewing modes. Full-screen mode hides the address bar and the browser controls. To change from full-screen to normal viewing mode, tap the **Restore** icon () at the bottom right corner of the browser screen.

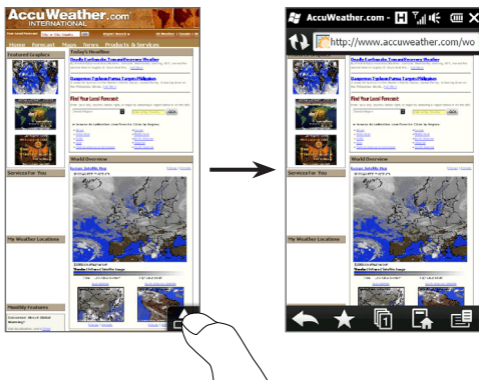


While viewing a Web page in full screen, press both your thumb and index finger on the touch screen and spread your fingers apart to zoom in. Pinch your fingers together to zoom out.

10. Get Your Messages Across

Keep in touch with the important people in your life.


Sending text messages


Send short text messages (SMS) to other mobile phones. If you exceed the limit on the number of characters for a single text message, your text message will be delivered as one but will be billed as more than one message.

1. On the Home screen, slide to the **Messages** tab and then tap the **New Message** icon () on the upper right side of the screen.
2. In the **To** field, enter the recipient's mobile phone number. You can also enter the first few letters of the recipient's name to display a matching list of names from your stored contacts, and then tap the recipient's mobile phone number to which you want to send your message.
3. Tap the text box that shows "Tap to compose text", and then enter your message.
4. When you have finished composing your text message, tap **Send**.

Sending multimedia messages

Send multimedia messages (MMS) that include photos, videos, or audio clips.

1. On the Home screen, slide to the **Messages** tab and then tap the **New Message** icon () on the upper right side of the screen.
2. In the **To** field, enter the recipient's mobile phone number or email address. You can also enter the first few letters of the recipient's name to display a matching list of names from your stored contacts, and then tap the recipient's mobile phone number or email address to which you want to send your message.

3. Tap the **Attach** button () and then choose what you want to insert to the multimedia message: photo, video, audio, contact details, calendar appointment, or slideshow.
4. When you have finished composing your multimedia message, tap **Send**.

Setting up and using email

Set up email accounts on your phone, which can include your personal email and your work accounts. (Refer to the User Manual PDF to learn how to set up your Outlook work account.)


To set up an Internet email account

1. On the Home screen, slide to the **Mail** tab.
2. If this is your first time to set up an email account, tap **Add Account**. Otherwise, tap **Menu > Add Account**.
3. Select an email provider. If your email provider is not listed, tap **Other**.
4. Enter your email address and password, and then tap **Next**.
5. Enter your name and the account display name, and then tap **Next**.

Note If the type of email account you want to set up is not in the phone database, the subsequent screens will prompt you to enter more details, such as the incoming and outgoing email server settings. Obtain these settings from your email provider.

6. Choose how often you want your phone to automatically send and receive email.
7. Tap **Done**.


To send email

 
1. On the Home screen, slide to the **Mail** tab and tap an email account to use on the right side of the screen.
2. Tap the **New Email** icon () to create a new email message.
3. Tap **To** and then select a contact or an email group.
In the **To** field, you can also enter the first few letters of the recipient's name to display a matching list of names from your stored contacts, and then tap a recipient to automatically fill in the person's email address.
4. Enter your subject and message, and then tap **Send**.

11. Use the Camera


Whether traveling for business or fun, enjoy taking photos and capturing videos of your trip and encounters with your phone's 5 megapixel camera.

Taking a photo

1. On the Home screen, slide to the **Photos and Videos** tab and then tap the **Camera** icon ().
2. Let the camera auto focus on your subject at the center of the viewfinder screen, or you can freely select any area to focus on by tapping the area that you want on the viewfinder screen.

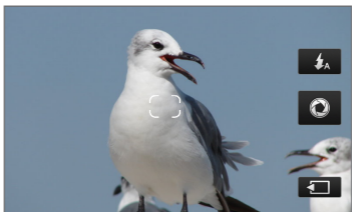


Auto focus

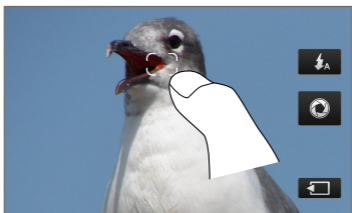 



Touch focus

Note If you tap outside the effective focus area, a white box appears to indicate the boundary where you can use Touch Focus.

3. Press the **Virtual Camera** button () shortly to immediately take the photo, or press and hold the **Virtual Camera** button to refocus and then take the photo.

Capturing video

1. On the Home screen, slide to the **Photos and Videos** tab and then tap the **Camcorder** icon ().
2. Point the camera at your subject.
3. Press the **Virtual Camera** button () shortly to immediately start capturing video, or press and hold the **Virtual Camera** button to refocus and then begin capturing.
4. To stop capturing, press the **Virtual Camera** button again.

To learn more about using the camera, refer to the “Camera and Multimedia” chapter in the User Manual PDF.

12. Share Photos and Videos on Facebook, Twitter, and YouTube

Directly from your phone, you can easily share your photos on Facebook and Twitter. You can also upload videos to YouTube.


Logging into your social networks

If you skipped setting up your social network accounts when you turned on your phone for the first time, you need to log in first to your accounts before you can upload and share your photos and videos.

1. On the Home screen, slide to the **Settings** tab and then tap **Data services**.
2. Log in to Facebook, YouTube, and Twitter one at a time. Tap the Off/On slider that appears to the right of each of these social networks. On the subsequent screen, enter your username and password and then tap **Login**.

Uploading photos to Facebook

After taking a photo with your phone's Camera, you can upload the photo to Facebook. Use Albums when you want to upload several photos at the same time.

1. Open the Camera and take a photo. For instructions, see "Use the Camera" in this guide.
2. After taking a photo, tap the **Send** icon (), select **Upload to Facebook**, and then tap **Send**.
3. To share several photos, slide to the **Photos and Videos** tab on the Home screen, and then tap **Albums** on the bottom left of the screen.



In Albums, tap **Menu > Share > Facebook**, tap each of the photos you want to share, and then tap **Upload**.

After upload is complete, use the Web browser to log into your Facebook account if you want to check and browse through the uploaded photos in Facebook.

You will see them on the main Home page. You will also find them grouped under the “Mobile Uploads” album.

Uploading a photo to Twitter


You can upload only one photo at a time on Twitter. Create a new tweet first, and then select a photo or use the Camera to take a photo. Your phone uploads the photo to a photo hosting service and then inserts its URL location into the tweet.

1. On the Home screen, slide to the **Twitter** tab.
2. Tap **Menu > New Tweet**. If you want to enter a tweet, type your text into the provided box.
3. Tap the **Camera** button ().
4. If you do not see the photo that you want on the subsequent screen, first tap **Albums** and select the album that contains the photo you want to share.
5. When you see the photo that you want, tap the photo to select it. You can also tap the **Camera** icon () on the upper-left corner of the screen to use the Camera and take a photo.
6. Your phone then begins uploading the photo to the Twitter photo host. When the upload is done, the URL location of the photo is then entered to your tweet message.
7. Tap **Update** to send your tweet along with the URL of the photo so other people can see it in Twitter.

If you return to the Home screen's **Twitter** tab and tap **All tweets**, you will see the sent tweet that contains the URL of the shared photo.

Uploading videos to YouTube

You can use Camera to capture a video and immediately share it on YouTube. Use Albums when you want to upload several videos at the same time.

1. Open the Camera and capture a video. For instructions, see “Use the Camera” in this guide.
2. After capturing a video, tap the **Send** icon (), select **Upload to YouTube**, and then tap **Send**.
3. On the Video Upload screen, enter a descriptive title and tags for the video. Also tap the Off/On slider to set whether to make this video public to everyone.
4. Tap **Upload**.

 
To share several videos, slide to the **Photos and Videos** tab on the Home screen, and then tap **Albums** on the bottom left of the screen. In Albums, tap **Menu > Share > YouTube**, tap each of the videos you want to share, tap **Next**, and then follow steps 3 and 4 above to upload the videos to YouTube.

After upload is complete, use the Web browser to log into your YouTube account if you want to check and view the uploaded videos. You will find them grouped under “Uploaded Videos” in your account’s History.

13. Manage Your Phone's Wireless Controls

Comm Manager lets you easily turn on and off the wireless communication features of your phone such as Wi-Fi, Bluetooth, data connection, and more. On the Home screen, slide to the **Settings** tab and then tap **Wireless controls** to open Comm Manager.

On the Comm Manager screen, tap the left side to configure the listed settings. Tap the Off/On slider on the right to turn a function on or off.

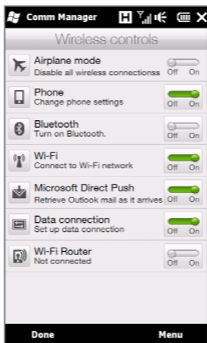

For more information about using the Comm Manager, refer to the “Managing Your Phone” chapter in the User Manual PDF.

Tip With **Wi-Fi Router** on the Comm Manager, you can set up your phone as a wireless router so that your computer can connect through Wi-Fi to your phone and use the phone's data connection to access the Internet. For more information, refer to the “Internet and Social Networking” chapter” in the User Manual PDF.

14. Sync With Your Computer

You can take information from your computer wherever you go by synchronizing it to your phone.

To find out how you can download and install Microsoft ActiveSync (for Windows XP) or Windows Mobile Device Center (for Windows Vista) on your computer, visit the following website:

<http://www.windowsmobile.com/getstarted>

Setting up ActiveSync

1. Connect your phone to your computer. The Synchronization Setup Wizard automatically starts. Click **Next** to proceed.
2. To sync your phone with your computer, clear the **Synchronize directly with a server running Microsoft Exchange** check box, then click **Next**.
3. Select the information types that you want to sync, then click **Next**.
4. Select or clear the **Allow wireless data connections** check box according to your preference.
5. Click **Finish**.

 
Setting up Windows Mobile Device Center

1. Connect your phone to your computer. Windows Mobile Device Center configures itself, then opens.
2. On the license agreement screen, click **Accept**.
3. On the Windows Mobile Device Center's Home screen, click **Set up your device**.
4. Select the items you want to sync and then click **Next**.
5. Enter a name for your phone and then click **Set Up**.

15. How to Reset Your Phone

Perform a soft reset to clear all active program memory and shut down all active programs. This is useful when your phone is running slower than normal, or a program is not performing properly.

1. With your thumb or finger, open the back cover by lifting up from the left side of the cover.
2. The RESET button is located at the bottom left below the battery compartment and SIM card slot. Use a small object with an unsharp, pointed tip such as a toothpick to press the RESET button.

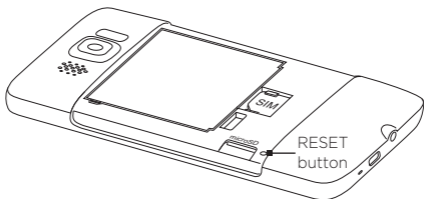

Your phone restarts and displays the Home screen.

3. To replace the back cover, secure the right side of the back cover first and then press down the cover into place.

Note Refer to the “Managing Your Phone” chapter in the User Manual PDF if you need instructions on performing a clear storage or hard reset. Please be informed that after performing either action, all your data will be deleted and your phone will be set back to factory default settings. Make sure you back up first any additional installed programs, your data, and your files before you perform either action.

16. Troubleshooting Tips

Below are basic troubleshooting tips and additional information to help you understand more about your phone.

Q. What should I do if the phone hangs or is operating slowly?

- You can try restarting your phone or free up memory on the phone.
- Try uninstalling extra plug-ins from the phone to eliminate any functional instability that they may cause.
- After backing up your data and files, restore the phone to its factory default settings. From the Home screen, slide to the **Settings** tab, tap **Security > Factory reset**, and then follow the onscreen instructions to restore your phone to factory default settings. If your phone hanged and you are unable to enter Windows Mobile, perform a hard reset. For more information about hard reset, refer to the “Managing Your Phone” chapter in the User Manual PDF.

Q. The phone’s standby time seems to be decreasing.

- Standby time may differ, depending on how you use your phone. Turning on and using wireless functions such as Bluetooth or Wi-Fi will use up the battery faster.
- Long duration calls, camera usage, Internet connection, and more will use up the battery faster.
- Batteries are consumable items and should be replaced every eight months to a year.
- For more information, you can also visit HTC’s support website. On the support website, select your phone model and refer to the “FAQs”.

Q. The phone heats up when I'm charging the battery or when I'm making long duration calls.

- It is normal for the phone to heat up during charging. After charging, it will return to its normal temperature.
- It is normal for the phone to heat up when you are using the same function for a long time, such as making long duration calls or recording a long video clip.
- Please rest assured that all HTC phones are factory tested before released.

Appendix: Safety and Other Notices

Disclaimers

THE WEATHER INFORMATION, DATA AND DOCUMENTATION ARE PROVIDED "AS IS" AND WITHOUT WARRANTY OR TECHNICAL SUPPORT OF ANY KIND FROM HTC. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HTC AND ITS AFFILIATES expressly disclaim any and all representations and warranties, express or implied, arising by law or otherwise, regarding the Weather Information, Data, Documentation, or any other Products and services, including without limitation any express or implied warranty of merchantability, express or implied warranty of fitness for a particular purpose, non-infringement, quality, accuracy, completeness, effectiveness, reliability, usefulness, that the Weather Information, Data and/or Documentation will be error-free, or implied warranties arising from course of dealing or course of performance.

Without limiting the foregoing, it is further understood that HTC and its Providers are not responsible for Your use or misuse of the Weather Information, Data and/or Documentation or the results from such use. HTC and its Providers make no express or implied warranties, guarantees or affirmations that weather information will occur or has occurred as the reports, forecasts, data, or information state, represent or depict and it shall have no responsibility or liability whatsoever to any person or entity, parties and non-parties alike, for any inconsistency, inaccuracy, or omission for weather or events predicted or depicted, reported, occurring or occurred. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, YOU ACKNOWLEDGE THAT THE WEATHER INFORMATION, DATA AND/OR DOCUMENTATION MAY INCLUDE INACCURACIES AND YOU WILL USE COMMON SENSE AND FOLLOW STANDARD SAFETY PRECAUTIONS IN CONNECTION WITH THE USE OF THE WEATHER INFORMATION, DATA OR DOCUMENTATION.

Important Health Information and Safety Precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

ELECTRICAL SAFETY

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

CAUTION: Connecting to an improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

SAFETY PRECAUTIONS FOR POWER SUPPLY UNIT

- **Use the correct external power source**
A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.
- **Handle battery packs carefully**
This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 60°C (140°F).



WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.



- Take extra precautions
 - Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
 - Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
 - The phone should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
 - Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.
 - Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult the doctor immediately if the battery is swallowed.
 - If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
 - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

SAFETY PRECAUTIONS FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

PREVENTION OF HEARING LOSS



CAUTION: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

NOTE: For France, Earphone (listed below) for this device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1.

- Earphone, manufactured by HTC, Model RC E160.

SAFETY IN AIRCRAFT

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when on board an aircraft, remember to turn off your phone by switching to Airplane Mode.

ENVIRONMENT RESTRICTIONS

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fuelling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

EXPLOSIVE ATMOSPHERES

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

ROAD SAFETY

Vehicle drivers in motion are not permitted to use telephony services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

SAFETY PRECAUTIONS FOR RF EXPOSURE

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCE WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

HEARING AIDS

 
Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

NONIONIZING RADIATION

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

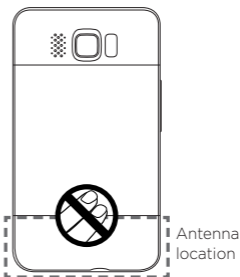

General Precautions

- **Avoid applying excessive pressure to the device**
Do not apply excessive pressure on the screen and the device to prevent damaging them and remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use the device stylus or your finger when interacting with the touch screen. Cracked display screens due to improper handling are not covered by the warranty.
- **Device getting warm after prolonged use**
When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery or browsing the Web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.
- **Heed service markings**
Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself. Service needed on components inside the device should be done by an authorized service technician or provider.

- **Damage requiring service**

Unplug the product from the electrical outlet and refer servicing to an authorized service technician or provider under the following conditions:

- Liquid has been spilled or an object has fallen onto the product.
- The product has been exposed to rain or water.
- The product has been dropped or damaged.
- There are noticeable signs of overheating.
- The product does not operate normally when you follow the operating instructions.

- **Avoid hot areas**

The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

- **Avoid wet areas**

Never use the product in a wet location.

- **Avoid using your device after a dramatic change in temperature**

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

NOTICE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.

- **Avoid pushing objects into product**

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

- **Mounting accessories**

Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

- **Avoid unstable mounting**

Do not place the product with an unstable base.

- **Use product with approved equipment**

This product should be used only with personal computers and options identified as suitable for use with your equipment.

- **Adjust the volume**

Turn down the volume before using headphones or other audio devices.

- **Cleaning**

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

Regulatory Agency Identifications

For regulatory identification purposes, your product is assigned a model number of **PB81100**.

To ensure continued reliable and safe operation of your device, use only the accessories listed below with your **PB81100**.

The Battery Pack has been assigned a model number of **BB81100**.

Note This product is intended for use with a certified Class 2 Limited Power Source, rated 5 Volts DC, maximum 1 Amp power supply unit.

Telecommunications & Internet Association (TIA) Safety Information

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference. If you have any reason to suspect that interference is taking place, turn the phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn the phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

WEEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal.



The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance

This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.



91H0xxxx-xxM Rev.A