Operating Instructions

future. To download any available updates and the Operating Instructions with advanced

http://www.sony.com/bluraysupport/















BDP-S3700/BDP-BX370/BDP-S1700

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only

Do not expose batteries or appliances with battery-installed to

excessive heat, such as sunshine and fire

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this Blu-ray Disc/DVD playe is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only




This label is located on the laser protective housing inside the





presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the

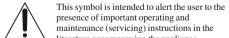

presence of important operating and aintenance (servicing) instructions in the terature accompanying the appliance.

Precautions • The nameplate is located on the bottom of the unit.

- To prevent fire or shock hazard, do not place objects filled with
- liquids, such as vases, on the apparatus. • Install this unit so that the AC adaptor can be unplugged from
- the wall socket immediately in the event of trouble.

For Customers in Canada

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions (1) This device may not cause interference: and 2) This device must accept any interference, including terference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different
- from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for

FCC Radiation Exposure Statement (BDP-S3700/BX370 only):

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipmen should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Contains FCC ID: PPQ-WN4636R

Important Safety Instructions

- 2) Keep these instructions
- 3) Heed all warnings.
- 4) Follow all instruction

produce heat.

- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance
- with the manufacturer's instruction 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that
- 9) Do not defeat the safety purpose of the polarized or groundin type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

• "BRAVIA" is a trademark of Sony Corporation.

licensed from Fraunhofer IIS and Thomson.

• MPEG Layer-3 audio coding technology and patents

· This product incorporates proprietary technology under

Patent 7,369,677 and other U.S. and worldwide patents

Verance Corporation. All rights reserved by Verance.

Reverse engineering or disassembly is prohibited.

· Windows Media is either a registered trademark or

license from Microsoft or an authorized Microsoft

and/or other countries.

subsidiary.

issued and pending as well as copyright and trade secret

trademark of Microsoft Corporation in the United States

This product is protected by certain intellectual property

rights of Microsoft Corporation. Use or distribution of such

technology outside of this product is prohibited without a

Content owners use Microsoft PlayReadyTM content access

technology to protect their intellectual property, including

protection for certain aspects of such technology. Cinavia is

a trademark of Verance Corporation. Copyright 2004-2010

license from Verance Corporation and is protected by U.S.

11)Only use attachments/accessories specified by the

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13) Unplug this apparatus during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

The model and serial numbers are located at the bottom of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your dealer regarding this product

Model No

For customers in the USA If this product is not working properly, please call 1-800-222-SONY(7669).

For Customers in Canada

If this product is not working properly, please contact our Customer Information Service Center at 1-877-899-7669 or write to us at: Customer Information Service 115 Gordon Baker Road, Toronto, Ontario, M2H 3R6

Copyrights and Trademarks

- Java is a trademark of Oracle and/or its affiliates.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



- The terms HDMI® and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countrie
- Blu-ray DiscTM, Blu-rayTM, BD-LIVETM, BONUSVIEWTM. and the logos are trademarks of the Blu-ray Disc Association
- "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation
- "DVD+RW," "DVD-RW," "DVD+R," "DVD-R," "DVD VIDEO," and "CD" logos are trademarks.

• DLNATM, the DLNA Logo and DLNA CERTIFIEDTM are trademarks, service marks, or certification marks of the



 Opera® Devices SDK from Opera Software ASA. Copyright 1995-2015 Opera Software ASA. All rights reserved



- BDP-S3700/BX370 only

Gracenote® End User License Agreement

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application or device to perform disc and/or file identification and obtain music- and/or video-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases. "Gracenote Servers"), and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device; the reception and display of the Gracenote Data on this application or device are not provided by Gracenote and falls solely within the responsibility and liability of the manufacturer hereof.



- · All other trademarks are trademarks of their respective
- or registered trademarks of the manufacturers. TM and ® marks are not indicated in this document.

etting Started

Remote

The available functions of the remote are different depending on the disc or the situation.

This application or device may contain content belonging to

herein with respect to Gracenote Data shall also apply to such

content, and said content providers shall be entitled to all of

Gracenote's providers. If so, all of the restrictions set forth

the benefits and protections that are available to Gracenote

hereunder. You agree that you will use Gracenote Data, the

Gracenote Software, and Gracenote Servers for your own

copy, transfer or transmit the Gracenote Software or any

USE OR EXPLOIT GRACENOTE DATA, THE

EXCEPT AS EXPRESSLY PERMITTED HEREIN.

Gracenote Data to any third party. YOU AGREE NOT TO

GRACENOTE SOFTWARE, OR GRACENOTE SERVERS

You agree that your non-exclusive license to use the Gracenote

terminates, you agree to cease any and all use of the Gracenote

Gracenote reserves all rights in Gracenote Data, the Gracenote

Software, and the Gracenote Servers, including all ownership

rights. Under no circumstances will Gracenote become liable

for any payment to you for any information that you provide.

You agree that Gracenote may enforce its rights under this

Agreement against you directly in its own name. Gracenote

advance notice and may block or modify access to Gracenote

Data; you do not have any claim against Gracenote arising out

may amend or remove Gracenote Data with or without

PLEASE NOTE that in order to use the Gracenote Data,

specific technical pre-requisites, such as this application or

telecommunication services and other third party services,

usually need to be used, for which additional cost, in particular

connection charges, can be incurred, which you will have to

of such change, removal, blocking or modification.

device, software programs, methods of transfer,

pay for separately. Gracenote does not provide such

applications or devices, software programs, methods of

transfer, telecommunication services or other services, and

does not accept any liability for services of third parties.

Gracenote is not responsible for the proper setup, connection

or (if applicable) equipment of this application or device so

that Gracenote Data may be received; this lies within your sole

The Gracenote service uses a unique identifier to track queries

for statistical purposes. The purpose of a randomly assigned

numeric identifier is to allow the Gracenote service to count

queries without knowing anything about who you are. For

each item of Gracenote Data are licensed to you "AS IS."

more information, see the web page for the Gracenote Privacy

Policy for the Gracenote service. The Gracenote Software and

Gracenote makes no representations or warranties, express or

implied, regarding the accuracy of any Gracenote Data from

the Gracenote Servers; the download or any other receipt of

at your own risk and you are solely responsible for any

content, in particular the download of Gracenote Data, is also

damage to this application or device or for any other damages.


including loss of data, arising out of such actions. Gracenote

Data, the Gracenote Software, and Gracenote Servers will

terminate if you violate these restrictions. If your license

Data, the Gracenote Software, and Gracenote Servers.

personal, non-commercial use only. You agree not to assign,

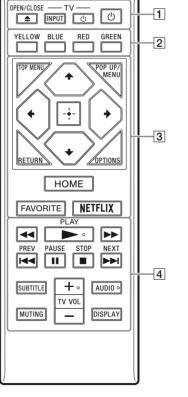

► PLAY, TV VOL +, and AUDIO buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

If any button on the player or remote is not pressed for more than 20 minutes, the player automatically returns

of the GPL or the LGPL.

-TV- INPUT

Switches between TV and other input sources.

Turns on the TV, or sets to standby mode.

() (on/standby)

Turns on the player, or sets to standby mode.

Shortcut keys for interactive functions.

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS

RETURN

←/////→

Moves the highlight to select a displayed item.

- and input track number during music CD playback.
- ←/→ as a shortcut key to perform search functions during DLNA video playback (BDP-S3700/BX370

Center button (ENTER)

Enters the selected item. HOME

Enters the player's home screen.

FAVORITE

NETFLIX

following website and check the FAO: http://www.sony.com/bluraysupport/

4 **◄◄/▶▶** (fast reverse/fast forward)

- Fast reverse/fast forward the disc when you press the button during playback. The search speed changes each time you press the button
- during video playback. • Plays in slow motion, when pressed for more
- than one second in pause mode. • Plays one frame at a time, when you press for a

► PLAY

Starts or re-starts playback.

I◀◀ PREV/NEXT ▶▶I Skips to the previous/next chapter, track, or file.

II PAUSE

Pauses or re-starts playback.

Stops playback and remembers the stop point The resume point for a title/track is the last point

you played or the last photo for a photo folder.

■ STOP

Selects the subtitle language when multi-lingual subtitles are recorded on BD-ROMs/DVD VIDEOs.

TV VOL +/-Adjusts the TV volume. **AUDIO**

Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOs

MUTING Turns off the sound temporarily.

DISPLAY Displays the playback information on the screen.

Selects the sound track on CDs.

To lock the disc tray (Child Lock)

You can lock the disc tray to avoid accidental opening of the tray. While the player is turned on, press \blacksquare STOP,

HOME, and then TOP MENU button on the remote to lock or unlock the tray.


Sony (Default)	Color button (YELLOW)
Hitachi	Color button (BLUE)
LG/Goldstar/NEC	Color button (RED)
Toshiba	Color button (GREEN)
RCA	TOP MENU
Mitsubishi/MGA	†
Pioneer	POP UP/MENU
Sharp	←
Panasonic	ENTER
Samsung	→
Philips	RETURN

Step 1: Connecting the Player

Do not connect the AC adaptor until you have made all the connections.

Connecting to your TV


Connect the player to your TV with a High Speed HDMI Cable.

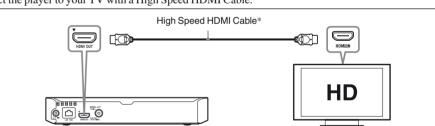

* See "Supplied accessories" (page 15).

Connecting to your AV amplifier (receiver)

Select one of the following connection methods according to the input jacks on your AV amplifier (receiver). When you select **A** or **B**, make the appropriate settings in [Audio Settings]

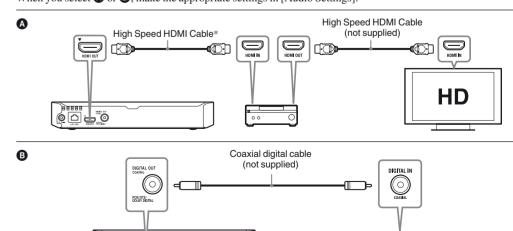

* See "Supplied accessories" (page 15)

The software of this player may be updated in the features, please visit the following website









IC Radiation Exposure Statement

(BDP-S3700/BX370 only): This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body

(excluding extremities: hands, wrists, feet and ankles).

cable shorter than 3 metres

- Contains IC: 4491A-WN4636R This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection
- The player is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the player itself has been turned off. • To reduce the risk of fire, do not cover the ventilation
- opening of the appliance with newspapers, tablecloths, curtains, etc. • Do not expose the appliance to naked flame sources (for example, lighted candles)
- Do not install this player in a confined space, such as a bookshelf or similar unit. • If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about

half an hour until the moisture evaporates.

FCC WARNING

• Use the supplied AC adaptor for this player, as other

• Do not connect the AC adaptor to a traveler's electric

- adaptors may cause a malfunction. · Do not disassemble or reverse-engineer. • Do not confine the AC adaptor in a closed place such as a bookshelf or an AV cabinet
- transformer, which may generate heat and cause a malfunction. • Do not drop or apply shock.

For United States customers. Not applicable in Canada, including in the province Of Quebec. Pour les consommateurs Aux États-Unis. Non applicable au Canada, y compris la province de Québec.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

The shielded Interface cable (LAN cable) must be used with

the equipment in order to comply with the limits for a digital

device pursuant to Subpart B of Part 15 of FCC Rules.

Setup $^{TM}, Miracast ^{TM}$ and Wi-Fi CERTIFIED Miracast TM are trademarks of Wi-Fi Alliance • The Wi-Fi CERTIFIED Logo is a certification mark of Wi-Fi Alliance.3

• The Wi-Fi Protected Setup Identifier Mark is a certification mark of Wi-Fi Alliance.

Digital Living Network Alliance.*

- BY **OPERA**[®]
- Other system and product names are generally trademarks

copyrighted content. This device uses PlavReadv technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content

access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires • This product meets ENERGY STAR® guidelines for energy ENERGY STAR and the ENERGY STAR mark are registered U.S. marks. ENERGY STAR is a registered mark owned by the U.S. government. • Gracenote, the Gracenote logo and logotype, "Powered by



Gracenote", Gracenote MusicID, Gracenote VideoID, and

trademarks of Gracenote, Inc. in the United States and/or

Gracenote Video Explore are either registered trademarks or

- Wi-Fi $^{\! @}$, Wi-Fi Protected Access $^{\! @}$ and Wi-Fi Alliance $^{\! @}$ are registered trademarks of Wi-Fi Alliance. • Wi-Fi CERTIFIEDTM, WPATM, WPA2TM, Wi-Fi Protected

The player automatically returns to standby mode to standby mode.

Opens or closes the door tray.

reserves the right to delete data from the Gracenote Servers or

to change data categories for any cause that Gracenote deems

sufficient. No warranty is made that the Gracenote Software

uninterrupted. Gracenote is not obligated to provide you with

Gracenote may provide in the future, and is free to discontinue

or Gracenote Servers are error-free or that functioning of

new, enhanced or additional data types or categories that

Gracenote Software or Gracenote Servers will be

GRACENOTE DISCLAIMS ALL WARRANTIES

EXPRESS OR IMPLIED, INCLUDING, BUT NOT

PURPOSE, TITLE, AND NON-INFRINGEMENT.

MERCHANTABILITY, FITNESS FOR A PARTICULAR

GRACENOTE DOES NOT WARRANT THE RESULTS

THAT WILL BE OBTAINED BY YOUR USE OF THE

OR INCIDENTAL DAMAGES OR FOR ANY LOST

 $\hbox{@ }2000\,\hbox{--}\,\text{present.}$ Gracenote, Inc. All Rights Reserved.

For EULA (End User License Agreement), please refer to

[License agreement] in the option menu on each network

and refer to [Software License Information] in [System

This product contains software that is subject to the GNU

General Public License ("GPL") or GNU Lesser General

customers have the right to acquire, modify, and redistribute

the source code of said software in accordance with the terms

The source code for the software used in this product is subject

Public License ("LGPL"). These licenses establish that

to the GPL and LGPL, and is available on the Web. To

Please note that Sony cannot respond to any inquiries

Disclaimer regarding services offered by third

Services offered by third parties may be changed, suspended,

or terminated without prior notice. Sony does not bear any

download, please visit the following website:

regarding the content of this source code.

responsibility in these sorts of situations

http://oss.sonv.net/Products/Linux

For details of the other software licenses, please select [Setup]

GRACENOTE SOFTWARE, GRACENOTE DATA OR ANY

GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL

LIMITED TO, IMPLIED WARRANTIES OF

GRACENOTE SERVER. IN NO CASE WILL

PROFITS OR LOST REVENUES

Software License Information

its services at any time.

-TV- () (on/standby)

2 Color buttons (YELLOW/BLUE/RED/ GREEN)

3 TOP MENU Opens or closes the BD's or DVD's Top Menu. POP UP/MENU

Displays the available options on the screen.

Returns to the previous display.

• ↑/↓ as a shortcut key to launch track search window • **↑**/**↓** as a shortcut key to rotate photo clockwise/ counterclockwise by 90 degrees.

Accesses the application registered as favorite. Accesses the "NETFLIX" online service. For

further NETFLIX online service details, visit the

short time in pause mode.


Code numbers of controllable TVs

Hold down -TV- () and the TV manufacturer's code using the remote buttons for 2 seconds. Manufacturer **Remote Button**

Step 2: Preparing for Network Connection

Wired Setup


Use a LAN cable to connect to the LAN (100) terminal on the player.

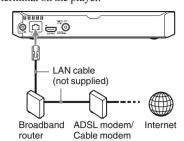

The use of a shielded and straight interface cable (LAN cable) is recommended.


Wireless Setup (BDP-S3700/BX370 only)

Use the wireless LAN that is built into the player.

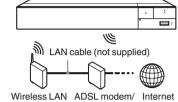

Cable modem

them, do so in reverse order.

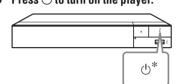

* Turns on the player, or sets to standby mode.

4 Turn on the TV and set the input selector on your TV by pressing INPUT button on the remote. This will show the signal from the player on your TV screen.

Step 3: Easy Setup


When turned on for the first time Wait for a short while before the player turns on

and starts [Easy Initial Settings].


Insert two Size AAA (R03) batteries by matching the \oplus and \bigcirc ends on the batteries to the markings inside the battery compartment of the remote.



2 Connect the supplied AC adaptor in the numeric order shown below. When removing

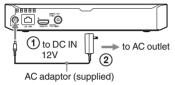

3 Press 🖰 to turn on the player.

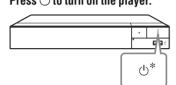

Playing a Disc

For "Playable discs", see page 13.

1 Press **△** OPEN/CLOSE, and place a disc on the



and press ENTER.

2 Press OPEN/CLOSE to close the disc tray. Playback starts. If playback does not start automatically, select

[Video], [Music], or [Photo] category in • (Disc),

(Mixed disc) contains data contents. Press OPTIONS on the remote and select [Data Contents] to display any available

Enjoying BONUSVIEW/BD-LIVE

1 Connect a USB memory to the USB jack on the Use a 1 GB or larger USB memory as your local

storage.

2 Prepare for BD-LIVE (BD-LIVE only). • Connect the player to a network (page 9).

• Set [BD Internet Connection] in [BD/DVD Viewing Settings] to [Allow].

3 Insert a BD-ROM with BONUSVIEW/ BD-LIVE.

The operation method differs depending on the disc. Refer to the instruction manual supplied with the disc

To delete data in the USB memory, select [Delete BD Data] in [BD/DVD Viewing Settings], and press ENTER. All data stored in the buda folder will be erased.

Playing from a USB Device

For "Playable types of files", see page 13.

- 1 Connect the USB device to the USB jack on the
- 2 Select \rightleftharpoons [USB device] using $\leftarrow /\uparrow /\downarrow /\rightarrow$, and press ENTER.
- 3 Select [Video], [Music], or [Photo] category using \uparrow/\downarrow , and press ENTER.

Playable discs

Blu-ray Disc*1 BD-ROM, BD-R*2/BD-RE*2 DVD*3 DVD-ROM, DVD-R/DVD-RW, DVD+R/DVD+RW CD*3 CD-DA (Music CD), CD-ROM, CD-R/CD-RW


*1 Since the Blu-ray Disc specifications are new and evolving, some discs may not be playable depending on the disc type and the version. The audio output differs depending on the source, connected output jack, and selected audio settings.

*2 BD-RE: Ver.2.1, BD-R: Ver.1.1, 1.2, 1.3 including organic pigment type BD-R (LTH type). The BD-Rs recorded on a PC cannot be played if postscripts are recordable.

*3 A CD or DVD disc will not play if it has not been correctly finalized. For more information, refer to the instruction manual supplied with the recording device.

Region code (BD-ROM/DVD VIDEO only)

Your player has a region code printed on the bottom of the unit and will only play BD-ROMs/DVD VIDEOs labeled with identical region codes or .

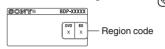

Playable types of files

Codec	Container	Extension	With Audio
MPEG-1 Video*1	PS	.mpg, .mpeg	Dolby Digital, DTS, LPCM, MPEG
	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
MPEG-2 Video*2	PS*3	.mpg, .mpeg	Dolby Digital, DTS, LPCM, MPEG
	TS*4	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAC
	MKV*1	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
Xvid	AVI	.avi	Dolby Digital, LPCM, WMA9, MP3
	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
MPEG4/AVC*5	MKV*1	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
	MP4*1	.mp4, .m4v	AAC
	TS*1	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAC
	Quick Time*6	.mov	Dolby Digital, LPCM, AAC, MP3
	FLV*6	.flv, .f4v	LPCM, AAC, MP3
	3gpp/3gpp2*6	.3gp, .3g2, .3gpp, .3gp2	AAC
VC1*1	TS	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAC
	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
WMV9*1*7	ASF	.wmv, .asf	WMA9, WMA 10 Pro
	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
Motion JPEG*6	Quick Time	.mov	Dolby Digital, LPCM, AAC, MP3
	AVI	.avi	Dolby Digital, LPCM, AAC, MP3

13

Wireless (BDP-S3700/BX370 only)

Specifications

Inputs and outputs

(Jack name)

HDMI OUT

LAN (100)

DIGITAL OUT (COAXIAL)

System

Laser

Wireless LAN standard	Protocol IEEE 802.11 b/g/n
Frequency range	2.4 GHz band: Channels 1-11
Modulation	DSSS and OFDM

HDMI 19-pin standard connector

digital still camera, and digital video camera)*

* Do not use for power charging purposes.

BDP-S3700/BX370: 12 V DC, 650 mA

BDP-S1700: 12 V DC, 600 mA

100BASE-TX Terminal

Phono jack /0.5 Vp-p/75 ohms (Jack type/Output level/Load impedance)

USB jack Type A (For connecting a USB memory, memory card reader,

Semiconductor laser

General

Power requirements	12 V DC with AC adaptor Rating: Input 120 V AC, 60 Hz
Power consumption (when using AC adaptor)	BDP-S3700/BX370: 9.2 W BDP-S1700: 8.5 W
Dimensions (approx.)	230 mm x 194 mm x 39 mm (9 $^{1}/_{8}$ in. × 7 $^{3}/_{4}$ in. × 1 $^{9}/_{16}$ in.) (width/depth/height) incl. projecting parts
Mass (approx.)	0.8 kg (1 lb 13 oz)
Operating temperature	5 °C to 35 °C (41 °F to 95 °F)
Operating humidity	25 % to 80 %


Supplied accessories

• High Speed HDMI Cable (1)* • AC adaptor (AC-M1210UC) (1) • Remote commander (remote) (1 • Size AAA (R03) batteries (2) * Supplied for BDP-BX370

Specifications and design are subject to change without notice

15


5 Perform [Easy Initial Settings]. Follow the on-screen instructions to make the basic settings using ←/∱/↓/→ and ENTER on

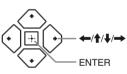

When [Easy Initial Settings] is complete, the player will automatically find the available network

Home screen display

The home screen appears when you press HOME. Select an application using $\leftarrow /\uparrow /\downarrow /\rightarrow$, and press ENTER.

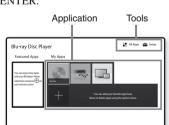

[My Apps]: Manages favorite application. You may add shortcuts for application from [All Apps]. [Featured Apps]: Displays recommended

[All Apps]: Shows all available applications. You can add applications to [My Apps] by pressing OPTIONS, and select [Add to My Apps]. [Setup]: Adjusts the player's settings.

10

Screen mirroring function is only available for

BDP-S3700/BX370.

Available options

Various settings and playback operations are available by pressing OPTIONS. The available items differ depending on the situation.

[Move Application]: Arranges applications in [My

[My Apps]. [Register as Favorite]: Registers 1 application into FAVORITE remote button.

Playing via a Network

[Remove Application]: Deletes applications in

[Data Contents]: Displays the contents of the mixed disc.

Using "TV SideView" (BDP-S3700/ BX370 only)

"TV SideView" is a free mobile application for remote devices (such as smartphone, etc.). By using "TV SideView" with this player, you can easily enjoy the player by using the operation on your remote device. You can launch a service or application directly from the remote device and view the disc information during disc playback. "TV SideView" also can be used as a remote control and software keyboard. Before you use the "TV SideView" device with this player for the first time, be sure to register the "TV SideView" device. Follow the on-screen instructions on the "TV SideView" device for registration.

Using Screen mirroring (BDP-S3700/ BX370 only)

"Screen mirroring" is a function to display the screen The player can be connected directly with a Screen mirroring compatible device (e.g. smartphone, tablet). You can enjoy the display screen of the device on your large TV screen. No wireless router (or access point) is

- When using Screen mirroring, the quality of picture and sound may sometimes be deteriorated due to interference
- Some network functions may not be available during Screen

1 Select 🖷 [Screen mirroring] from home

2 Follow the on-screen instructions.

The registration can only be performed on the home screen.

required to use this feature.

- from other network. You may improve by adjusting [Screen mirroring RF Setting].
- Make sure that the device is compatible with Miracast. Connectivity with all Miracast compatible devices is not

screen using $\leftarrow / \uparrow / \downarrow / \rightarrow$, and press ENTER.

11

Software Update

dditional Information

- Select 🚘 [Setup] on the home screen using **←//////**.
- 2 Select () [Software Update] using ↑/♣, and press ENTER.

■ [Update via Internet]

Updates the player's software using available network. Make sure that the network is connected to the Internet. For details, see "Step 2: Preparing for Network Connection" (page 9).

■ [Update via USB Memory]

Updates the player's software using USB memory. Make sure that the Software Update Folder is correctly named as "UPDATE" and all the update files must be stored in this folder. The player can recognize up to 500 files/ folders in a single layer including the update files/folders.

• We recommend performing the software update every 2 months or so.

• If your network condition is poor, visit http://www.sony.com/bluraysupport/ to download the latest software version and update via USB memory. You can also get information about update functions from

Music

AVCHD (Ver.2.0)*1*8*9

Codec	Extension
MP3 (MPEG-1 Audio Layer III)*10	.mp3
AAC/HE-AAC*1*10	.m4a, .aac*6
WMA9 Standard*1	.wma
WMA 10 Pro*11	.wma
LPCM*10	.wav
FLAC*1	.flac, .fla
Dolby Digital*6*10	.ac3
DSF*1	.dsf
DSDIFF*1*12	.dff
AIFF*1	.aiff, .aif
ALAC*1	.m4a
Vorbis	.ogg
Monkey's Audio	.ape

1 11010		
Format	Extension	
JPEG	.jpeg, .jpg, .jpe	
PNG	.png*13	
GIF	.gif*13	
DMD	hmp*6*14	

- *1 The player may not play this file format on a DLNA server (BDP-S3700/BX370 only).
- *2 The player can only play standard definition video on a DLNA server (BDP-S3700/BX370 only).
- *3 The player does not play DTS format files on a DLNA server (BDP-S3700/BX370 only).
- *4 The player can only play Dolby Digital format files on a DLNA server (BDP-S3700/BX370 only). *5 The player can support AVC up to Level 4.1. *6 The player does not play this file format on a DLNA server
- (BDP-S3700/BX370 only). The player can support WMV9 up to Advance Profile.
- *8 The player can support frame rate up to 60 fps. *9 The player plays AVCHD format files that are recorded on a digital video camera, etc. The AVCHD format disc will

not play if it has not been correctly finalized.

*10 The player can play ".mka" files. (This file cannot be played on a DLNA server (BDP-S3700/BX370 only).) *11 The player does not play coded file such as Lossless.

- *12 The player does not play DST encoded files.
- *14 The player does not support 16bit BMP files. · Some files may not play depending on the file format, file

*13 The player does not play animated PNG or animated GIF

- encoding, recording condition, or DLNA server condition (BDP-S3700/BX370 only).
- Some files edited on a PC may not play. • Some files may not be able to perform fast forward or fast
- The player does not play coded files such as DRM.
- The player can recognize the following files or folders in BDs, DVDs, CDs and USB devices: - up to folders in the 9th layer, including the root folder
- up to 500 files/folders in a single layer • The player can recognize the following files or folders stored in the DLNA server (BDP-S3700/BX370 only):
- up to folders in the 19th layer - up to 999 files/folders in a single layer
- The player can support frame rate:
- up to 60 fps for AVCHD (MPEG4/AVC) only. - up to 30 fps for other video codecs. • The player can support video bit rate up to 40 Mbps
- Some USB devices may not work with this player. • The player can recognize Mass Storage Class (MSC) devices (such as flash memory or an HDD), Still Image Capture Device (SICD) class devices and 101 keyboard.

· To avoid data corruption or damage to the USB memory or

devices, turn off the player when connecting or removing the USB memory or devices. The player may not play high bit rate video files on DATA CDs smoothly. It is recommended to play such files using

DATA DVDs or DATA BDs.

14

© 2016 Sony Corporation Printed in Malaysia