

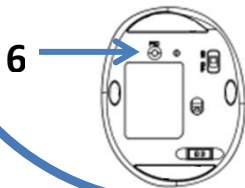


RGOHE
RGOHELE
RGOHELA
RGOBRHESMR
RGOBRHEMLR
RGOHEWL
RGOHEWLL
RGOHELAWL

RGOHE/ RGOHELE
RGOHEWL/ RGOHEWLL

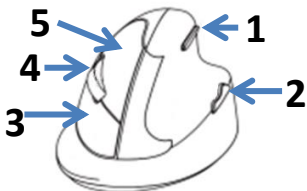

RGOHELA/ RGOHELAWL
RGOBRHESMR / RGOBRHEMLR

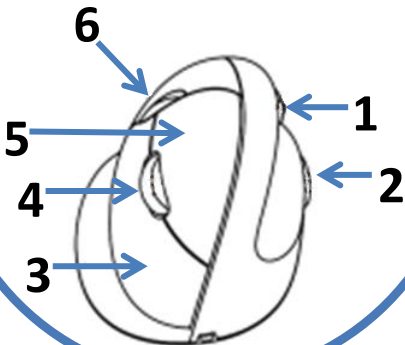

DE

1. Taste „Vorwärts“ (nur Windows)
2. Taste „Rückwärts“ (nur Windows)
3. Rechte Taste
4. Scrollrad
5. Linke Taste
6. Schalter zum Wechsel der DPI

FR

1. bouton « page suivante » (seulement Windows)
2. bouton « page précédente » (seulement Windows)
3. bouton droit
4. molette de défilement
5. bouton gauche

EN

1. Forward button (only Windows)
2. Backward button (only Windows)
3. Right button
4. Scroll wheel
5. Left button
6. DPI switch

NL

1. Knop 'Voorwaarts' (alleen Windows)
2. Knop 'Terug' (alleen Windows)
3. Rechterknop
4. Scrollwiel
5. Linkerknop
6. Knop voor wisselen DPI

DPI (1)

DPI (6)

RGOHE, RGOHELE:

DPI 500/1500/2000/3500

RGOHEWL, RGOHEWLL:

DPI 500/1000/1750

RGOHELA, RGOBRHESMR /

RGOBRHEMLR:

DPI 500/1500/2000/3500

RGOHELAWL:

DPI 500/1500/1750/2500

DPI (2)


EN

Each time the DPI switch (6) is pressed, the DPI increases. When the switch is pressed after the highest DPI, the DPI resets to the lowest DPI.

NL



Elke druk op de DPI-schakelaar (6) verhoogt de DPI. Wanneer de schakelaar na de hoogste DPI wordt ingedrukt, wordt de DPI teruggezet naar de laagste DPI.

DPI (4)

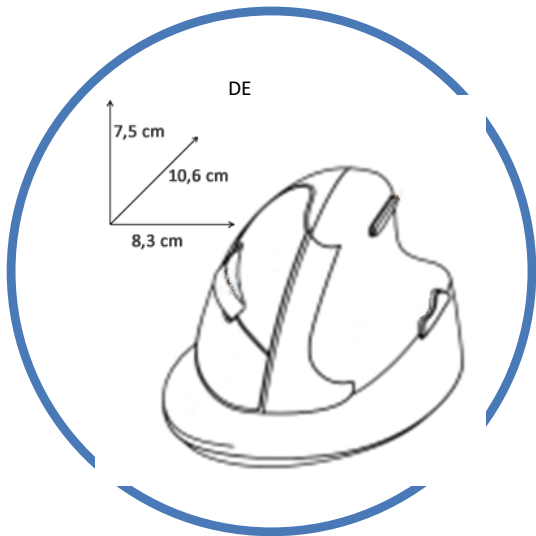

SPEC(1)

 RGOHE, RGOHELE, RGOHEWL, RGOHEWLL

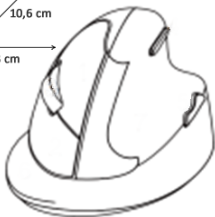

140 gram

COMPATIBLE(1)



5°C - 35°C (41F - 95F)



-20°C - 60°C (-4F - 140F)

RGOHE

RGOHELE

RGOHELA

RGOBRHESMR

RGOBRHEMLR

RGOHEWL

RGOHEWLL

 


RGOHELAWL

RGOHEWL, RGOHEWLL (1a)




RGOHEWL

RGOHEWLL

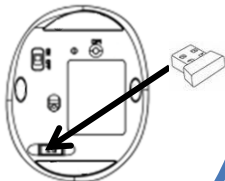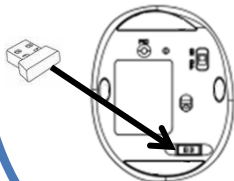


RGOHELAWL (1b)

 


RGOHELAWL



 RGOHEWL, RGOHEWLL, RGOHELAWL (2)



RGOHEWL
RGOHEWLL
RGOHELAWL

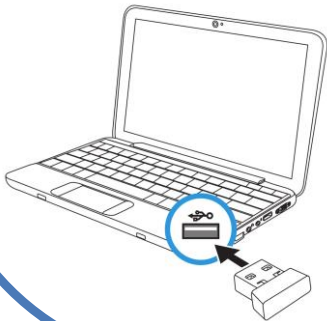


RGOHEWL, RGOHEWLL, RGOHELAWL (3)



RGOHEWL

RGOHEWLL

RGOHELAWL

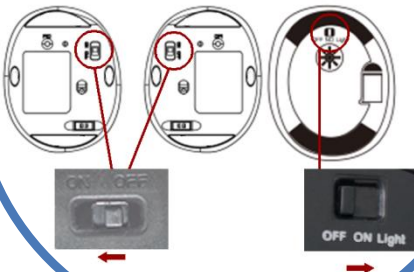

RGOHEWL, RGOHEWLL, RGOHELAWL (4)

