



PROKORD CHAIR OFFICE 1908-S BLACK

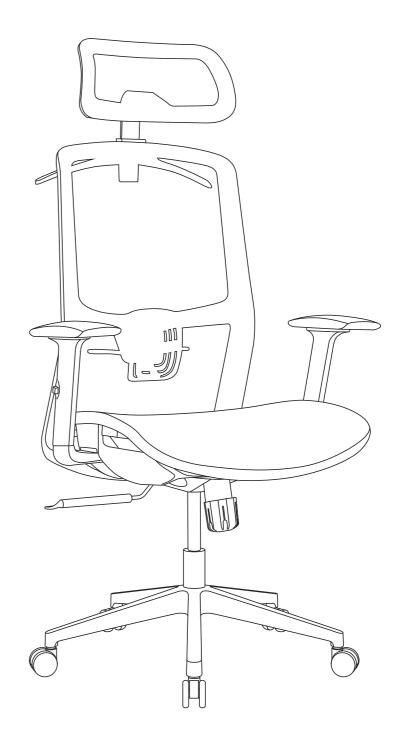



PROKORD


PC-0518-P

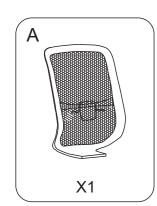



Е

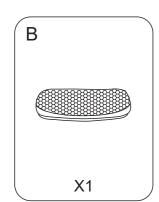


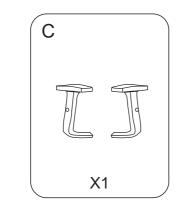

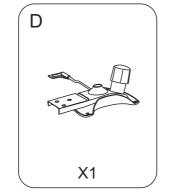


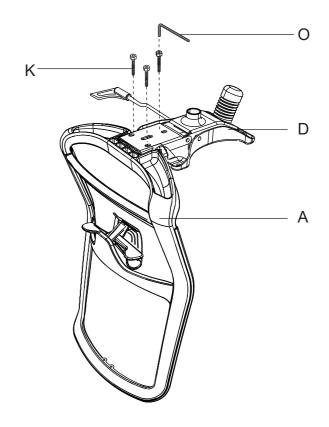


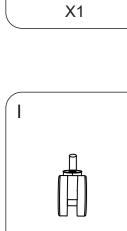

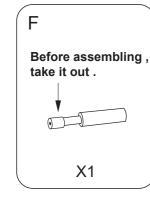


J

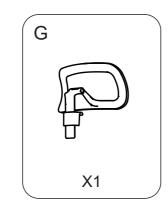

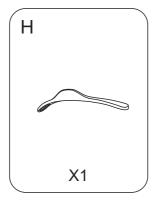




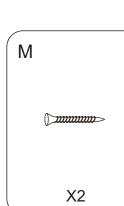




X1

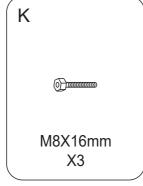



X1


0




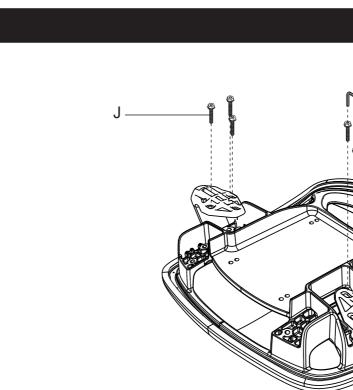


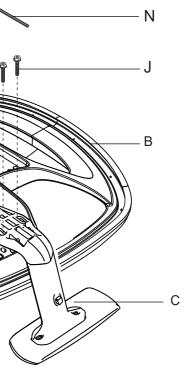


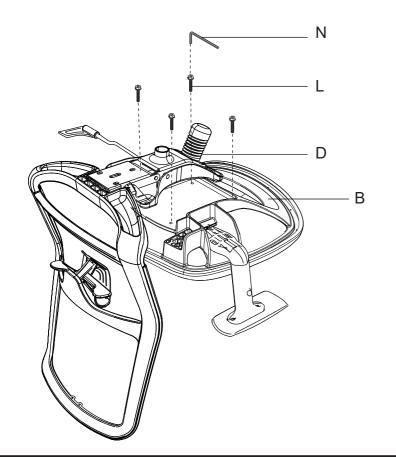


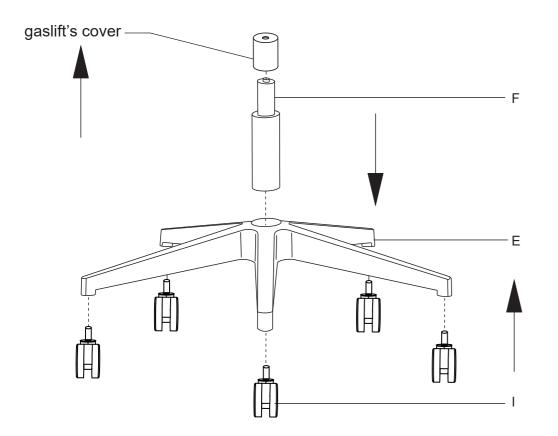


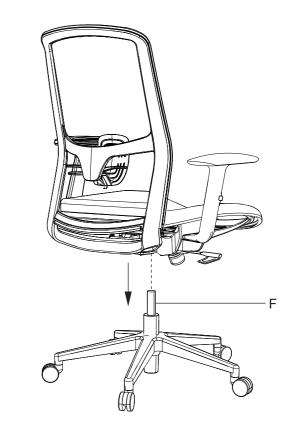

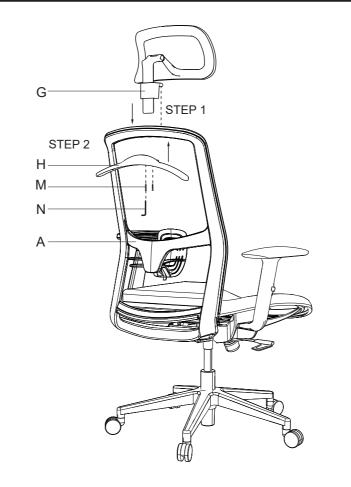

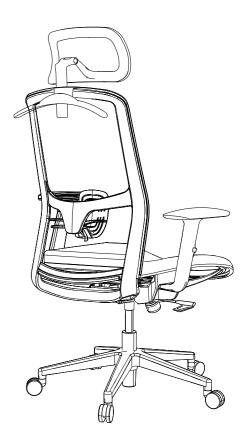

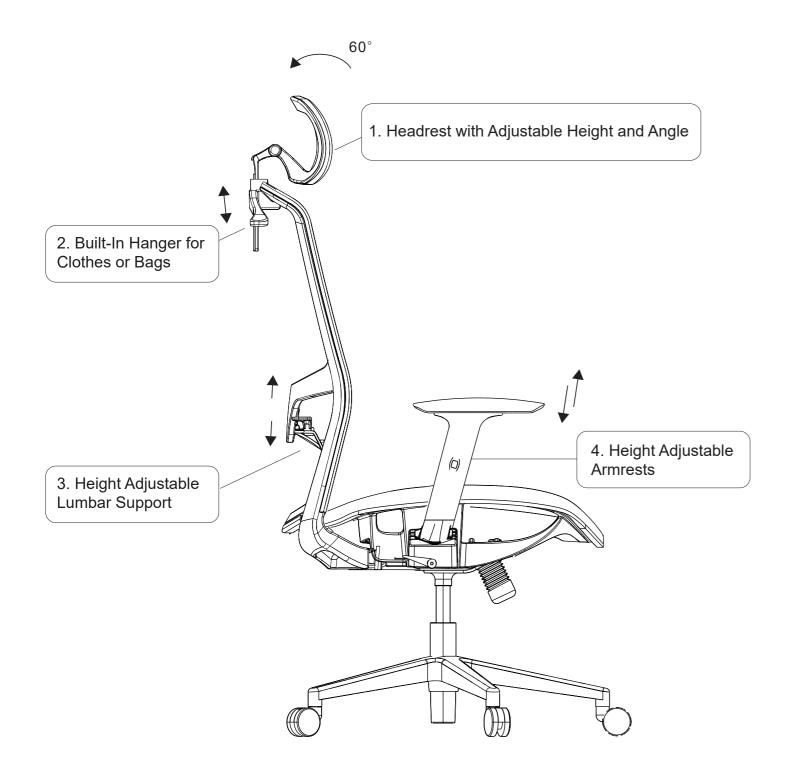

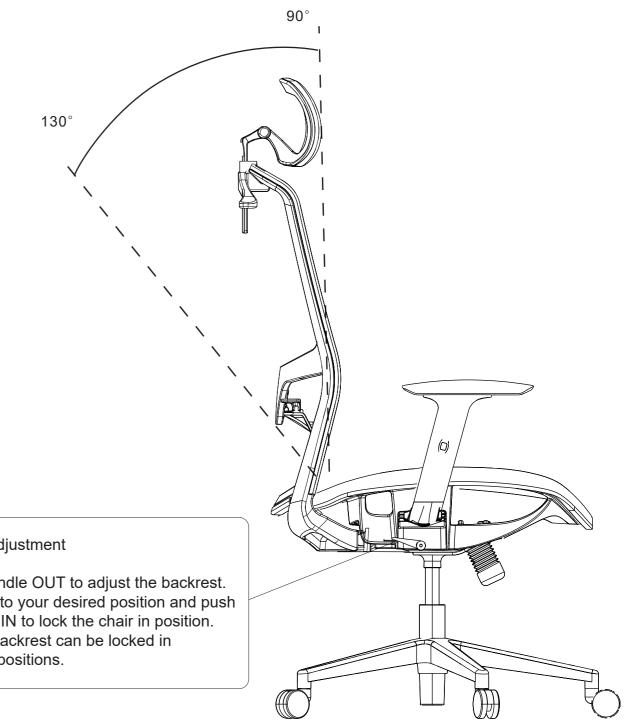

Back Tilt Adjustment

Pull the handle OUT to adjust the backrest. Lean back to your desired position and push the handle IN to lock the chair in position. Note: the backrest can be locked in 3 different positions.