




USER MANUAL S-W410B

Package Contents

- S-W410B Wireless Speaker
- USB C to USB C Charging Cable
- 3.5mm Audio Cable
- User Manual

Product Diagram

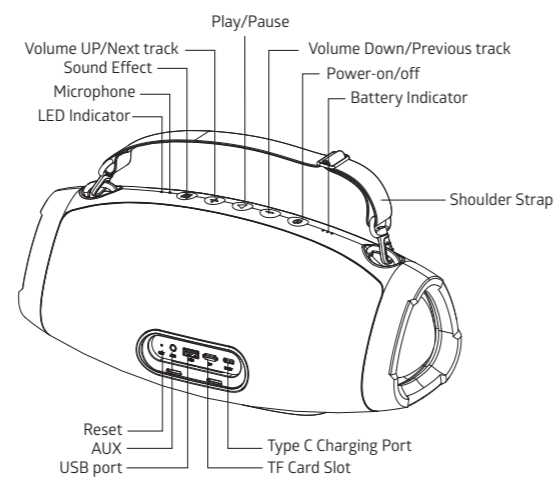

01

Specifications

Model	S-W410B
Technology	BT5.0, HFP V1.5, A2DP V1.2, AVRCP V1.4, GAVDP V1.2, AVDTP V1.2, SPP V1.2, AVCTP V1.2
Power Input	TPYE-C 5V-20V
Drivers Unit	Woofer, φ70mm,4Ω,30W x 2 Tweeter, φ31mm,8Ω,10W x 2
Frequency Range	80Hz - 20KHz
Signal-to-Noise Ratio	>80dB
Charging Time	3.5 hours
Play Time	100% Volume: 5 hours 70% Volume: 12 hours (5 steps less than max volume) 50% Volume: 16 hours (8 steps more than minimum volume) 30% Volume: 20 hours (5 steps more than minimum volume) Standby: 45 hours
Operating Range	Up to 10m / 33ft
Battery Type	Li-ion (1500mAh)
Operating Temperature	0°C - 45°C / 32°F - 113°F
Dimensions	324× 148× 146mm / 12.75"× 5.83"× 5.75"
Net Weight	3000g/105.8oz
Waterproof	IPX6
True Wireless Stereo(TWS)	Support
Phone/Tablet Charging	Support
TF Card Play	Support

02

Charging

Fully charge this speaker before first use. Connect it to a 30w power adapter with the included Type-C charging cable to charge. When there are 3 solid white lights, your speaker is fully charged and ready for use. Charging takes around 3.5 hours.

Note

Please use 30w power adapter to charge your speaker. Power adapter is NOT INCLUDED.



Power On / off

Long press the ON/OFF button for 2-3 seconds to power on or off (LED indicator flashes blue or off)

03

Pairing

1. When you turn on the speaker, the speaker will automatically enter pairing mode and the LED indicator will start to flash blue rapidly
2. Active the pairing function on your phone or other compatible device and select "S-W410B"
3. If a code or pin is required for pairing, please enter "0000". When successfully paired, the LED indicator will stay blue.

Notes

- To reset the speaker (to clear the pairing list or any program errors), use a straightened paper clip or a toothpick to carefully short-press the reset hole
- The speaker will automatically shut down after 10 minutes in pairing mode if no devices are paired
- If your paired device is switched off or manually disconnected, the speaker will enter pairing mode and automatically shut down after 10 minutes.
- If the speaker or connected device exceeds the operating range, the speaker will disconnect. The connection to the last successfully connected device will be re-established once you re-enter wireless range within 10 minutes. To connect to other devices, please repeat the previous "Pairing" steps.

Playing Audio via Audio Input Connection

1. Connect the S-W410B to your PC, laptop, or other device with audio output port using the included 3.5mm audio cable.
2. Long press the on/off button for 2-3 seconds to turn on, and the LED indicator will light up solid green.

TF Card Function

1. Insert a TF card into the TF card slot on S-W410B.
2. Green LED confirms that the speaker has entered TF card mode.

04

Notes

- The speaker will disconnect from your phone or other paired device when an audio cable is plugged into the audio input jack
- When playing audio using the audio input jack, press the volume +/- to adjust the volume and short-press play/pause to pause or resume. Next / previous track control on the speaker is disabled in audio input mode
- For some computers, you may need to access the audio control panel to manually set the speaker as the default audio device


Charging Phone / tablet

1. Connect your phone / tablet to the type-c port of the S-W410B speaker
2. Turn on the speaker, your device will be charged automatically
3. Turn off the speaker to discharge your device

Adjust Sound Effect

Short press the Equalizer button "≡" to switch between indoor or outdoor mode

Tws Pairing

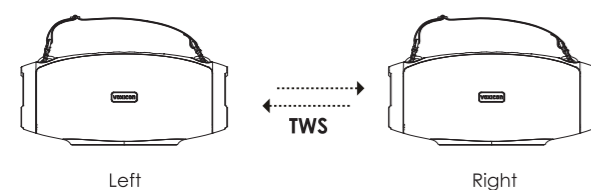

05

1. Turn on both of your S-W410B speaker simultaneously, you will see blue LED indicator flashes rapidly on the two devices
2. Select one speaker as the leading speaker, double press the ON /OFF button to start pairing
3. After successfully paired, the blue LED indicator of the leading speaker flashes slowly and the secondary speaker LED keeps bright blue
4. Turn on your phone's Bluetooth, search "S-W410B" and connect. The blue LED indicator of the leading speaker keeps bright. The two speakers will play music simultaneously when complete pairing
5. To disconnect TWS pairing, press the volume button "+" and "-" at the same time, you will see blue LED flashes rapidly on the secondary speaker, that means TWS unpaired successfully

Controls & LED Indicators

Functions	Instructions
Adjust Volume	Short press volume button +/-
Pause / Resume	Short press play/pause button
Next / Previous track	Long press + / - to Next / Previous track
Cancel pairing	When connected, press volume button + and - at the same time
Answer / End a call	Short press the play/pause button once
Reject an incoming call	Long press the play/pause button for 2 seconds
Redial last-called number	Long press the play/pause button

06

LED Indicator	Status
Blue Flashing Rapidly	Pairing mode / Disconnected
Solid Blue	Connected / Outdoor mode
Solid Green	Audio input mode
White Lights Flashing	Charging
White Lights On (after charging)	Fully charged

Caution

- Keep the speaker and its accessories away from the reach of kids as they might cause a choking hazard.
- Keep the speaker away from fire, water, liquids, extreme heat, and strong magnetic fields.
 - Do NOT use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss.
 - Do NOT drop or knock the speaker on hard surfaces.
 - Do NOT use chemicals or detergents to clean the speaker.
 - Do NOT scrape the surface with sharp objects.
 - Do NOT make unauthorized alterations to this product.

07

Troubleshooting Cannot power on

Charge the speaker and make sure it has enough battery. Cannot connect with the device.

Please check the follows:

- The Bluetooth device supports A2DP profile. The speaker is within 10m from the device.
- The speaker is in pairing mode, the LED indicator blinking blue.

No Sound

- Make sure the music volume is at audible level on both your device and speaker
- Make sure your device is successfully paired with the speaker, the LED indicator turns solid blue.

Poor sound quality


Move the device closer to this speaker or remove any obstacle between them.

Declares that the design and manufacturing of this product complies with the European

Directives for CE-Marking as stated below:

- 2014/35/EU (LVD)
- 2014/30/EU (EM)
- EU/2015/863 (RoHS)
- 2014/53/EU (RED)

08

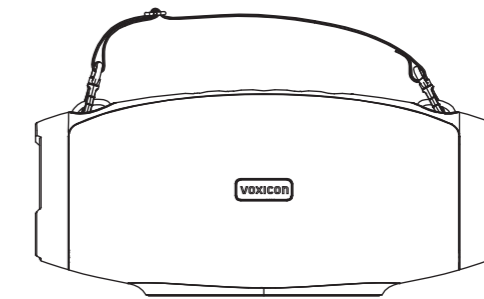

09