

# CRAYON

## Do's and Don'ts




### DO

- Disconnect Apple Pencil from your iPad prior to using Logitech Crayon. To disconnect Apple Pencil select on your iPad Settings -> *Bluetooth*, find Apple Pencil in the device menu and select "Forget This Device".
- Turn on the Logitech Crayon before using it by pressing the power button for 1 second.
- To carry your Crayon around, slide it into the pencil holder of the iPad case if it has one. Or put it into the pencil case or pocket of your backpack.
- Press the on/off button before putting your Crayon away. It will preserve the battery.
- Charge your Crayon at home at the end of every day.
- Use a wet cloth with water or any cleanser with less than 15% of alcohol to clean the product. Spray water or cleanser on the cloth, not on Logitech Crayon.

### TIPS FOR TEACHERS:

- Keep at least 1 Lightning charger in the classroom to give a charging boost for Crayon, in case students forgot to charge at home.
- To avoid damaging the screen, change Crayon tip if damaged from a drop or worn out over time. Replacement tips can be purchased at:  
<http://support.logitech.com/product/crayon/spare-parts>.

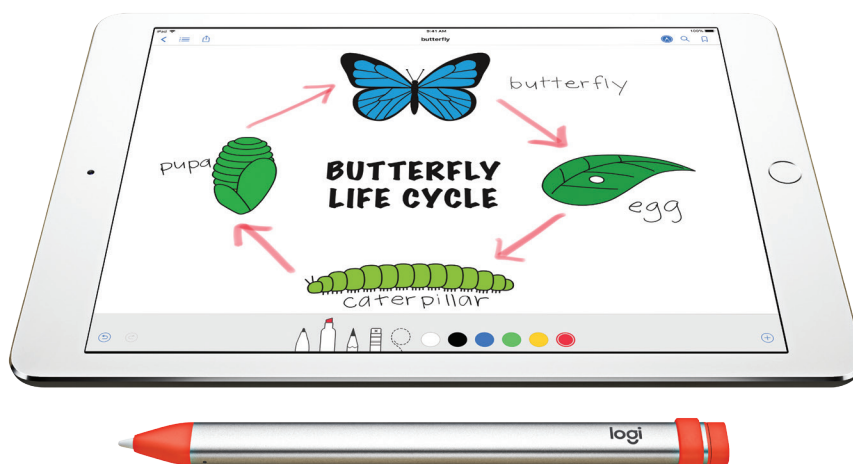

# DO NOT

## HANDLING LOGITECH CRAYON


- Do not drop your Crayon. Dropping might damage the tip of your Crayon or the electronics inside.
- Do not put into your mouth or chew on cap or tip.
- Attempt to remove tip or cap by yourself—it will break it and void the warranty.
  - Do not try to tear the cap off. Do not play with the power button or the cap.
  - Do not remove the orange tip cover without using the tool, it will damage the inner structure of the pen.
- Do not stick chewing gum and other foreign objects inside the charging port.
- Do not pull your Crayon out from the loop of Rugged Combo 2 by the tip. This will tear off the tip of your Crayon.
- Do not use water to wash your Crayon. It's not waterproof and could be damaged.

## WRITING WITH LOGITECH CRAYON

- Do not use your Crayon when the screen of the iPad is off. It will not work.
- Do not use your Crayon on paper, or on any other electronic devices, such as a phone.
- Do not charge the Crayon when you want to use it. Crayon will stop working during the charge.
- Logitech Crayon isn't pressure sensitive, so there is no need to press down hard.

## CARRYING LOGITECH CRAYON

- Do not put your Crayon between the iPad case and keyboard cover. This can cause damage to your keyboard, Crayon or iPad.
- Do not put your Crayon into your backpack unprotected.
- Do not leave the cap open when transporting. Dirt, dust and other foreign objects can get inside the charging port.

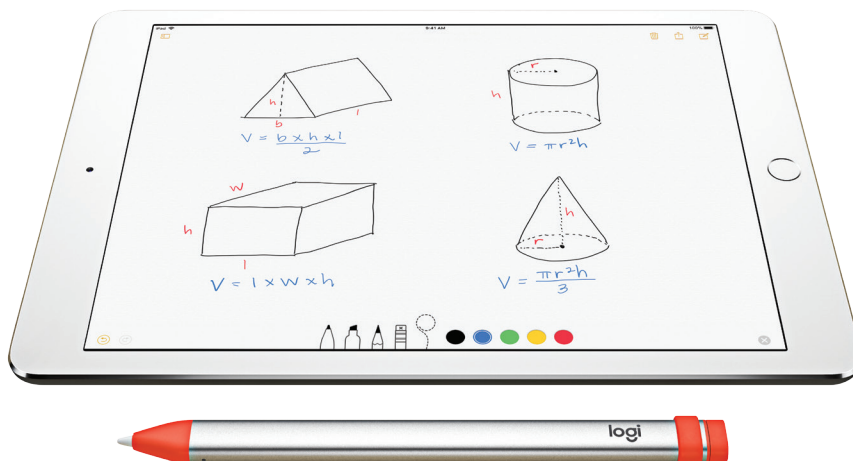

logitech®