



User Manual

D27QPF



Important Safety Precautions

1. Please read all the instructions carefully before using this product.
2. BE SURE TO unplug the power cord when cleaning LCD. Never clean it with liquid detergent or spraying detergent, but wipe it with wet soft cloth. If it is still not clean, please use special detergent for LCD.
3. DO NOT use accessories not authorized by the manufacturer, otherwise they may incur danger.
4. When disconnecting the power cord of display or power adapter, always remember to hold the plug instead of pulling the wire to unplug the power cord.
5. Keep the display away from water sources such as bath tub, washbasin, sink or washing machine. DO NOT place the display on wet floor or near a swimming pool, or press LCD surface with fingers or hard objects.
6. The grooves and openings on the back and bottom of the shell are for ventilation purpose and also for guaranteeing the reliability of the elements and preventing them from overheating; in order to prevent the vents from blocking; DO NOT place the display on bed, sofa, carpet or other similar surfaces; DO NOT place the display near to or on heat radiator or heater; DO NOT put the display into embedded device, unless it is provided with adequate ventilating equipment.
7. Only the type of power source indicated on the nameplate applies to this display. If you have any questions on the type of power source you use, please consult the dealer of the display or local administration of power supply.
8. For safety, the display or the power adapter is equipped with three-pin plug power cord. The third pin of this plug is for grounding, and only applicable to socket that is correctly grounded. In case that your socket is not available for the plug, please contact electrician to replace the socket.
9. Since there is high voltage or other risks when the shell is opened or moved, please DO NOT repair the display by yourself, but request qualified maintenance staff to carry out.
10. In one of the following cases, please unplug the display or the power adapter and ask qualified maintenance staff for help:
 - a. The power cord or the plug is impaired or worn.
 - b. The display falls off or the shell is damaged.
 - c. The display is obviously abnormal.
11. Please place the display in a cool, dry and well ventilated place.
12. Store the display in temperature range of -10°C~60°C, beyond which the display may be damaged permanently.

1. Product Description

1.1 Packing list

Please check the following items in the packing case before installation:

- One LCD display (including the base)
- One DP signal cord, one power cord, one AC adaptor
- One User Manual

If any of above items is missing, please contact with the dealer.

 
Attention: Accessories shall be subject to the real configuration. Please keep all packing materials well for product transport in the future.

2. Installation and Connection

2.1 Display installation

Installation instructions

- This machine should be installed adjacent to an easily pluggable AC power socket.
- For the sake of safety, we suggest that suitable wall-mounted bracket or base be used.
- In order to prevent injury, this machine shall be placed on a stable and level surface or fixed on a firm wall.
- For wall-mounting, please ask a professional to do so. Improper installation may cause instability of this machine.
- DO NOT place this machine in places with mechanical vibration.
- DO NOT place this machine in places where insects are accessible.
- DO NOT install this machine directly opposite to air-conditioner, otherwise its inner panel may be dewed and cause failure.
- DO NOT place this machine in places with strong electromagnetic field, otherwise it may be interfered by the electromagnetic wave and get damaged.

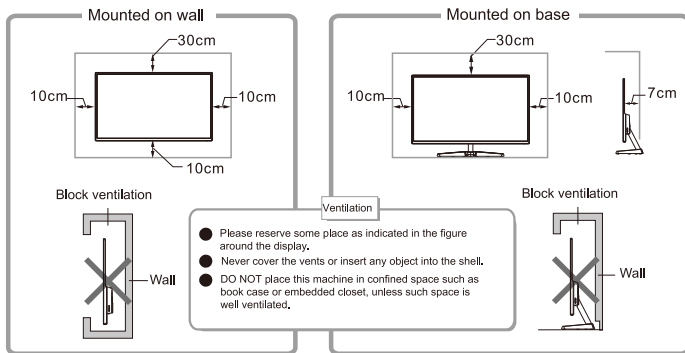


2.2 Signal line connection

Connect the signal line to output interfaces signal of DP/HDMI/DVI signals of PC, and then connect the other end of the signal line to the corresponding signal input port of the display.


2.3 Audio output

 This machine supports earphone.

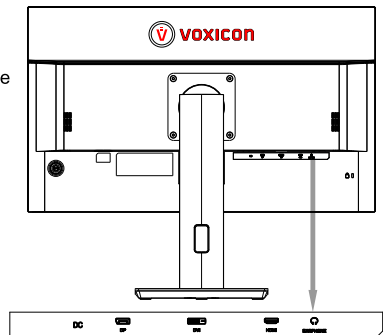

3. Operation of Display

 The OSD control buttons are shown as the figure. Models of the same product series are only different in button position and panel pattern, please refer to the practical model.

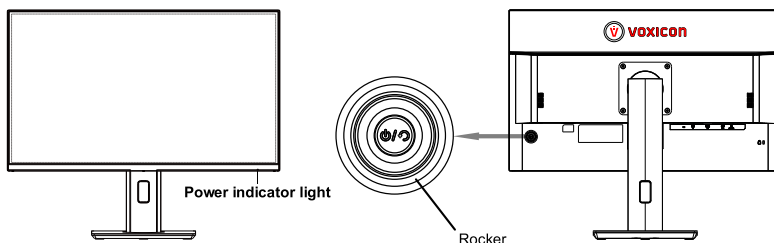

3.1 Power indicator light

When the display is working normally, the blue indicator light is on; when it is in the energy saving state, the indicator light blinks with red color; when the signals are sent again in the energy saving state, the machine will return to normal work; when the machine is in the standby state, the indicator light is off. As the display is still powered in the standby state, for the sake of safety, the power cord should be unplugged when the display is not used.

3.2 Introduction to rocker functions

Initial state:

Rocker Up	Signal source input
Rocker Down	Menu display
Rocker Left	Brightness adjustment shortcut key
Rocker Right	Volume adjustment shortcut key
Press Rocker	Short press to start/ display menu ,press and hold for 3s to turn off the machine

Enter the function menu:

Rocker Up	Move up
Rocker Down	Move down
Rocker Left	Back to previous menu/adjust value-
Rocker Right	Enter next menu/adjust value+
Press Rocker	Confirm/press and hold for 3s to turn off the machine

3.3 Safety protection

When the video signals of PC exceeds the frequency range of the display, the horizontal and field synchronizing signals will be shut down to protect the display. Then, you have to set the PC output frequency to an acceptable range so as to make the display work normally.

4. Basic Troubleshooting

Phenomenon	Troubleshooting
1. Light out/power indicator light is off	Check whether the display and the socket are well connected to power, and whether the display is in the shutdown mode.
2. Image blurring, over-large, over-small, etc.	Enter the menu "Image Setting" and select "Auto Image Adjust" to automatically adjust the display.
3. Image over dark	Enter the menu "Brightness and Contrast" to adjust the brightness and contrast of the display.
4. Display over heat	Leave at least 5cm of distance for ventilation around the display and do not place articles on the display.
5. Dark/ light spots when powering on	This is a normal phenomenon. It is due to the backlight illuminates unevenly at the initial phase of powering on caused by temperature difference. The backlight can illuminate normally after 20 minutes, and then the dark/light spots will be corrected.
6. Image distortion, blinking, shaking	Check computer setting, select the correct resolution and re-adjust the refresh frequency.
7. Power off noise	It is a normal phenomenon caused by display discharging in the process of powering off.

5. Technical Specifications of Product

Panel size	27"
Optimal working resolution	2560×1440@75Hz
Power input	DC 12V/4.5A
Product has been filed on China energy label website	Yes
Blue-light filtering	Support
Flicker-free	Support
Requirements for working environment	
Barometric pressure	86kpa~104kpa
Working temperature and humidity	0°C~40°C 20%~85%
Warehousing temperature and humidity	-10°C~60°C 10%~90%
Packing size (W * H * T) and weight	
Unpacked size (W * H * T) (with base)	616mm×190mm×517.7mm
Packing size (W * H * T)	708mm×165mm×596mm
Net weight	6.0kg
Gross weight	8.0kg

Power supply management system

Mode	Power consumption
Normal working	≤54W
Standby	≤0.5W

Remarks: All technical specifications in this manual and external packages are subject to change without further notice. In case that there is subtle difference between this manual and practical operation, please follow practical operation.

6. Instruction of Base Installation

Stand installing

1. Insert the stand support to the stand base with 4pcs M4*7 screws, as figure 1.
2. Align the four screw holes on the stand support with the four holes on the monitor backcover, and then lock them with 4pcs M4*12 screws in the direction of the arrow, as shown in Figure 2.

To remove the entire stand

1. Unscrew the 4pcs M4*12 screws in the VESA hole and take down the whole stand as figure 2.
2. Unscrew the 4pcs M4*7 screws on the stand support and stand base, and pull out the stand base in the direction of the arrow.

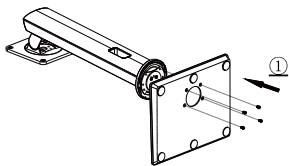 


Figure 1

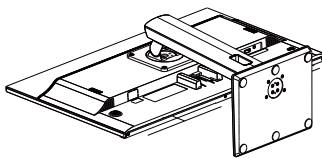 


Figure 1

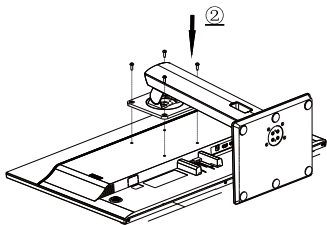 


Figure 2

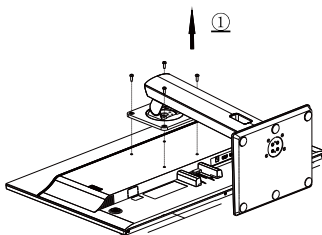 


Figure 2

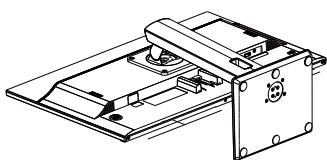 


Figure 3

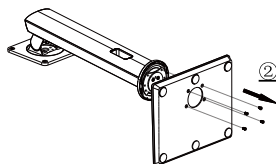 


Figure 3

Note: Some of the contents in this manual may differ slightly from the final product, and the later shall be referred to.

Name and content of toxic and harmful substance or element contained in this product

Name of component	Toxic and harmful substance or element					
	Pb	Hg	Cd	Cr6 ⁺	PBB	PBDE
Display	✘	○	○	○	○	○
Plastic shell	○	○	○	○	○	○
Circuit board module*	✘	○	○	○	○	○
Power cord and connecting line	✘	○	○	○	○	○
Metal parts	○	○	○	○	○	○
Packing materials*	○	○	○	○	○	○
Speaker (optional)	○	○	○	○	○	○
Accessories*	○	○	○	○	○	○

This table is prepared in accordance with SJ/T11364.

*: The circuit board module includes PCB and constitutive electronic elements;

The packing materials include packing case, EPS and so on;

Other accessories include manual and so on;

○: Indicate that the content of toxic and harmful substance in all homogeneous materials of this part is below the limit stipulated in GB/T26572-2011.

✘: Indicate that the content of toxic and harmful substance in at least one homogeneous material of this part exceeds the limit stipulated in GB/T26572-2011.

This table indicates that this machine contains harmful substance. The data is provided by material suppliers according to material type and verified by us. The harmful substance contained in some materials is irreplaceable with present technology, and we are always endeavoring to make improvement.

The eco-friendly service life of this product is 10 years. See the right figure for the symbol of limited use of harmful substance.



The service life of this product is valid only when it is used in normal service conditions specified by user manual.

Informative Instruction of Regulation on Control of Recycle and Disposal of Waste Electric and Electronic Products

In order to better care for and protect the earth, when this product is not needed any longer or its service life is ended, please deliver it to a local plant with state-certified recycle and disposal qualification pursuant to relevant national laws and regulations on recycle and disposal of waste electric and electronic products.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

