

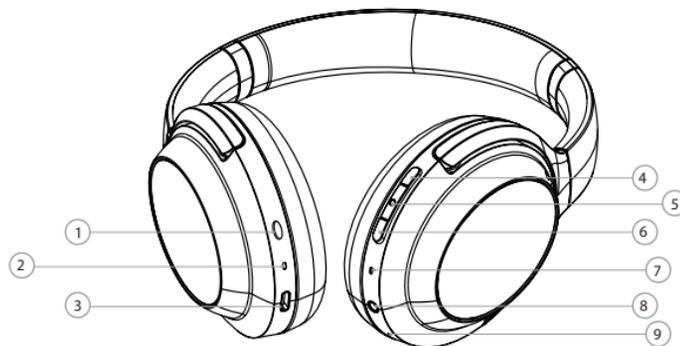
USER'S MANUAL

Dear Customer

Thank you for purchasing the GR8-912 ANC wireless headphones. Please read this manual carefully and follow the instructions in order to optimize the use of your new headphones and enjoy your music.

WHAT'S IN THE BOX:

- GR8-912 ANC (Active Noise Cancellation) wireless headphones
- 3.5 mm premium cable
- 3.5 mm double hack-in-flight adaptor
- USB-C cable
- User's manual
- Pouch

**FUNCTIONS**

1. ANC Button
2. ANC/Charging LED Indicator
3. USB-C Charging Port
4. Volume Up
5. ON/OFF/MFB (Multifunctional Button)
6. Volume Down
7. Bluetooth/Pairing LED Indicator
8. AUX-in Port
9. Microphone

TECHNICAL DATA

- Bluetooth version: 5.0
- Bluetooth range: up to 10 m
- Frequency response: 20-20 KHz
- Playtime: up to 36 hours (with only Bluetooth on) and up to 18 hours (with Bluetooth and ANC on) at 70% battery volume
- Charging time: up to 3 hours
- Power requirement: 5 V / 400 mA
- Lithium polymer battery: 900 mAh
- Standby current: up to 50 μ A
- Noise cancelling depth: up to 25 dB
- Driver impedance: 32 Ω
- Speaker diameter: 40 mm

CHARGING THE BATTERY

1. Connect the USB-C end of the charging cable to the USB-C input on the headphones and the standard USB end to a PC USB port or USB main charger.
2. The LED indicator on the left headphone is red during charging and will turn green in nearly three hours when the battery is fully charged.

TURNING THE HEADPHONES ON/OFF

1. Press and hold the MFB button on the right headphone to turn the headphones ON/OFF.
2. When the headphones are turned on, you will hear a voice prompt "Power on" and the LED indicator flashes blue every five seconds.

PAIRING WITH BLUETOOTH DEVICES

1. To pair the headphones with a Bluetooth device for the first time, press and hold the MFB button to turn the headphones on until you hear a voice prompt "Power on" and the LED flashes blue. Keep holding the button until you hear a voice prompt "Pairing" and the LED indicator flashes blue and red alternately.
2. Activate the Bluetooth function on your connected device and select "GR8-912" displayed on your Bluetooth list for pairing. If necessary, enter "0000" or "1234" as the pairing password.
3. When pairing is successful, you will hear a voice prompt "Your headset is connected" and the LED flashes blue every five seconds.
4. The next time the headphones are switched on, they will automatically search for and attempt to connect with the last paired device. You can just activate the Bluetooth function on your connected device to pair with the headphones.

RE-PAIRING OR PAIRING NEW DEVICES

1. Make sure Bluetooth is turned off on any previously paired devices.
2. Follow the instructions on "Pairing with Bluetooth Device" above.

PLAYING MUSIC**PLAYING/PAUSING**

Press the MFB button to switch between play and pause mode.

ADJUSTING THE VOLUME

Press and hold the Volume Up or Volume Down button to turn the volume up or down. You can also adjust the volume on your connected device.

SELECTING MUSIC

Press the Volume Up or Volume Down button to switch to the next or the previous track.

HANDLING A CALL

1. To answer or end a call, press the MFB button. You can adjust the volume during a call by pressing and holding the Volume Up or Volume Down button on the right headphone.
2. To reject a call, press and hold the MFB button.

ACTIVE NOISE CANCELLING (ANC)

1. Press and hold the ANC button on the left headphone to turn this function ON/OFF.
2. When the ANC is activated, its LED indicator stays blue.

Warning

It is not recommended to activate this function while driving or walking as that will prevent you from hearing warnings that could result in causing danger to you or others.

Note

ANC function will not work if the battery has drained.

PLAYING IN AUX-IN MODE

1. Connect the 3.5 mm cable provided in the package into the 3.5 mm AUX-in port on the right headphone.
2. Connect the other end of the 3.5 mm cable into your connected device.

USING VOICE ASSISTANT

You can activate your voice assistant ON/OFF while using the headphones by double tapping the MFB button quickly.

TAKING CARE OF YOUR HEADPHONES

PLEASE DON'T

- get the headphone wet,
- drop the headphones as this will invalidate your warranty,
- open up the headphones. There are no user-serviceable parts inside.
- Expose the headphones to extreme temperatures or rapid changes of hot to cold or vice versa.

PLEASE DO

- clean the headphones with a soft dry cloth and without detergents.

BATTERY INFORMATION

- Your device is powered by rechargeable battery. Unplug the charger from the power outlet and the device when not in use.
- If left unused, a fully-charged battery will lose its capacity over time. We recommend to fully charge the battery twice a month to maintain its service life.
- Please do not leave the device at an extreme hot or cold temperature (such as in a car parked in the sun), as it will reduce the battery's capacity and service life.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

TROUBLESHOOTING

If you cannot connect the headphones with your device, please try the following:

1. Make sure the headphones are charged, switched on, paired with and connected with your device.
2. Check if the headphones are within the range of 10 m (30 feet) from your device and there are no obstructions (such as walls or other electronic devices) between the headphones and the device. The headphones can only connect with one device at a time, so please ensure there are no conflicting Bluetooth devices trying to connect with the headphones.
3. If the headphones will not switch off, try resetting them back to normal by putting them on charge.
4. If you receive an intermittent signal, please check if the headphones are fully charged before continuing to use.
5. The headphones will automatically power off if not in use for longer than three minutes and not connected with a device.
6. Please do not attempt to open this product. There are no user-serviceable parts inside. If your product has an embedded, nonreplaceable battery, do not attempt to access or remove the battery as this may cause personal injury and will damage the product.
7. Making any attempt to open the product or carry out repair voids any and all warranties.
8. We apologize for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.