



User Manual

5.1.2 Channel Dolby Atmos Soundbar
VXA-TB873W7



Please read this manual carefully for proper usage before installation and use. It is recommended to keep this manual for future check. The pictures in this manual are only for reference.

Contents

1. Important Safety Instructions	5
1.1 Safety.....	5
1.2 Caution:.....	6
1.3 Warning.....	6
1.4 Marking.....	6
2. What's in the Box	7
3. Identifying the Parts	8
3.1 Main Unit.....	8
3.2 Wireless Subwoofer.....	8
3.3 Remote Control.....	9
4. Preparations	9
4.1 Prepare the Remote Control.....	9
4.2 Replace the Remote Control Battery.....	9
5. Placement and Mounting	10
5.1 Placement.....	10
5.2 Wall Mounting (if using option-B).....	10
6. Connections	11
6.1 Dolby Atmos®.....	11
6.2 HDMI Connection.....	11
6.3 Use the OPTICAL Socket.....	12
6.4 Use the COAXIAL Socket.....	12
6.5 Use the AUX Socket.....	12
6.6 Connect Power.....	12
7. Pairing the Wireless Subwoofer with the Main Unit	13
7.1 Automatic pairing.....	13
7.2 Manual pairing.....	13

8. Basic Operation.....	13
8.1 Standby/ON	13
8.2 Select Modes	13
8.3 Adjust the Bass Level.....	13
8.4 Turn the Surround Sound ON/OFF.....	13
8.5 Adjust the Volume.....	14
8.6 Adjust the Brightness.....	14
8.7 Select equalizer (EQ) Effect	14
9. AUX / OPTICAL / COAXIAL / HDMI Operation.....	14
10. Bluetooth Operation	14
10.1 Pair Bluetooth-enabled Devices	14
10.2 Listen to Music from Bluetooth Device.....	15
11. USB Operation	15
12. Troubleshooting.....	16
13. Specifications.....	17
13.1 Soundbar	17
13.2 Bluetooth.....	17
13.3 Subwoofer.....	17
13.4 Amplifier (RMS Output power).....	17
13.5 Remote Control	17

1. Important Safety Instructions

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		





The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1.1 Safety

- 1 Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2 Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3 Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 Follow all instructions** – All operating and usage instructions should be followed.
- 5 Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- 6 Clean only with a dry cloth.**
- 7 Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
-  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- Minimum distance around the apparatus for sufficient ventilation is 5cm.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Batteries should be recycled or disposed of as per state and local guidelines.
- The use of apparatus in moderate climates.

1.2 Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1.3 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- Do not place this unit close to damp areas as the moisture will affect the life of the laser head.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.



Do not ingest battery, chemical burn hazard

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

1.4 Marking

Declares that the design and manufacturing of this product complies with the European directives for CEmarking as stated below:

2014/35/EU (LVD)
2014/30/EU (EMC)
2011/65/EU (RoHs)
2017/53/EU (RED)



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

■ To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



We hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.



Bluetooth® The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG., Inc.

 


Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.


2. What's in the Box



Main Unit




Remote Control

 

Wireless Subwoofer



 Adapter
(for Main Unit)

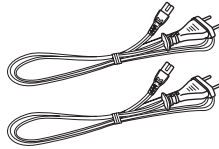


AC Power Cord



3.5mm to 3.5mm
Audio Cable



 HDMI Cable



Wall Bracket

 


Wall mounting Screw

Design and specifications are subject to change without notice.

3. Identifying the Parts

3.1 Main Unit

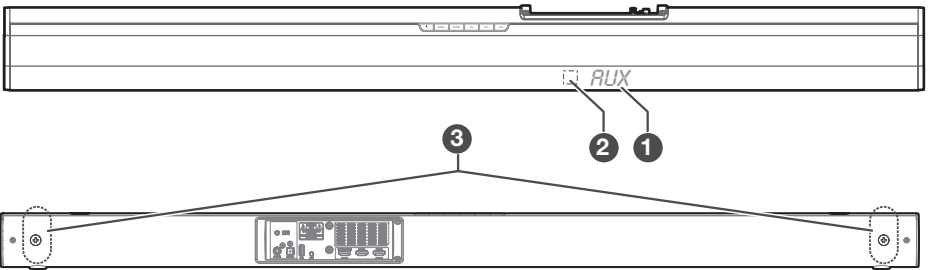

1 Display Window

Show the current status.

2 Remote Control Sensor

Receive signal from the remote control.

3 Wall bracket screws

4 (ON/OFF) button

Switch the unit between ON and Standby mode.

5 SOURCE button

Select the play function.

6 (PAUSE/PLAY) button

Play/pause/resume playback in Bluetooth/USB mode.

Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.

7 EQ button

Select equalizer (EQ) Effect.

8 VOL+/VOL- buttons

Increase/decrease the volume level.

9 DC IN 23V Socket

10 COAXIAL Socket

11 OPTICAL Socket

12 USB Socket

 
 
 
Insert the USB device to play music.

13 AUX Socket

Connect to an external audio device.

14 HDMI (●/●/ARC) Sockets

Connect to a TV via HDMI cable.

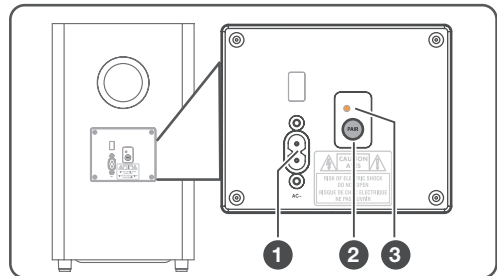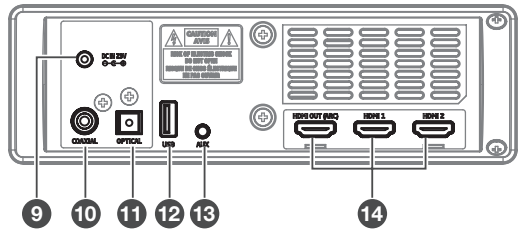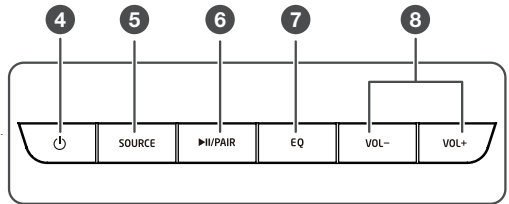

3.2 Wireless Subwoofer


1 AC~ Socket Connect to power.


2 PAIR button

Press activate the pairing function between the main unit and the subwoofer.

3 PAIR Indicator Light up solidly when the pairing succeed.

3.3 Remote Control

- | | |
|--|---|
| <p>1 </p> <p>2 VOL+/VOL-</p> <p>3 SOURCE</p> <p>4 EQ</p> <p>5 DIMMER</p> <p>6 MUTE</p> <p>7 ◀/▶</p> <p>8 ▶ /PAIR</p> <p>9 HDMI</p> <p>10 SURROUND</p> <p>11 BASS</p> | <p>Switch the unit between ON and STANDBY mode.</p> <p>Increase/decrease the volume level.</p> <p>Select equalizer (EQ) Effect.</p> <p>Select a preset sound effect.</p> <p>Adjust display brightness.</p> <p>Mute or resume the sound.</p> <p>Skip to previous/next track in Bluetooth/USB mode.</p> <p>Play/pause/resume playback in Bluetooth/USB mode.
Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.</p> <p>Select the HDMI 1/2/ARC mode.</p> <p>Turn the surround ON/OFF.</p> <p>Activate bass setup.</p> |
|--|---|

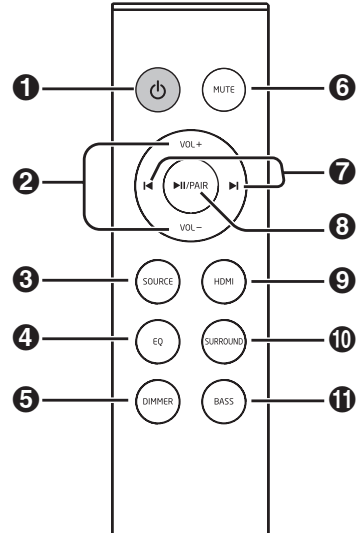 

4. Preparations

 
4.1 Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.


First-time use:

The unit has a pre-installed lithium CR2025 battery. Remove the protective tab to activate the remote control battery.

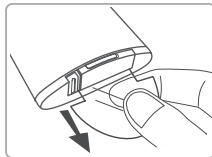

4.2 Replace the Remote Control Battery

 - The remote control requires a CR2025, 3V Lithium battery.
1. Push the tab on the side of the battery tray towards the tray.
 2. Now slide the battery tray out of the remote control.

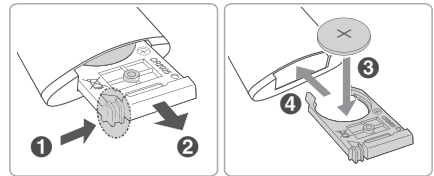

3. Remove the old battery. Place a new CR2025 battery into the battery tray with the correct polarity (+/-) as indicated.
4. Slide the battery tray back into the slot in the remote control.

 
Precautions Concerning Batteries

- When the Remote Control is not to be used for a long time (more than a month), remove the battery from the Remote Control to prevent it from leaking.
- If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.
- Do not use any batteries other than those specified.
- Do not heat or disassemble batteries.
- Never throw them in fire or water.
- Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak or explode.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

5. Placement and Mounting


5.1 Placement

- A If your TV is placed on a table, you can place the unit on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the unit on the wall directly below the TV screen.

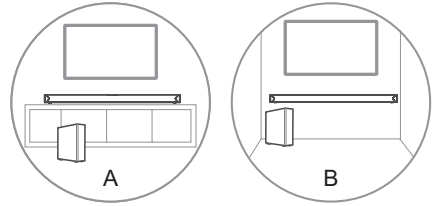

5.2 Wall Mounting (if using option-B)

 - Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the unit and wall brackets.
 - Additional tools (not included) are required for the installation.
 - Do not overtighten screws.
 - Keep this instruction manual for future reference.
1. Use an electronic stud finder to check the wall type before drilling and mounting.
 2. Drill 4 parallel holes (\varnothing 5.5-6 mm each according to wall type) in the wall. The distance between the holes should be 1106 mm.
 3. Firmly fix 1 dowel into each hole in the wall if necessary. Tighten the wall mount brackets on the wall with screws and screwdriver (not included). Make sure that they are securely installed.
 4. Remove the screws at the back of the unit. Install the wall mounting screws into the back of the unit.
 5. Lift the unit onto the wall mount brackets and slot into place.

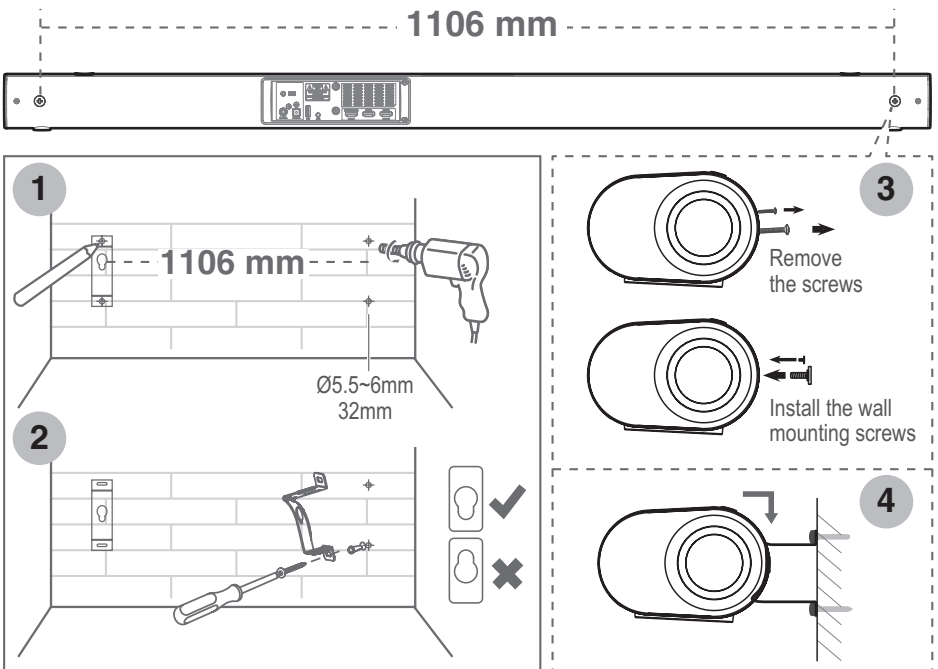

6. Connections

6.1 Dolby Atmos®

Dolby Atmos gives you amazing experience you have never before by overhead sound, and all the richness, clarity, and power of Dolby sound.

For using Dolby Atmos®

Dolby Atmos® is available only in HDMI mode. For the details of the connection, please refer to "HDMI Connection".

1. To use Dolby Atmos® in HDMI 1 and HDMI 2 mode, your TV has to support Dolby Atmos®.
2. Make sure that "No Encoding" is selected for bitstream in the audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).
3. While entering Dolby Atmos / Dolby Digital / PCM format, the soundbar will show DOLBY ATMOS / DOLBY AUDIO / PCM AUDIO.
4. While the soundbar is using Dolby Atmos audio, you can only adjust the bass level of the subwoofer. All other EQ effects will not be available.

6.2 HDMI Connection

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

Using HDMI to connect the soundbar, AV equipment and TV:

Method 1: ARC (Audio Return Channel)

The ARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the sound bar.


- Connect the HDMI cable (not included) from unit's **HDMI (ARC)** socket to the HDMI (ARC) socket on your ARC compliant TV. Then press the remote control to select **HDMI ARC**.


Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.
- Only HDMI 1.4 cables can support the ARC function.

Method 2: Standard HDMI

  - If your TV is not HDMI ARC-compliant, connect your soundbar to the TV through a standard HDMI connection.
1. Use an HDMI cable (included) to connect the soundbar's **HDMI OUT** socket to the TV's HDMI IN socket.
 2. Use an HDMI cable (included) to connect the soundbar's **HDMI IN (1 or 2)** socket to your external devices (e.g. games consoles, DVD players and blu ray).

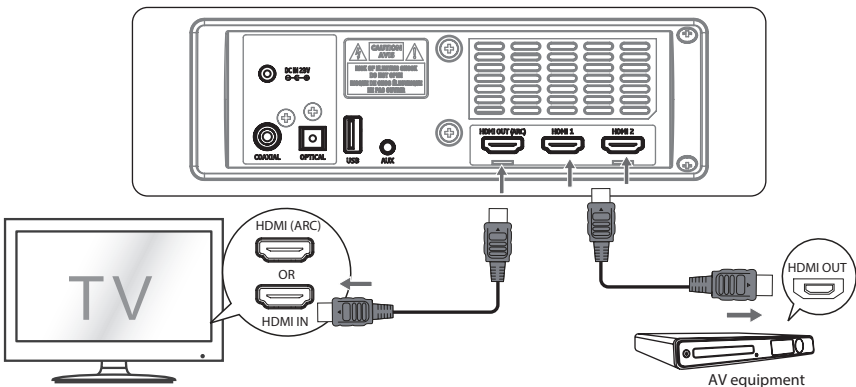

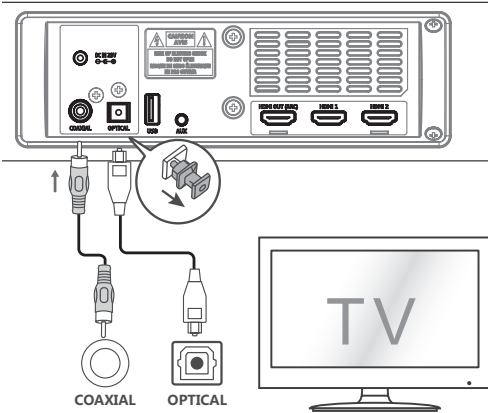


6.3 Use the OPTICAL Socket

- Remove the protective cap of the **OPTICAL** socket, then connect an OPTICAL cable (not included) to the TV's OPTICAL OUT socket and the **OPTICAL** socket on the unit.

6.4 Use the COAXIAL Socket

- You also can use the COAXIAL cable (not included) to connect the TV's COAXIAL OUT socket and COAXIAL socket on the unit.

 Tip: The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI / OPTICAL / COAXIAL input.

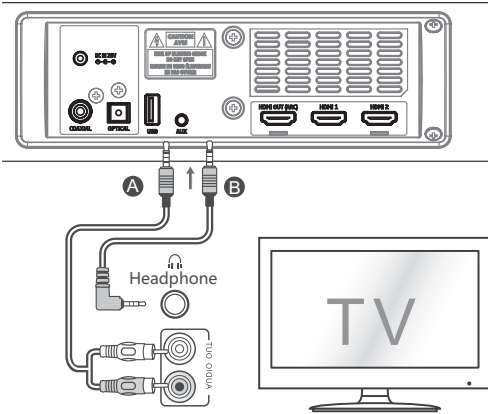

6.5 Use the AUX Socket

- Use a RCA to 3.5mm audio cable (not included) to connect the TV's audio output sockets to the **AUX** socket on the unit.
- Use a 3.5mm to 3.5mm audio cable (included) to connect the TV's or external audio device headphone socket to the **AUX** socket on the unit.

6.6 Connect Power

 
Risk of product damage!

Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.

Before connecting the AC power cord, ensure you have completed all other connections.

Soundbar

Unwind the mains adapter and mains cable to their full length. Connect the mains adapter to the **DC IN 23V** socket of the soundbar, then connect the mains cable to the mains adapter and into a mains socket.

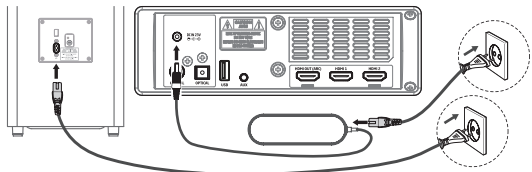

Subwoofer

Connect the mains cable to the **AC-** Socket of the Subwoofer and then into a mains socket.

7. Pairing the Wireless Subwoofer with the Main Unit

7.1 Automatic pairing


The subwoofer and soundbar will automatically pair when both units are plugged into the mains sockets and turned on. No cable is needed for connecting the two units.

- When the subwoofer is pairing with the main unit, the Pair Indicator will flash fast.
- When the subwoofer is paired with the main unit, the Pair Indicator will light up.

NOTE:

- Do not press the **Pair** button on the rear of the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main unit manually.

7.2 Manual pairing

1. Ensure that all the cables are well connected and the main unit is in Standby mode.
2. Press and hold the **Pair** button on the rear of the subwoofer for a few seconds. The subwoofer will enter the pairing mode and the Pair Indicator will blink quickly.
3. Press  the button on the main unit or on the remote control to switch the main unit on.
4. After the wireless connection succeeded, the Pair Indicator will light up.
5. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the subwoofer and then reconnect the main cable after 4 minutes. Repeat step 1 ~ 4.

NOTE:

- If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures.
- The subwoofer should be within 6m (18 feet) of the soundbar in an open area.
- If a TV or an external device is connected, the main unit only AUX model and the subwoofer will switch on automatically



when the TV or the external device is switched on.

- If the main unit is not connected with the subwoofer and it is in On mode, the POWER Indicator will flash. Follow step 1 ~ 4 above to pair the subwoofer to the main unit.


8. Basic Operation

8.1 Standby/ON

When you first connect the main unit to the mains socket, the main unit will be in Standby mode.

- Press the  button on the unit or on the remote control to switch the unit ON.
- Press the  button again to switch the unit back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.
- If a TV or an external device is connected, the unit will switch on automatically when the TV or the external device is switched on.
- When there is no input signal from the unit in over 15 minutes, then it will automatically switch to Standby mode.

8.2 Select Modes

- Press the  (SOURCE) button repeatedly on the unit or the **SOURCE, HDMI** buttons on the remote control to select the **AUX, OPTICAL, COAXIAL, HDMI 1, HDMI 2, HDMI ARC, USB** and **BT** (Bluetooth) mode. The selected mode will show on the display.

8.3 Adjust the Bass Level

- Press the **BASS** button on the remote control to activate bass setup, then press the **VOL+/-** button to adjust the bass level (bass +5 ~ bass -5).

8.4 Turn the Surround Sound ON/OFF

- Press the **SURROUND** button on the remote control to turn on the surround sound. Press this button again to turn off the surround sound.

8.5 Adjust the Volume

- Press the **VOL+ / VOL-** buttons on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the **MUTE** button on the remote control. Press the **MUTE** button again or press the **VOL+ / VOL-** buttons on the unit or on the remote control to resume normal listening.

8.6 Adjust the Brightness


- Press the **DIMMER** button on the remote control to select brightness level.

8.7 Select equalizer (EQ) Effect

While playing, press the **EQ** button on the unit or on the remote control to select desired preset equalizers:

- **MOVIE**, recommended for viewing movies)
- **MUSIC**, recommended for listening to music)
- **NEWS**, recommended for listening to News).

9. AUX / OPTICAL / COAXIAL / HDMI Operation

- 1 Ensure that the unit is connected to the TV or audio device.
- 2 Press the  button repeatedly on the unit or the **SOURCE / HDMI** buttons on the remote control to select the **AUX, OPTICAL, COAXIAL, HDMI 1, HDMI 2, HDMI ARC** mode.
- 3 Operate your audio device directly for playback features.
- 4 Press the **VOL +/-** button to adjust the volume to your desired level.

Tip:

- The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI 1 / HDMI 2 / HDMI ARC / OPTICAL / COAXIAL input.



- When the DOLBY DIGITAL audio format is entered, the Soundbar display shows **DOLBY AUDIO**.
- When the PCM audio format is entered, the Soundbar display shows **PCM AUDIO**.
- When entering non-PCM or DOLBY DIGITAL audio formats, if there's no sound output from the unit and the display show **NO SUPPORT**.

10. Bluetooth Operation

10.1 Pair Bluetooth-enabled Devices

The first time you connect your bluetooth device to this player, you need to pair your device to this player.

Note:

- The operational range between this player and a Bluetooth device is approximately 8 meters (without any object between the Bluetooth device and the unit).
 - Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.
 - Compatibility with all Bluetooth devices is not guaranteed.
 - Any obstacle between this unit and a Bluetooth device can reduce the operational range.
 - If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- 1 During ON mode, press the  button repeatedly on the unit or the **SOURCE** button on the remote control to select Bluetooth mode. "**NO BT**" will show on the display if the unit is not paired to any Bluetooth device.
 - 2 Activate your Bluetooth device and select the search mode. "**VXA-TB873W7**" will appear on your Bluetooth device list.
- If you cannot find the unit, press and hold the  **PAIR** button on the remote control to be searchable. The display will show "**PAIR**" and you will hear "**Pairing**" from the unit.

- 3 Select "VXA-TB873W7" in the pairing list. After successful pairing, you will hear "Paired" from the unit, and the display panel shows "BT".
- 4 Play music from the connected Bluetooth device.

To disconnect the Bluetooth function, you can :

- Switch to another function on the unit.
- Disable the function from your Bluetooth device. The Bluetooth device will be disconnected from the unit after the "Disconnected" voice prompt.
- Press and hold the ►||/ PAIR button on the remote control.

Tips:

- Enter "0000" for the password if necessary.
- If no other Bluetooth device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.


10.2 Listen to Music from Bluetooth Device


- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
- If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.

1. Pair your device with the player.
2. Play music via your device (if it supports A2DP).
3. Use supplied remote control to control play (if it supports AVRCP).
 - To pause/resume play, press the ►||/ PAIR button on the remote control or on the unit.
 - To skip to a track, press the ◀/▶ buttons on the remote control.

11. USB Operation

 - 1 Insert the USB device.

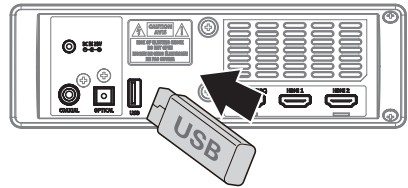

- 2 Press the  button repeatedly on the unit or press the **SOURCE** button on the remote control to select **USB** mode.
- 3 During playback:
 - To pause or resume play, press the ►||/ PAIR button on the remote control or on the unit.
 - To skip to the previous/next file, press the ◀/▶ buttons on the remote control.

Tips:

- The unit can support USB devices with up to 32 GB of memory.
- This unit can play MP3 only.

12. Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power	<ul style="list-style-type: none"> • Ensure that the AC cord of the apparatus is properly connected . • Ensure that there is power at the AC outlet. • Press ⏻ (standby) button to turn the unit on.
Remote control does not work	<ul style="list-style-type: none"> • Before you press any playback control button, first select the correct source. • Reduce the distance between the remote control and the unit. • Insert the battery with its polarities (+/-) aligned as indicated. • Replace the battery. • Aim the remote control directly at the sensor on the front of the unit.
No sound	<ul style="list-style-type: none"> • Make sure that the unit is not muted. Press MUTE or VOL+/VOL- button to resume normal listening. • Press ⏻ button on the unit or on the remote control to switch the soundbar to standby mode. Then press the ⏻ button again to switch the soundbar on. • Unplug both the soundbar and the subwoofer from the mains socket, then plug them again. Switch on the soundbar. • Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL, COAXIAL) connection. • The subwoofer is out of range, please move the subwoofer closer to the soundbar. Make sure the subwoofer is within 5 m of the soundbar (the closer the better). • The soundbar may have lost connection with the subwoofer. Re-pair the units by following the steps on the section "Pairing the Wireless Subwoofer with the Soundbar". • The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. device is not muted.
TV has display problem while viewing HDR content from HDMI source.	<ul style="list-style-type: none"> • Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.
I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing	<ul style="list-style-type: none"> • Ensure the Bluetooth function is activated on your Bluetooth device. • Ensure you have paired the unit with your Bluetooth device.
This is a 15 mins power off function, one of the ERPII standard requirement for saving power	<ul style="list-style-type: none"> • When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device.
The subwoofer is idle or the indicator of subwoofer do not light up.	<ul style="list-style-type: none"> • Please unplug power cord from the mains socket, and plug it in again after 4 minutes to reset the subwoofer.

13. Specifications

13.1 Soundbar

Adapter Power Input	AC100-240V~ 50/60Hz, 4A
Adapter Power Output	23V $\overline{\text{---}}$ 4A $\ominus\text{---}\oplus$
Main Unit Power Supply Input	DC 23V
USB	5V $\overline{\text{---}}$ 0.5A
Dimension (WxHxD)	1198 x 73 x 110 mm (47.2 x 2.9 x 4.3 inch)
Net weight	8.8 lbs (4 kg)
Audio input sensitivity	700mV
Frequency Response	120Hz - 20KHz

13.2 Bluetooth

Version	V 4.2
Maximum power transmitted	5 dbm
Frequency bands	2402 MHz ~ 2480 MHz

13.3 Subwoofer

Bar Power Supply	AC100-240V~ 50/60Hz
Dimension (WxHxD)	240 x 420 x 240 mm (9.5 x 16.5 x 9.5 inch)
Net weight	11.55 lbs (5.25 kg)
Frequency Response	40Hz - 120Hz
Maximum power transmitted	10 dbm
Frequency bands	2400 MHz ~ 2483 MHz

13.4 Amplifier (RMS Output power)

Total	380 W
Main Unit	25W (8 Ω) x 6 + 50W (4 Ω)
Subwoofer	180W (3 Ω)

13.5 Remote Control

Distance/Angle	19.7 feet (6m) / 30°
Battery type	CR 2025

