



User Manual



2.1CH Dolby Atmos Soundbar with
wireless Subwoofer
VXA-300

Please read this manual carefully for proper usage before installation and use. It is recommended to keep this manual for future check. The pictures in this manual are only for reference.

Contents

1. Important Safety Instructions	3
1.1 Safety	3
1.2 Caution	4
1.3 Warning	4
1.4 Marking	4
2. What's in the Box	5
3. Identifying the Parts	6
3.1 Main Unit	6
3.2 Wireless Subwoofer	6
3.3 Remote Control	7
4. Preparations	7
4.1 Prepare the Remote Control	7
4.2 Replace the Remote Control Battery	7
5. Placement and Mounting	8
5.1 Placement	8
5.2 Wall Mounting (if using option-B)	8
6. Connections	9
6.1 Dolby Atmos®	9
6.2 HDMI Connection	9
6.3 Use the OPTICAL Socket	10
6.4 Use the COAXIAL Socket	10
6.5 Use the AUX Socket	10
6.6 Connect Power	10
7. Pairing the Wireless Subwoofer with the Main Unit	10
7.1 Automatic pairing	10
7.2 Manual pairing	11
8. Basic Operation	11
8.1 Standby/ON	11
8.2 Select Modes	11
8.3 Adjust the Bass/Treble Level	11
8.4 Turn the Surround Sound ON/OFF	11
8.5 Set the Audio Delay (AV SYNC)	11
8.6 Adjust the Volume	12
8.7 Adjust the Brightness	12
8.8 Select equalizer (EQ) Effect	12
9. AUX / OPTICAL / COAXIAL / HDMI Operation	12
10. Bluetooth Operation	12
10.1 Pair Bluetooth-enabled Devices	12
10.2 Listen to Music from Bluetooth Device	13
11. USB Operation	13
12. Troubleshooting	14
13. Specifications	15

1. Important Safety Instructions

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1.1 Safety

- 1. Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2. Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3. Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow all instructions** – All operating and usage instructions should be followed.
- 5. Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- 6. Clean only with a dry cloth.**
- 7. Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
-  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- Minimum distance around the apparatus for sufficient ventilation is 5cm.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Batteries should be recycled or disposed of as per state and local guidelines.
- The use of apparatus in moderate climates.

1.2 Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1.3 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.



Do not ingest battery, chemical burn hazard

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using

the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

1.4 Marking

Declares that the design and manufacturing of this product complies with the European directives for CEMarking as stated below:

2014/35/EU (LVD)

2014/30/EU (EMC)

2011/65/EU (RoHs)

2017/53/EU (RED)



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

We hereby declare that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.



The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

 


Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2020 Dolby Laboratories. All rights reserved.


2. What's in the Box




Main Unit



Remote Control /
AAA Batteries x 2

 


Wireless Subwoofer

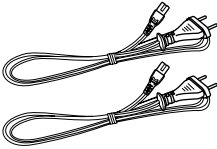 


AC Power Cord



 3.5mm to 3.5mm
Audio Cable

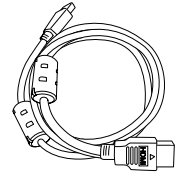

HDMI Cable

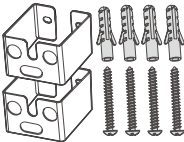 


Wall Bracket



Wall mounting Screw




- Design and specifications are subject to change without notice.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

 3. Identifying the Parts

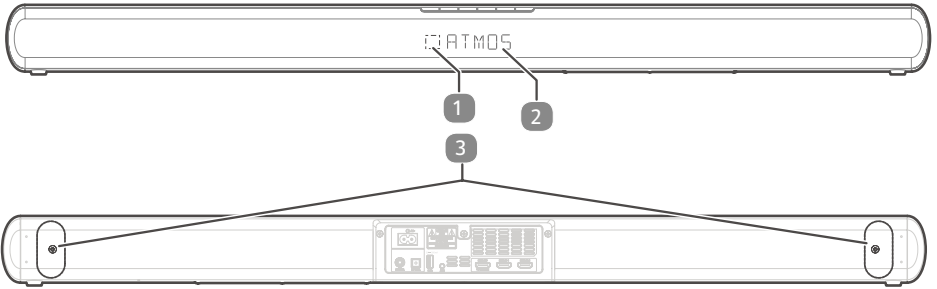

   3.1 Main Unit



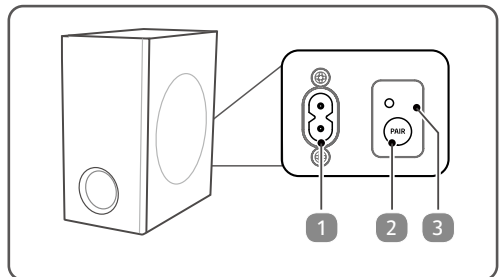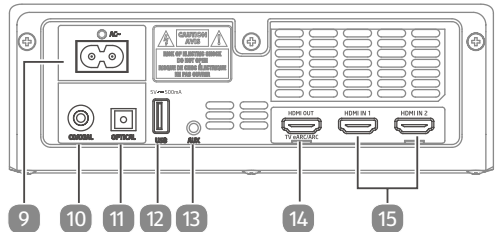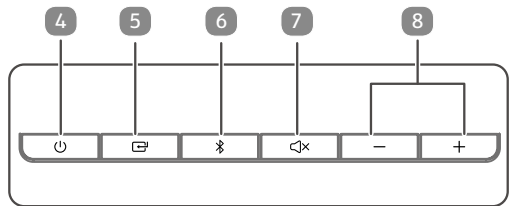


- 1 **Remote Control Sensor**
Receive signal from the remote control.
- 2 **Display Window**
Show the current status.
- 3 **Wall bracket screws**
- 4 **⏻ (ON/OFF) button**
Switch the unit between ON and Standby mode.
- 5 **📺 (SOURCE) button**
Select the play function.
- 6 **📶**
Select the Bluetooth mode.
- 7 **🔇 (MUTE) button**
Mute or resume the sound.
- 8 **+/- buttons**
Increase/decrease the volume level.
- 9 **AC~ Socket**
- 10 **COAXIAL Socket**
- 11 **OPTICAL Socket**
- 12 **USB Socket**
Insert the USB device to play music.
- 13 **AUX Socket**
Connect to an external audio device.
- 14 **HDMI (TV eARC/ARC) Socket**
Connect to a TV via HDMI cable.
- 15 **HDMI IN (1/2) Sockets**
Connect to HDMI OUT socket of external devices (e.g. games consoles, DVD players and blu-ray).




3.2 Wireless Subwoofer

- 1 **AC~ Socket** Connect to power.
- 2 **PAIR button**
Press activate the pairing function between the main unit and the subwoofer.
- 3 **PAIR Indicator** Light stops blinking once the Subwoofer is paired with the Soundbar.

 3.3 Remote Control

- 1  Switch the unit between ON and STANDBY mode.
- 2 **SOURCE** buttons Select the play function.
 - AUX BT
 - USB OPT/COAX
 - HDMI1/2 HDMI eARC
- 3  Skip to previous/next track in Bluetooth/USB mode.
 -  Play/pause/resume playback in Bluetooth/USB mode. Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
- 4 **BASS +/-** Adjust bass level.
- 5 **TREBLE +/-** Adjust treble level.
- 6  (MUTE) Mute or resume the sound.
 -  (vol) Increase/decrease the volume level.
- 7 **VERTICAL/SURROUND** Adjust the surround ON/OFF. Press and hold to enter the audio delay setup.
- 8 **EQ** buttons Select Equalizer (EQ) Effect.
 - VOICE SPORT
 - MOVIE MUSIC
- 9 **DIMMER** Adjust display brightness.

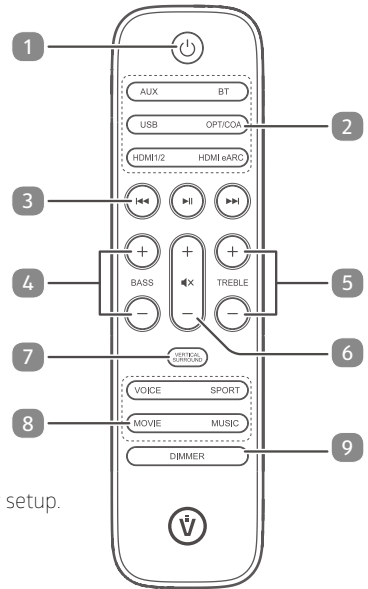 

4. Preparations

 
4.1 Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

4.2 Replace the Remote Control Battery

- 1 Press and slide the back cover to open the battery compartment of the remote control.
- 2 Insert two **AAA** size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3 Close the battery compartment cover.

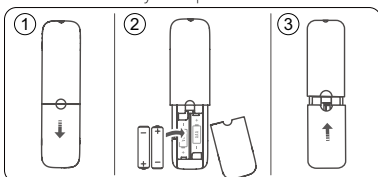


Precautions Concerning Batteries

- Be sure to insert the batteries with correct positive "+" and negative "-" polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

5. Placement and Mounting


5.1 Placement

 - A If your TV is placed on a table, you can place the unit on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the unit on the wall directly below the TV screen.

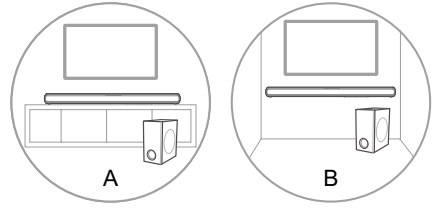

5.2 Wall Mounting (if using option-B)

 - Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the unit and wall brackets.
 - Additional tools (not included) are required for the installation.
 - Do not overtighten screws.
 - Keep this instruction manual for future reference.
1. Use an electronic stud finder to check the wall type before drilling and mounting.
 2. Drill 4 parallel holes (Ø 5.5-6 mm each according to wall type) in the wall. The distance between the holes should be **696 mm**.
 3. Firmly fix 1 dowel into each hole in the wall if necessary. Tighten the wall mount brackets on the wall with screws and screwdriver (not included). Make sure that they are securely installed.
 4. Remove the screws at the back of the unit. Install the wall mounting screws into the back of the unit.
 5. Lift the unit onto the wall mount brackets and slot into place.

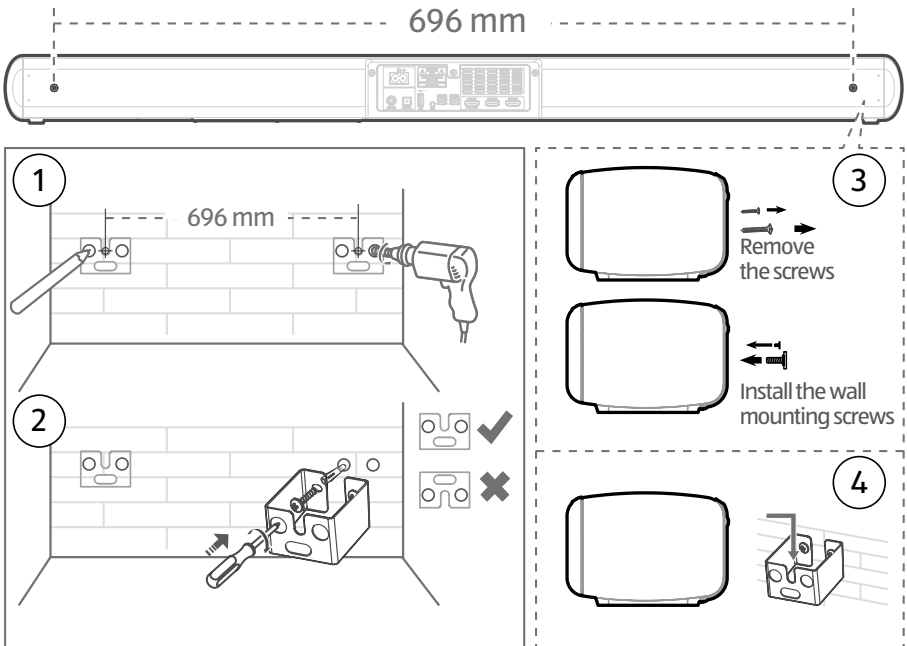

6. Connections

6.1 Dolby Atmos®

Dolby Atmos® gives you immersive listening experience by delivering sound in three dimensional space, and all the richness, clarity, and power of Dolby sound. For more information, please visit dolby.com/technologies/dolby-atmos

For using Dolby Atmos®

Dolby Atmos® is available only in HDMI mode. For the details of the connection, please refer to **"HDMI Connection"**.

1. To use Dolby Atmos® in HDMI 1 and HDMI 2 mode, your TV has to support Dolby Atmos®.
2. Make sure that "No Encoding" is selected for bitstream in the audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).
3. While entering Dolby Atmos / Dolby Digital / PCM format, the soundbar will show DOLBY ATMOS / DOLBY AUDIO / PCM AUDIO.

6.2 HDMI Connection


Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

Using HDMI to connect the soundbar, AV equipment and TV:

Method 1: eARC/ARC (Audio Return Channel)

The eARC/ARC (Audio Return Channel) function allows you to send audio from your eARC/ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the eARC/ARC function, please ensure your TV is both HDMI-CEC and eARC/ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the soundbar.

 - Connect the HDMI cable (included) from unit's **HDMI OUT (TV eARC/ARC)** socket to the HDMI (eARC/ARC) socket on your ARC compliant TV. Then press the remote control to select **HDMI eARC**.

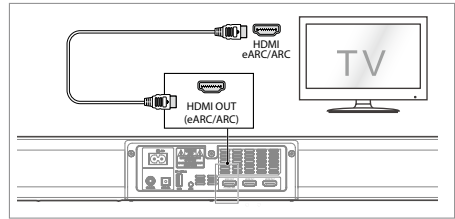


Tips:

- Your TV must support the HDMI-CEC and eARC/ARC function. HDMI-CEC and eARC/ARC must be set to On.
- The setting method of HDMI-CEC and eARC/ARC may differ depending on the TV. For details about eARC/ARC function, please refer to the owner's manual.
- Only HDMI 1.4 cables can support the eARC/ARC function.

Method 2: Standard HDMI


- If your TV is not HDMI eARC/ARC-compliant, connect your soundbar to the TV through a standard HDMI connection.

 1. Use an HDMI cable (included) to connect the soundbar's **HDMI OUT** socket to the TV's HDMI IN socket.
2. Use an HDMI cable (not included) to connect the soundbar's **HDMI IN (1 or 2)** socket to your external devices (e.g. games consoles, DVD players and blu ray).

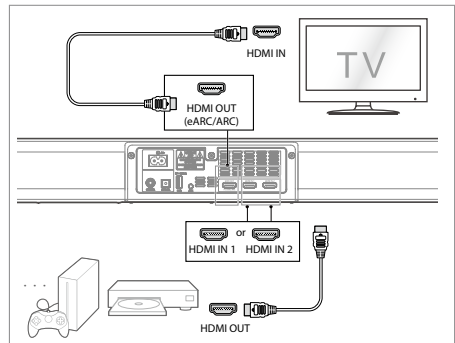

6.3 Use the OPTICAL Socket

 - Remove the protective cap of the **OPTICAL** socket, then connect an **OPTICAL** cable (not included) to the TV's **OPTICAL OUT** socket and the **OPTICAL** socket on the unit.

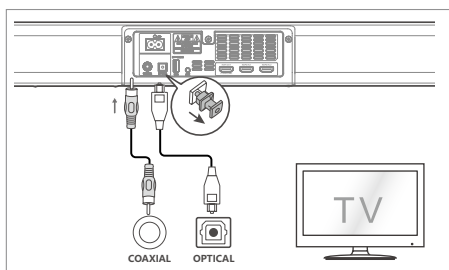


6.4 Use the COAXIAL Socket

- You also can use the **COAXIAL** cable (not included) to connect the TV's **COAXIAL OUT** socket and **COAXIAL** socket on the unit.

Tip: The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is **NOT** a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with **HDMI / OPTICAL / COAXIAL** input.

 
6.5 Use the AUX Socket

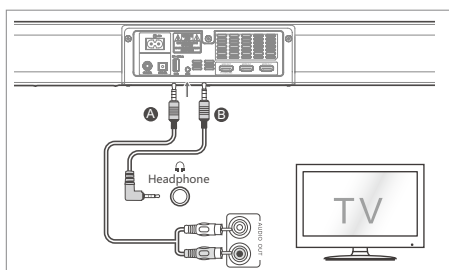

- Use a **RCA to 3.5mm** audio cable (not included) to connect the TV's audio output sockets to the **AUX** socket on the unit.
- Use a **3.5mm to 3.5mm** audio cable (included) to connect the TV's or external audio device headphone socket to the **AUX** socket on the unit.

6.6 Connect Power

 - **Risk of product damage!**
Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the **AC** power cord, ensure you have completed all other connections.
- **Soundbar**
Connect the mains cable to the **AC**- Socket of the main unit and then into a mains socket.
- **Subwoofer**
Connect the mains cable to the **AC**- Socket of the Subwoofer and then into a mains socket.

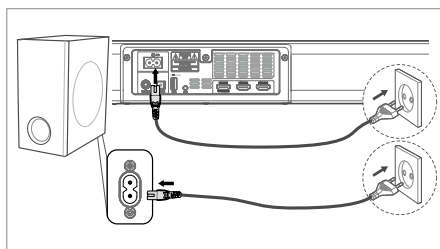

7. Pairing the Wireless Subwoofer with the Main Unit

7.1 Automatic pairing

The subwoofer and the soundbar will be paired automatically when both are powered on.


- Determine the status based on the wireless Subwoofer indicator.

LED State	Status
Fast blink	Subwoofer in pairing mode
Constant on	Connected / Pairing successful
Slow blink	Connection / Pairing Failed

NOTE:

- Do not press the **Pair** button on the rear of the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main unit manually.

7.2 Manual pairing

1. Ensure that all the cables are well connected and the main unit is in Standby mode.
2. Press and hold the **Pair** button on the rear of the subwoofer for a few seconds. The subwoofer will enter the pairing mode and the Pair Indicator will blink quickly.
3. Press the  button to switch the main unit **ON**.
4. After the wireless connection succeeded, the Pair Indicator will light up.
5. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the subwoofer and then reconnect the main cable after 4 minutes. Repeat step 1 ~ 4.



NOTE:

- If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures.
- The subwoofer should be within 6m (18 feet) of the soundbar in an open area.
- If a TV or an external device is connected, the main unit only AUX model and the subwoofer will switch on automatically when the TV or the external device is switched on.
- If the main unit is not connected with the subwoofer and it is in On mode, the POWER Indicator will flash. Follow step 1 ~ 4 above to pair the subwoofer to the main unit.

8. Basic Operation

8.1 Standby/ON

When you first connect the main unit to the mains socket, the main unit will be in Standby mode.

- Press the  button on the unit or on the remote control to switch the unit ON.
- Press the  button again to switch the unit back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.


- If a TV or an external device is connected, the unit will switch on automatically when the TV or the external device is switched on.

Automatic Power Off Function

The unit automatically turns to **Standby** mode after about 15 minutes if the TV or the external unit is disconnected, switched off or the volume is too close to mute.

- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.

8.2 Select Modes

- Press the  (SOURCE) button repeatedly on the **AUX, BT, OPT/COA, HDMI 1/2, HDMI eARC, USB** buttons on the remote control to select the desired mode. The selected mode will show on the display.

8.3 Adjust the Bass/Treble Level

- Press the **BASS +/-** buttons on the remote control to adjust bass level.
- Press the **TREBLE +/-** buttons on the remote control to adjust treble level.

8.4 Turn the Surround Sound ON/OFF

- Press the **VERTICAL/SURROUND** button on the remote control to turn on the surround sound. Press this button again to turn off the surround sound.

8.5 Set the Audio Delay (AV SYNC)

Video image processing, sometimes longer than the time required to process the audio signal. This is called "delayed." Audio Delay feature is designed to remedy this delay.

- Set the audio delay, provided only for the current playback mode. (As provided in the HDMI ARC audio delay mode, the delay mode is valid only for the HDMI ARC).
- 1 Press and hold **VERTICAL/SURROUND** button on the remote control to enter the audio delay settings, the unit's display will scroll **"LATENCY SET"**.
 - 2 Press the **+/- (VOL)** buttons will be a 10 ms frequency hopping to adjust the delay time.

8.6 Adjust the Volume

- Press the **+/- (VOL)** buttons on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the **⏏ (MUTE)** button on the remote control. Press the **⏏ (MUTE)** button again or press the **+/- (VOL)** buttons on the unit or on the remote control to resume normal listening.

8.7 Adjust the Brightness

- Press the **DIMMER** button on the remote control to select brightness level.

8.8 Select equalizer (EQ) Effect

Press the **VOICE / SPORT / MOVIE / MUSIC** buttons on the remote control to select your desired preset equalizer effects.

9. AUX / OPTICAL / COAXIAL / HDMI Operation

- 1 Ensure that the unit is connected to the TV or audio device.
- 2 Press the **☐** button repeatedly on the unit or the **AUX, OPT/COA, HDMI 1/2, HDMI eARC** buttons on the remote control to select the desired mode. The selected mode will show on the display.
- 3 Operate your audio device directly for playback features.
- 4 Press the **VOL +/-** button to adjust the volume to your desired level.

Tip:

- The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI 1 / HDMI 2 / HDMI eARC / OPTICAL / COAXIAL input.
- When the DOLBY DIGITAL audio format is entered, the Soundbar display shows **DOLBY AUDIO**.

- When the PCM audio format is entered, the Soundbar display shows **PCM AUDIO**.
- When entering non-PCM or DOLBY DIGITAL audio formats, if there's no sound output from the unit and the display show **NO SUPPORT**.

10. Bluetooth Operation

10.1 Pair Bluetooth-enabled Devices

The first time you connect your bluetooth device to this player, you need to pair your device to this player.

Note:

- The operational range between this player and a Bluetooth device is approximately 8 meters (without any object between the Bluetooth device and the unit).
 - Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.
 - Compatibility with all Bluetooth devices is not guaranteed.
 - Any obstacle between this unit and a Bluetooth device can reduce the operational range.
 - If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- 1 During ON mode, press the **☐** button repeatedly on the unit or the **SOURCE** button on the remote control to select Bluetooth mode. **"NO BT"** will show on the display if the unit is not paired to any Bluetooth device.
 - 2 Activate your Bluetooth device and select the search mode. **"VXA-300"** will appear on your Bluetooth device list.
 - If you cannot find the unit, press and hold the **▶||** button on the remote control to be searchable. You will hear audio prompt from the unit and the display panel shows **"PAIR"**.
 - 3 Select **"VXA-300"** in the pairing list. After successful pairing, you will hear audio prompt from the unit and the display panel shows **"BT"**.
 - 4 Play music from the connected Bluetooth device.

To disconnect the Bluetooth function, you can :

- Switch to another function on the unit.
- Disable the function from your Bluetooth device. The Bluetooth device will be disconnected from the soundbar after audio prompt.
- Press and hold the ►|| button on the remote control.

Tips:


- Enter "0000" for the password if necessary.
- If no other Bluetooth device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.


10.2 Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
 - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
- 1 Pair your device with the player.
 - 2 Play music via your device (if it supports A2DP).
 - 3 Use supplied remote control to control play (if it supports AVRCP).
- To pause/resume play, press the ►|| button on the remote control.
 - To skip to a track, press the ◀◀ / ▶▶ buttons on the remote control.

11. USB Operation

 - 1 Insert the USB device.

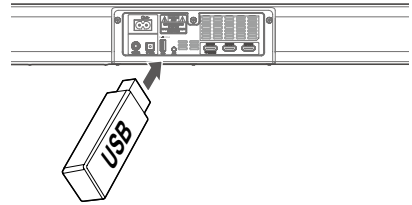

- 2 Press the  button repeatedly on the unit or press the **USB** button on the remote control to select **USB** mode.
- 3 During playback:
 - To pause or resume play, press the ►|| button on the remote control.
 - To skip to the previous/next file, press the ◀◀ / ▶▶ buttons on the remote control.

Tips:

- The unit can support USB devices with up to 32 GB of memory.
- This unit can play MP3 only.

12. Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power	<ul style="list-style-type: none"> • Ensure that the AC cord of the apparatus is properly connected . • Ensure that there is power at the AC outlet. • Press ⏻ (standby) button to turn the unit on.
Remote control does not work	<ul style="list-style-type: none"> • Before you press any playback control button, first select the correct source. • Reduce the distance between the remote control and the unit. • Insert the battery with its polarities (+/-) aligned as indicated. • Replace the battery. • Aim the remote control directly at the sensor on the front of the unit.
No sound	<ul style="list-style-type: none"> • Make sure that the unit is not muted. Press MUTE or VOL+/VOL- button to resume normal listening. • Press ⏻ button on the unit or on the remote control to switch the soundbar to standby mode. Then press the ⏻ button again to switch the soundbar on. • Unplug both the soundbar and the subwoofer from the mains socket, then plug them again. Switch on the soundbar. • Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL, COAXIAL) connection. • The subwoofer is out of range, please move the subwoofer closer to the soundbar. Make sure the subwoofer is within 5 m of the soundbar (the closer the better). • The soundbar may have lost connection with the subwoofer. Re-pair the units by following the steps on the section "Pairing the Wireless Subwoofer with the Soundbar". • The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. device is not muted.
TV has display problem while viewing HDR content from HDMI source.	<ul style="list-style-type: none"> • Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.
I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing	<ul style="list-style-type: none"> • Ensure the Bluetooth function is activated on your Bluetooth device. • Ensure you have paired the unit with your Bluetooth device.
This is a 15 mins power off function, one of the ERPII standard requirement for saving power	<ul style="list-style-type: none"> • When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device.
The subwoofer is idle or the indicator of subwoofer do not light up.	<ul style="list-style-type: none"> • Please unplug power cord from the mains socket, and plug it in again after 4 minutes to reset the subwoofer.

13. Specifications

13.1 Soundbar

Power Supply	AC100-240V~ 50/60Hz
Power Consumption	30 W / < 0.5 W (StandBy)
USB	5V $\overline{\text{---}}$ 500mA Hi-Speed USB (2.0) / FAT32 / FAT16 32G (max) , MP3
Dimension (WxHxD)	800 x 75 x 105
Net weight	x.x kg
Audio input sensitivity	700mV
Frequency Response	120Hz - 20KHz

13.2 Wireless Specification

Bluetooth version / profiles	V 4.2 (A2DP, AVRCP)
Bluetooth frequency range	2400 MHz ~ 2483.5 MHz
Bluetooth Max. transmitting power	≤ 5 dBm
2.4G Wireless frequency range	2400 MHz ~ 2483 MHz
2.4G Max. transmitting power	≤ 6 dBm
Modulation Type	GFSK, $\pi/4$ DQPSK

13.3 Subwoofer

Power Supply	AC100-240V~ 50/60Hz
Power Consumption	30 W / < 0.5 W (StandBy)
Dimension (WxHxD)	170 x 345 x 313 mm
Net weight	5.4 kg
Frequency Response	40Hz - 120Hz

13.4 Amplifier (RMS Output power)

Total	240 W
Main Unit	30W (8 Ω) + 30W (8 Ω) + 60W (4 Ω)
Subwoofer	120W (3 Ω)

13.5 Remote Control

Distance/Angle	19.7 feet (6m) / 30°
Battery type	AAA (1.5V x 2)

