 


All-in-one PC

User Manual

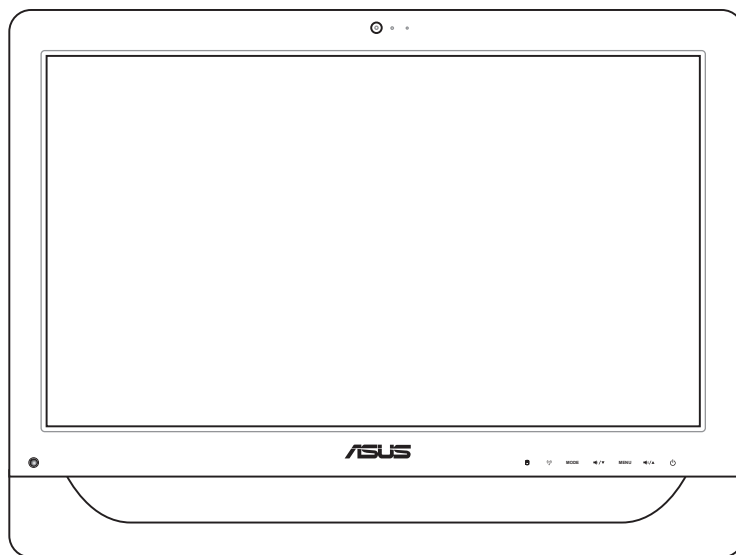

ET2011 Series

E6015

First Edition

August 2010

Copyright © 2010 ASUSTeK COMPUTER INC. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER, INC. ("ASUS").

Products and corporate names mentioned in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used for identification purposes only. All trademarks are the property of their respective owners.

Every effort has been made to ensure that the contents of this manual are correct and up to date. However, the manufacturer makes no guarantee regarding the accuracy of its contents, and reserves the right to make changes without prior notice.

Contents

Contents	3
Notices	5
Federal Communications Commission Statement	5
Canadian Department of Communications Statement	6
IC Radiation Exposure Statement for Canada	6
Declaration of Conformity (R&TTE directive 1999/5/EC)	6
CE Mark Warning	7
Wireless Operation Channel for Different Domains	7
France Restricted Wireless Frequency Bands	8
REACH	9
Global Environmental Regulation Compliance and Declaration	10
Takeback Services	10
UL Safety Precaution	10
ENERGY STAR complied product	11
Notes for this manual	11
Safety information	12
Setting up your system	12
Care during use	12
Sound Pressure	13
TV Tuner (on selected models)	13
Adapter	13
DC Fan	13
Welcome	14
Package contents	14
Getting to know your All-in-one PC	15
Front view	15
Rear view	19
Side views	23
Using the touch screen	24
Showing the touch pointer	24
Cleaning the touch screen	25
Using the keyboard	26
Function keys (for wireless keyboard only)	27

Positioning your All-in-one PC28

 Placing on the desktop.....28

 Mounting to the wall (optional)28

Setting up your All-in-one PC32

 Connecting the wired keyboard and mouse.....32

 Connecting the wireless keyboard and mouse32

 Powering on the system.....33

 Powering off33

 Calibrating the screen.....34

 Configuring a wireless connection35

 Configuring a wired connection36

 Using a static IP36

 Using a dynamic IP (PPPoE).....38

 Configuring the audio output.....41

 Speaker configurations.....41

 Connecting to speakers.....41

 Configuring audio output settings42

Recovering your system43

 Using the Recovery Partition.....43

 Recovering the OS to the Factory Default Partition (F9 Recovery)43

 Backing up the Factory Default Environment Data to a USB Drive (F9 Backup) 43

 Using the USB storage device (USB Restore)44

Notices

Federal Communications Commission Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

This class B digital apparatus complies with Canadian ICES-003.

IC Radiation Exposure Statement for Canada

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with IC RF exposure compliance requirements, please avoid direct contact to the transmitting antenna during transmitting. End users must follow the specific operating instructions for satisfying RF exposure compliance.

Operation is subject to the following two conditions:

- This device may not cause interference and
- This device must accept any interference, including interference that may cause undesired operation of the device.

Declaration of Conformity (R&TTE directive 1999/5/EC)

The following items were completed and are considered relevant and sufficient:

- Essential requirements as in [Article 3]
- Protection requirements for health and safety as in [Article 3.1a]
- Testing for electric safety according to [EN 60950]
- Protection requirements for electromagnetic compatibility in [Article 3.1b]
- Testing for electromagnetic compatibility in [EN 301 489-1] & [EN 301 489-17]
- Effective use of the radio spectrum as in [Article 3.2]
- Radio test suites according to [EN 300 328-2]

CE Mark Warning

This is a Class B product, in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.



CE marking for devices without wireless LAN/Bluetooth

The shipped version of this device complies with the requirements of the EEC directives 2004/108/EC “Electromagnetic compatibility” and 2006/95/EC “Low voltage directive”.



CE marking for devices with wireless LAN/ Bluetooth

This equipment complies with the requirements of Directive 1999/5/EC of the European Parliament and Commission from 9 March, 1999 governing Radio and Telecommunications Equipment and mutual recognition of conformity.

Wireless Operation Channel for Different Domains

N. America	2.412-2.462 GHz	Ch01 through CH11
Japan	2.412-2.484 GHz	Ch01 through Ch14
Europe ETSI	2.412-2.472 GHz	Ch01 through Ch13

France Restricted Wireless Frequency Bands

Some areas of France have a restricted frequency band. The worst case maximum authorized power indoors are:

- 10mW for the entire 2.4 GHz band (2400 MHz–2483.5 MHz)
- 100mW for frequencies between 2446.5 MHz and 2483.5 MHz



Channels 10 through 13 inclusive operate in the band 2446.6 MHz to 2483.5 MHz.

There are few possibilities for outdoor use: On private property or on the private property of public persons, use is subject to a preliminary authorization procedure by the Ministry of Defense, with maximum authorized power of 100mW in the 2446.5–2483.5 MHz band. Use outdoors on public property is not permitted.

In the departments listed below, for the entire 2.4 GHz band:

- Maximum authorized power indoors is 100mW
- Maximum authorized power outdoors is 10mW

Departments in which the use of the 2400–2483.5 MHz band is permitted with an EIRP of less than 100mW indoors and less than 10mW outdoors:

01 Ain	02 Aisne	03 Allier	05 Hautes Alpes	
08 Ardennes	09 Ariège	11 Aude	12 Aveyron	16 Charente
24 Dordogne	25 Doubs	26 Drôme	32 Gers	36 Indre
37 Indre et Loire	41 Loir et Cher	45 Loiret	50 Manche	55 Meuse
58 Nièvre	59 Nord	60 Oise	61 Orne	63 Puy du Dôme
64 Pyrénées Atlantique	66 Pyrénées Orientales	67 Bas Rhin	68 Haut Rhin	
70 Haute Saône	71 Saône et Loire	75 Paris	82 Tarn et Garonne	
84 Vaucluse	88 Vosges	89 Yonne		
90 Territoire de Belfort	94 Val de Marne			

This requirement is likely to change over time, allowing you to use your wireless LAN card in more areas within France. Please check with ART for the latest information (www.art-telecom.fr)



Your WLAN Card transmits less than 100mW, but more than 10mW.

NO DISASSEMBLY

The warranty does not apply to the products that have been disassembled by users

Lithium-Ion Battery Warning

CAUTION: Danger of explosion if RTC (Real Time Clock) battery is incorrectly replaced. It should be replaced only with the same or equivalent type by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

No Exposure to Liquids

DO NOT expose to or use near liquids, rain, or moisture. This product is not waterproof or oil-proof.



This symbol of the crossed out wheeled bin indicates that the product (electrical, electronic equipment, and mercury-containing button cell battery) should not be placed in municipal waste. Check local regulations for disposal of electronic products.



DO NOT throw the battery in municipal waste. The symbol of the crossed out wheeled bin indicates that the battery should not be placed in municipal waste.

REACH

Complying with the REACH (Registration, Evaluation, Authorization, and Restriction of Chemicals) regulatory framework, we publish the chemical substances in our products at ASUS REACH website at <http://csr.asus.com/english/REACH.htm>.

Global Environmental Regulation Compliance and Declaration

ASUS follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASUS product is in line with global environmental regulations. In addition, ASUS disclose the relevant information based on regulation requirements.

Please refer to <http://csr.asus.com/english/Compliance.htm> for information disclosure based on regulation requirements ASUS is complied with:

Japan JIS-C-0950 Material Declarations

EU REACH SVHC

Korea RoHS

 
Swiss Energy Laws

Takeback Services

ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment. We believe in providing solutions for our customers to be able to responsibly recycle our products, batteries and other components as well as the packaging materials. Please go to <http://csr.asus.com/english/Takeback.htm> for detail recycling information in different region.

UL Safety Precaution

To meet the safety requirements, the All-in-one PC must be mounted to an arm, which guaranties the necessary stability under consideration of the weight of the All-in-one PC. The All-in-one PC shall only be used with an approved arm (e.g. GS mark).

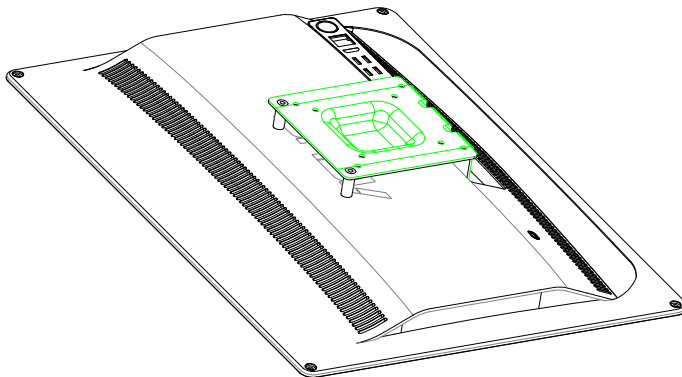

The mounting stand shall be able to sustain at least 21kg and UL certified.

ENERGY STAR complied product



ENERGY STAR is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.

All ASUS products with the ENERGY STAR logo comply with the ENERGY STAR standard, and the power management feature is enabled by default. Please visit <http://www.energy.gov/powermanagement> for detail information on power management and its benefits to the environment. In addition, please visit <http://www.energystar.gov> for detail information on the ENERGY STAR joint program.

Notes for this manual

To ensure that you perform certain tasks properly, take note of the following symbols used throughout this manual.



WARNING: Vital information that you MUST follow to prevent injury to yourself.



IMPORTANT: Instructions that you MUST follow to complete a task.



TIP: Tips and useful information that help you complete a task.



NOTE: Additional information for special situations.

All illustrations and screenshots in this manual are for reference only. Actual product specifications and software screen images may vary with territories. Visit the ASUS website at www.asus.com for the latest information.

Safety information

Your All-in-one PC ET2011 Series is designed and tested to meet the latest standards of safety for information technology equipment. However, to ensure your safety, it is important that you read the following safety instructions.

Setting up your system

- Read and follow all instructions in the documentation before you operate your system.
- Do not use this product near water or a heated source such as a radiator.
- Set up the system on a stable surface.
- Openings on the chassis are for ventilation. Do not block or cover these openings. Ensure that you leave plenty of space around the system for ventilation. Never insert objects of any kind into the ventilation openings.
- Use this product in environments with ambient temperatures between 0°C and 40°C.
- If you use an extension cord, ensure that the total ampere rating of the devices plugged into the extension cord does not exceed its ampere rating.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill water or any other liquids on your system.
- When the system is turned off, a small amount of electrical current still flows. Always unplug all power, modem, and network cables from the power outlets before cleaning the system.
- The touch screen requires periodic cleaning to achieve the best touch sensitivity. Keep the screen clean from foreign objects or excessive dust accumulation. To clean the screen:
 - Turn off the system and disconnect the power cord from the wall.
 - Spray a small amount of a household glass cleaner onto the supplied cleaning cloth and gently wipe the screen surface.
 - Do not spray the cleaner directly on the screen.
 - Do not use an abrasive cleaner or a coarse cloth when cleaning the screen.
- If you encounter the following technical problems with the product, unplug the power cord and contact a qualified service technician or your retailer.
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not function properly even if you follow the operating instructions.
 - The system was dropped or the cabinet is damaged.
 - The system performance changes.

Sound Pressure

Warning: Excessive sound pressure from earphones or headphones can cause hearing damage or loss. Please notice that adjusting the volume control and the equalizer to above the center position may increase the earphones or headphones output voltage, and therefore the sound pressure level.

TV Tuner (on selected models)

Note to CATV System Installer—This reminder is provided to call the CATV systems installer's attention to Section 820-93 of the National Electric Code, which provides guidelines for proper grounding and, in particular, specify that the Coaxial cable shield be connected to the grounding system of the building as close to the point of cable entry as practical.

Adapter

1. Adapter information:
Input voltage: 100–240Vac
Input frequency: 50–60Hz
Rating output current: 120W (19V, 6.3A)
Rating output voltage: 19Vdc
2. The socket outlet must be near to the unit and easily accessible.

 
 
 
 
 
 
 
DC Fan

Warning: Please notice the DC fan is a moving part that may be hazardous. Please keep your body from the moving fan blades.

Welcome

Congratulations on your purchase of All-in-one PC ET2011 Series. The following illustration displays the package contents of your new product. If any of the following items is damaged or missing, contact your retailer.


Package contents

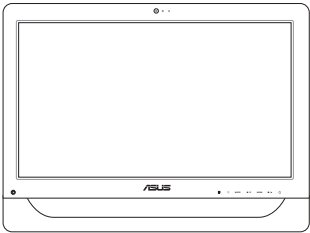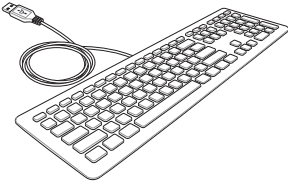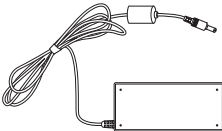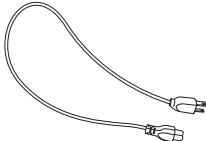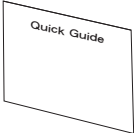		
All-in-one PC ET2011 Series	Keyboard (wired or wireless)	Mouse (wired or wireless)
		
AC adapter	Power cord	Quick start guide
		
Warranty card		
Note: - The number and content of the discs may vary with territories. - The keyboard, mouse, and power supply illustrations are for reference only. Actual product specifications may vary with territories.		

Getting to know your All-in-one PC

Front view

Refer to the following diagram to identify the components on this side of the system. The front view may differ depending on the model you purchased.

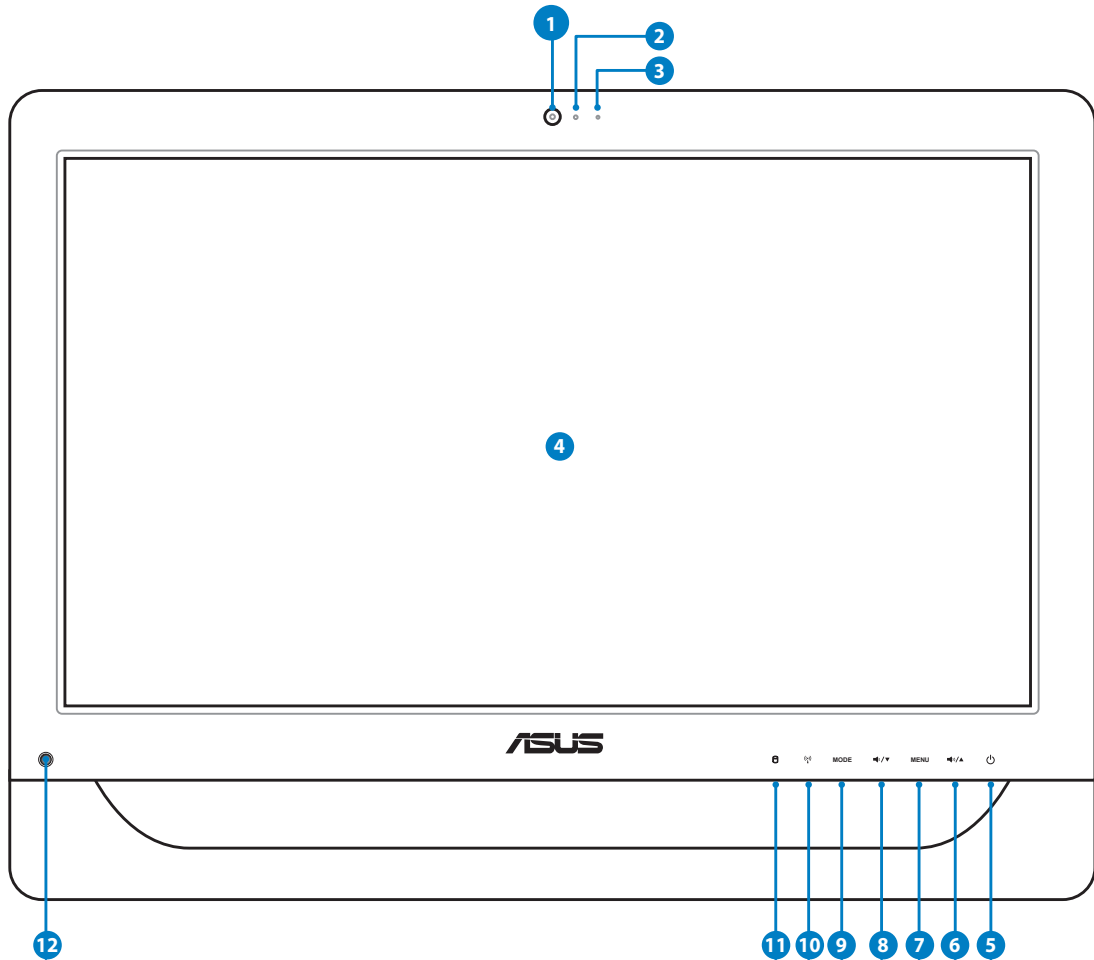 

1

Webcam

The built-in webcam with the built-in digital microphone allows you to start video chats online.

2

Webcam LED

Indicates that the built-in webcam is enabled.

 
3 **Digital Microphone (Built-in)**

The built-in digital microphone can be used for video conferencing, voice narrations, audio recordings, and multimedia applications.



To optimize the microphone performance through IDT Audio Control Panel:

1. Double-click  in the notification area to open **IDT Audio Control Panel**.
2. Click the **Recording** tab and adjust **Microphone Boost** to enhance the microphone performance.
3. When done, click **OK**.

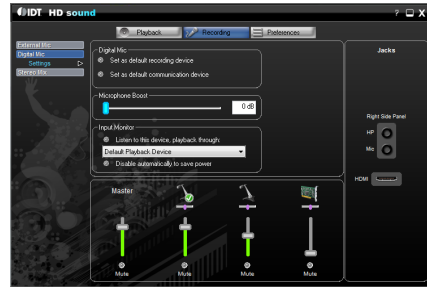

4 **LCD display (Touch-enabled function on selected models)**

The 20-inch LCD display, with an optimal resolution of 1600 x 900, features touch function that brings digital life to your fingertips.

5 **Power switch**

The power switch allows you to switch the system ON/OFF.

6 **Up Button**

Press to increase the volume. Press to scroll up when navigating the menu.

7 **MENU Button**

Press to display the menu. Press this button to enter/select the icon (function) highlighted while the OSD is activated.

8 **Down Button**

Press to decrease the volume. Press to scroll down when navigating the menu.

9 **MODE Button**

Press to switch the display signal source. When switched to HDMI input, the All-in-one PC can be used as a standard desktop LCD monitor.

10 **Wireless LAN LED**

 
Indicates that the internal wireless LAN is enabled. (Windows® software settings are necessary to use the wireless LAN.)

11 **Hard disk drive LED**

Indicates hard disk drive activity.

12 IR Receiver (on selected models)

The IR Receiver receives Infrared (IR) signals from the remote control.

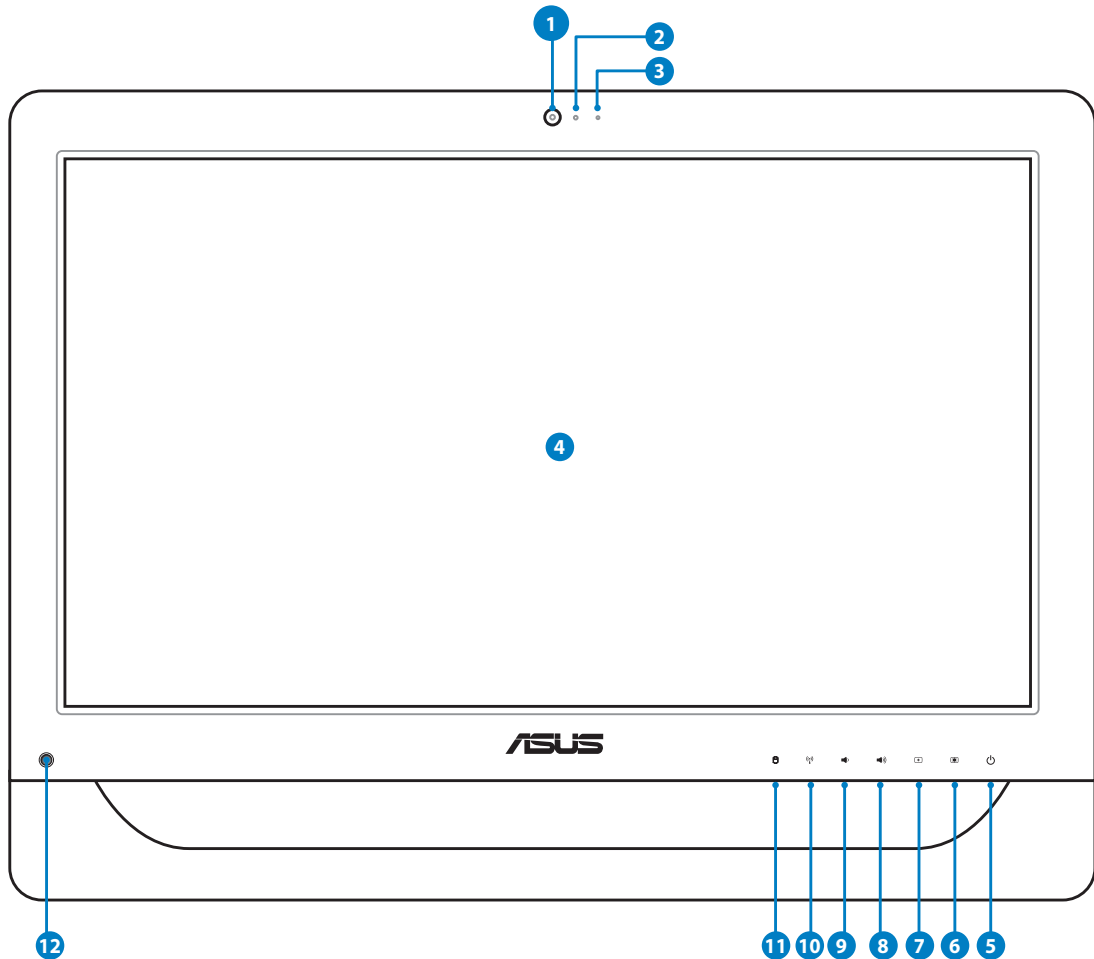**1 Webcam**

The built-in webcam with the built-in digital microphone allows you to start video chats online.

2 Webcam LED

Indicates that the built-in webcam is enabled.

 
3 **Digital Microphone (Built-in)**

The built-in digital microphone can be used for video conferencing, voice narrations, audio recordings, and multimedia applications.



To optimize the microphone performance through IDT Audio Control Panel:

1. Double-click  in the notification area to open **IDT Audio Control Panel**.
2. Click the **Recording** tab and adjust **Microphone Boost** to enhance the microphone performance.
3. When done, click **OK**.

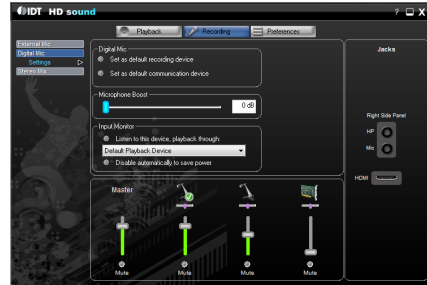

4 **LCD display (Touch-enabled function on selected models)**

The 20-inch LCD display, with an optimal resolution of 1600 x 900, features touch function that brings digital life to your fingertips.

5 **Power switch**

The power switch allows you to switch the system ON/OFF.

6 **Sun Up Button**

Increases the display brightness.

7 **Sun Down Button**

Decreases the display brightness.

8 **Volume Up Button**

Increases the speaker volume.

9 **Volume Down Button**

Decreases the speaker volume.

10 **Wireless LAN LED**

Indicates that the internal wireless LAN is enabled. (Windows® software settings are necessary to use the wireless LAN.)

11 **Hard disk drive LED**


Indicates hard disk drive activity.

12 **IR Receiver (on selected models)**

The IR Receiver receives Infrared (IR) signals from the remote control.

Rear view

Refer to the following diagram to identify the components on this side of the system.

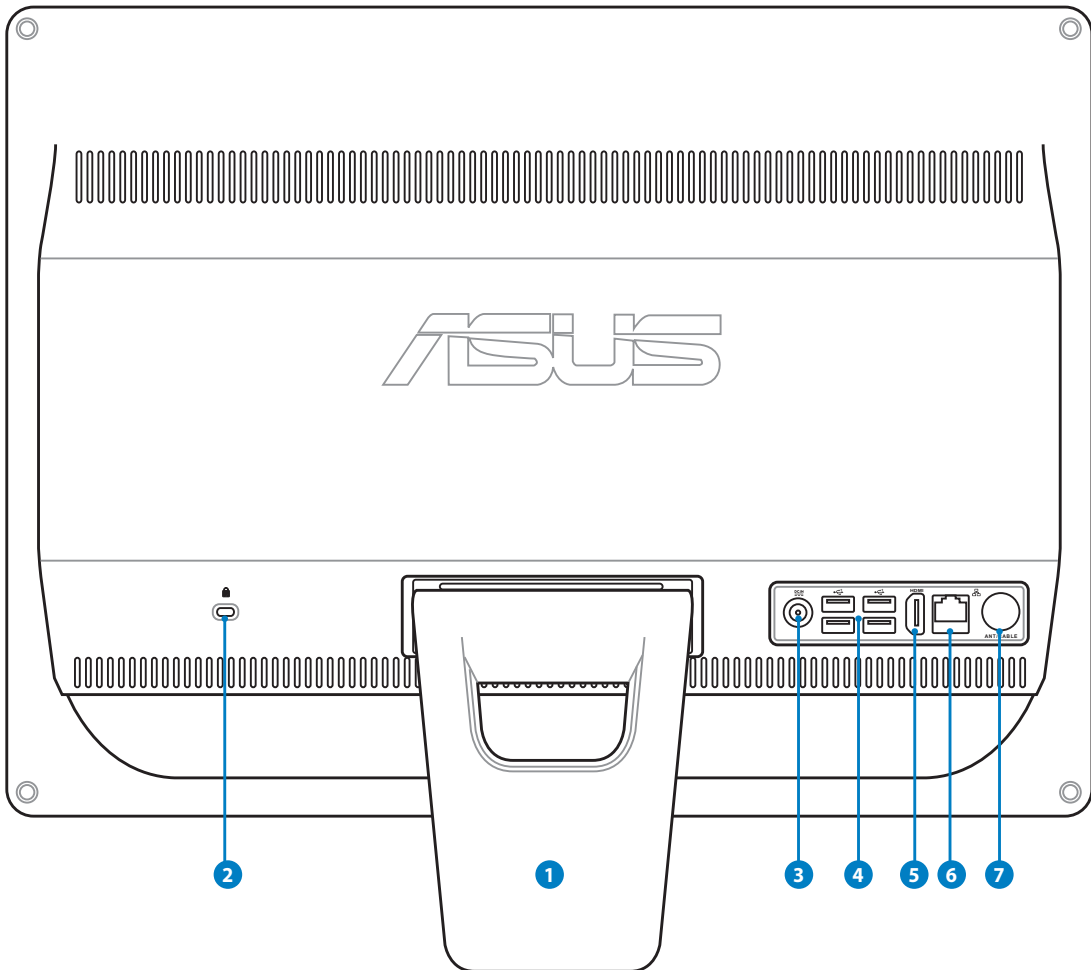 

1

Stand

Allows you to position the system upright.

2



Kensington® Lock port

The Kensington® lock port allows the computer to be secured using Kensington® compatible security products. These security products usually include a metal cable and lock that prevent the computer to be removed from a fixed object.

3 **Power input (DC 19V)**

The supplied power adapter converts AC power to DC power for use with this jack. Power supplied through this jack supplies power to the PC. To prevent damage to the PC, always use the supplied power adapter.



The power adapter may become warm or hot when in use. Do not cover the adapter and keep it away from your body.

4 **USB port**

The Universal Serial Bus (USB) port is compatible with USB devices such as keyboards, mouse devices, cameras, and hard disk drives.

5 **HDMI input port (on selected models)**

 
HDMI (High-Definition Multimedia Interface) is an uncompressed all-digital audio/video interface between any audio/video source, such as a set-top box, DVD player.

6 **LAN port**

The eight-pin RJ-45 LAN port supports a standard Ethernet cable for connection to a local network.

7 **Antenna Input (on selected model)**

The antenna input is for TV or FM Radio (optional) frequency signal and allows for use with the provided digital TV/FM antenna or input from subscription television services. The provided antenna can receive digital TV or FM radio. Cable service connection can receive digital TV, analog TV, or FM radio depending on paid services. Note: Use the provided adapter for use with coaxial connectors.

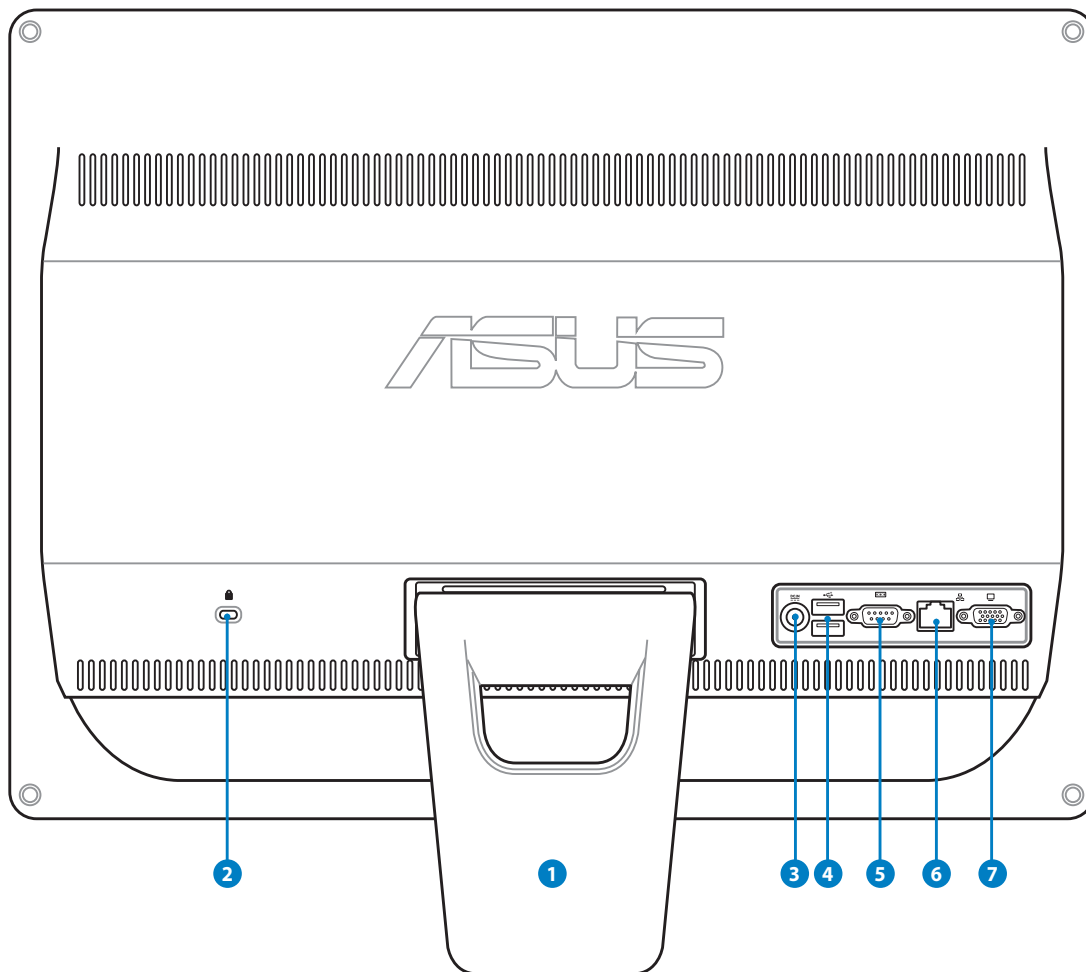

1 Stand

Allows you to position the system upright.

2 Kensington® Lock port

The Kensington® lock port allows the computer to be secured using Kensington® compatible security products. These security products usually include a metal cable and lock that prevent the computer to be removed from a fixed object.

3 Power input (DC 19V)

The supplied power adapter converts AC power to DC power for use with this jack. Power supplied through this jack supplies power to the PC. To prevent damage to the PC, always use the supplied power adapter.



The power adapter may become warm or hot when in use. Do not cover the adapter and keep it away from your body.

4 USB port

The Universal Serial Bus (USB) port is compatible with USB devices such as keyboards, mouse devices, cameras, and hard disk drives.

5 Serial port

This 9-pin serial port (COM1) is for serial devices.

6 LAN port

The eight-pin RJ-45 LAN port supports a standard Ethernet cable for connection to a local network.

7 Display (Monitor) Output

The 15-pin D-sub monitor port supports a standard VGA-compatible device such as a monitor or projector to allow viewing on a larger external display.

Side views

Refer to the following diagrams to identify the components on both sides of the system.

1 **Memory card reader**

Normally an external memory card reader must be purchased separately in order to read memory cards. This All-in-one PC has a built-in memory card reader that supports MMC/SD/SDHC cards used in devices like digital cameras, MP3 players, mobile phones, and PDAs.

2 **USB port**

The Universal Serial Bus (USB) port is compatible with USB devices such as keyboards, mouse devices, cameras, and hard disk drives.

3 **Microphone jack**

 
 
The microphone jack is designed to connect a microphone used for video conferencing, voice narrations, or simple audio recordings.

4 **Headphone/Audio Out jack**

The stereo headphone jack (3.5mm) is used to connect the system's audio out signal to amplified speakers or headphones. Using this jack automatically disables the built-in speakers.

5 **Optical Drive**


The built-in optical drive may support compact discs (CD) and/or digital video discs (DVD), and may have recordable (R) or re-writable (RW) capabilities. See the marketing specifications for details on each model.

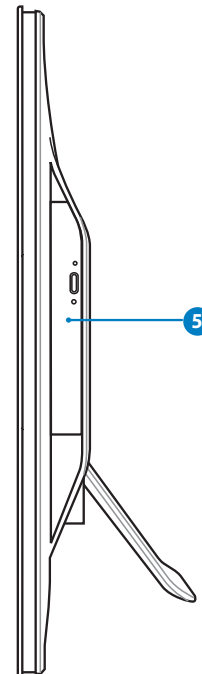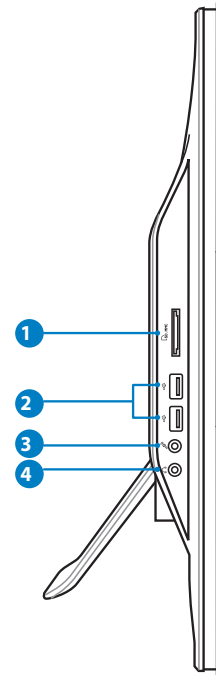

Using the touch screen

All-in-one PC brings digital life to your fingertips. With a few touches, you can make All-in-one PC work at your command. Your touch functions like a mouse device:

 - Touch = left-click on the mouse
- Touch and hold = right-click on the mouse

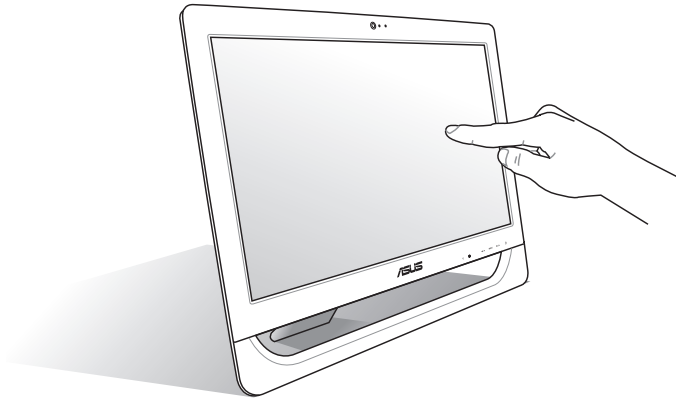


The touch-enabled screen is available on selected models.


Showing the touch pointer

The touch pointer, virtual mouse, helps you use the touch-enabled screen more conveniently. To show the touch pointer

 
1. From the Windows® desktop, click **Start** > **Control Panel** > **View Devices and Printer**.

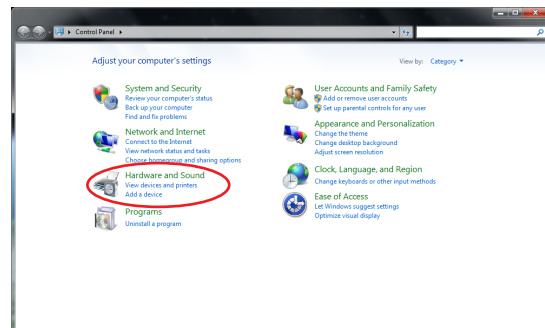

 2. Click **Change touch input settings**.

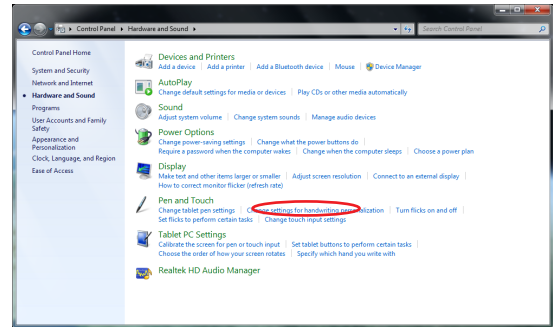

 3. Click the **Touch** tab on the top and click the box before **Show the touch pointer when I'm interacting with items on the screen**. Click **OK** to finish the configuration.

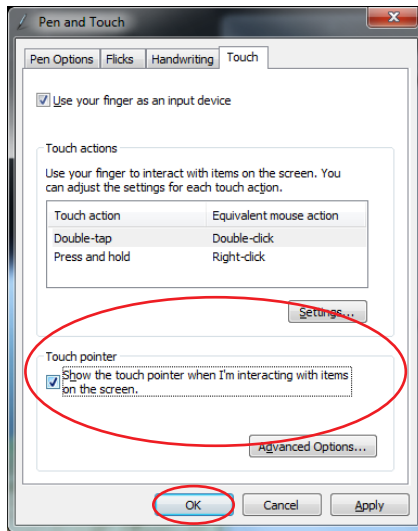

4. You will see a virtual mouse on the screen when you touch the screen.



Cleaning the touch screen

The touch screen requires periodic cleaning to achieve the best touch sensitivity. Keep the screen clean from foreign objects or excessive dust accumulation. To clean the screen:

 
- Turn off the system and disconnect the power cord from the wall.
- Spray a small amount of a household glass cleaner onto the supplied cleaning cloth and gently wipe the screen surface and the screen frame.
- Do not spray the cleaner directly on the screen.
- Do not use an abrasive cleaner or a coarse cloth when cleaning the screen.

Using the keyboard

Your All-in-one PC comes with a wired or wireless keyboard that facilitates your control of the system.



The following keyboard illustration is for reference only. Actual product specifications may vary with territories.

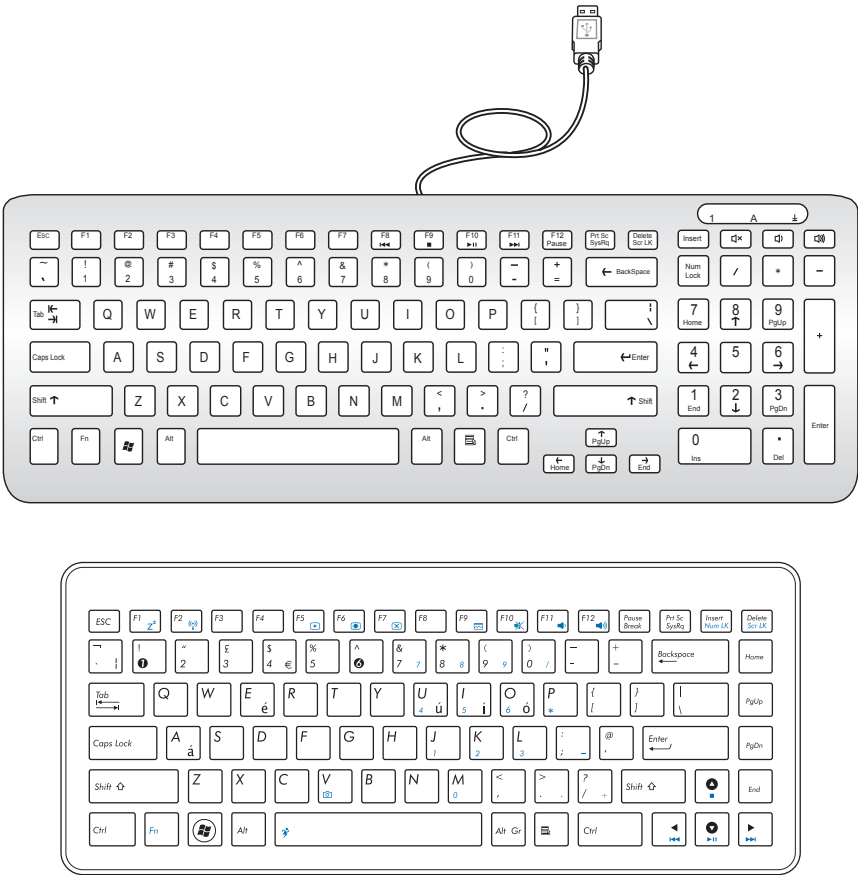

Function keys (for wireless keyboard only)

The following table defines the colored function keys on the keyboard. To access the colored commands, hold the **Function key** while pressing a key with a colored command.




The actual colored function keys and supported commands may vary with models.

		Fn + F1: Places the system in suspend mode.
		Fn + F2: Toggles the internal wireless LAN ON or OFF. When enabled, the corresponding wireless LAN LED lights up. Windows® software settings are necessary to use the wireless LAN.
		Fn + F5: Decreases the display brightness.
		Fn + F6: Increases the display brightness.
		Fn + F7: Toggles the LCD display ON and OFF.
		Fn + F10: Toggles the speakers ON and OFF (only in Windows® OS).
		Fn + F11: Decreases the speaker volume (only in Windows® OS).
		Fn + F12: Increases the speaker volume (only in Windows® OS).
		Fn + Space (Super Hybrid Engine key): Switches among different power saving modes. The selected mode is shown on the display.
		Fn + V: Toggles the built-in webcam ON and OFF.

Positioning your All-in-one PC

Placing on the desktop

 
Place your All-in-one PC on a flat surface such as a table or desk, and pull the stand open until it snaps in place. Then, tilt the display panel to an angle of between 12 and 27 degrees from an upright position.

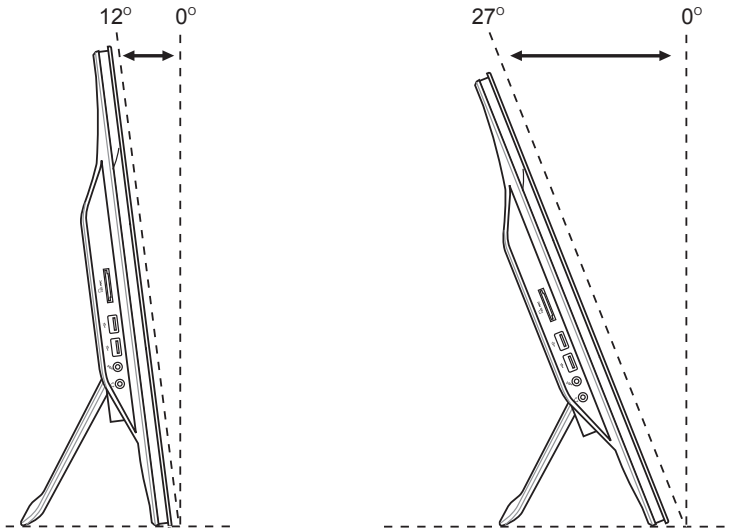


Mounting to the wall (optional)

To mount your All-in-one PC to the wall, purchase the optional wall mount kit (VESA 75, 75mm x 75mm or VESA100, 100mm x 100mm). Install the wall mount kit according to the following instructions.

 
1. Place your All-in-one PC on a flat surface such as a table or desk, and then remove the two screws beside the stand. Keep the screws for future use in case you want to reinstall the stand.

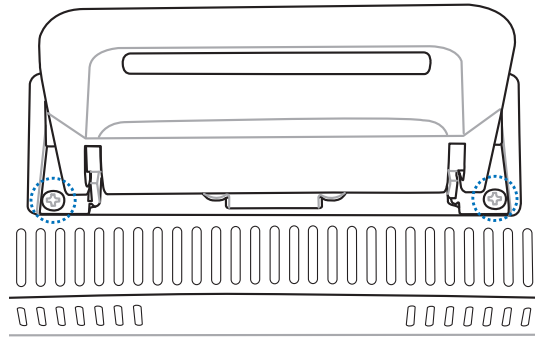

 
2. Adjust the stand to the flat position.

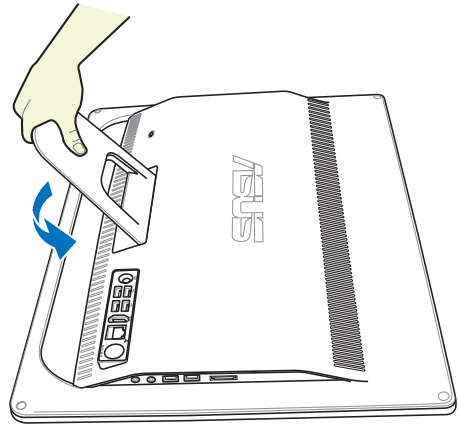

 
3. Follow the direction to release the stand lock from the All-in-one PC.

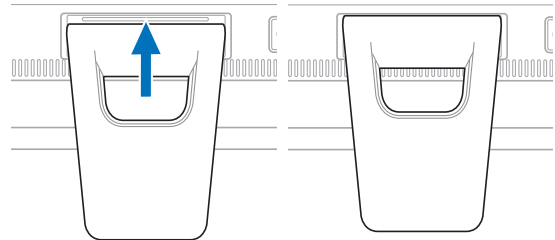

 
4. Follow the direction to remove the stand from the All-in-one PC.

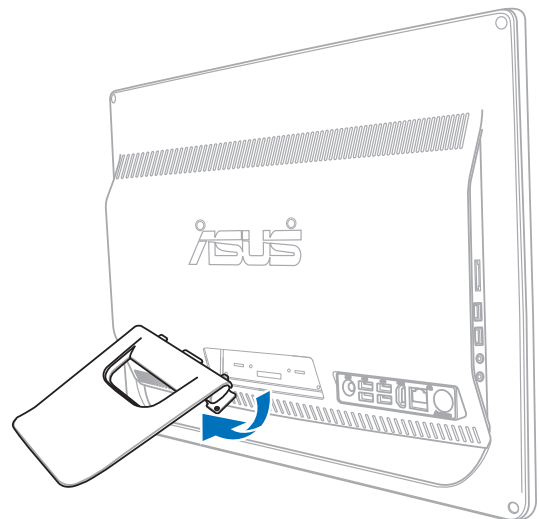

 5. Take out the two rubber items in the panel holes.

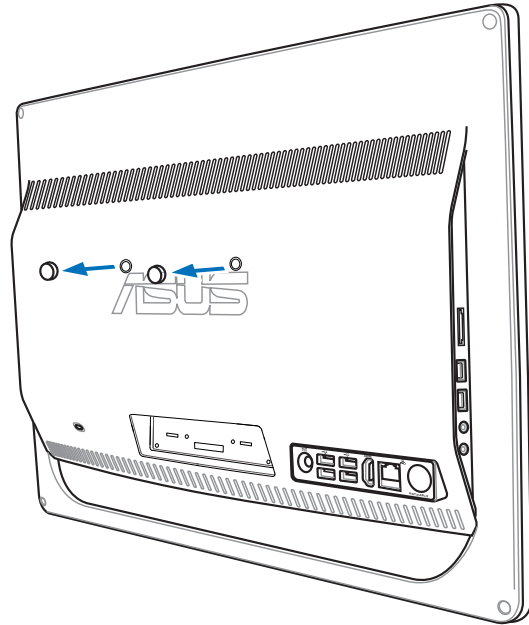

 
6. Secure the wall mount pad to the rear panel with the four screws, noting the correct orientation.

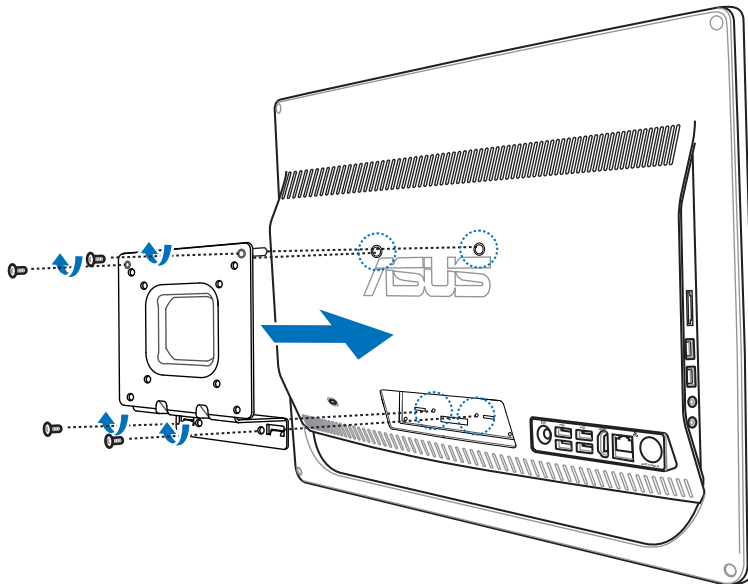

7. Firmly install your wall mount kit (VESA75 or VESA100) to the All-in-one PC using four screws (M4 x 16mm) that came with the wall mount kit package.



 - The wall mount kit in this illustration is for reference only.
- The wall mount kit and screws are purchased separately.

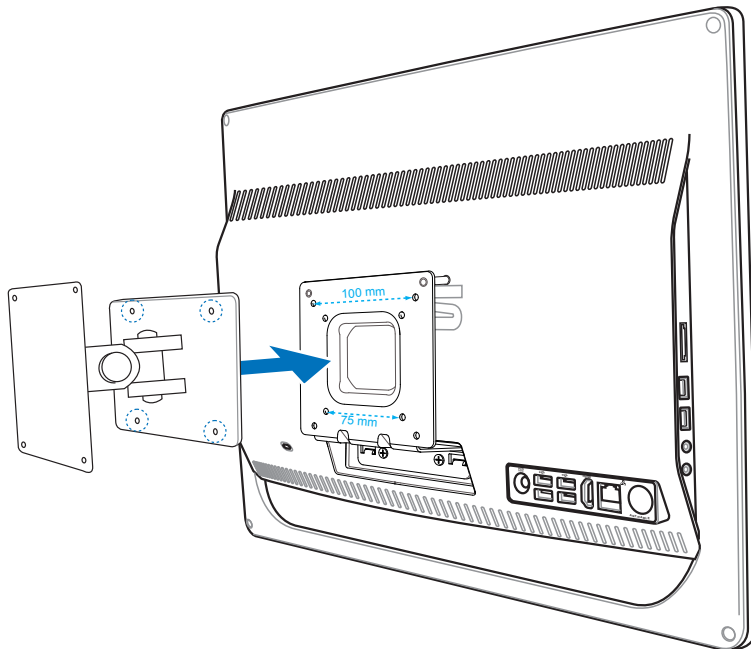

8. Carefully fasten the wall mount kit to the wall following the instructions described in the installation manual that came with your wall mount kit package.

 


For ventilation's sake, ensure that you leave a distance of 6cm at least between the system and the wall.

Setting up your All-in-one PC


Connecting the wired keyboard and mouse

Connect the keyboard and mouse to the **USB** port on the rear panel (❶). You may also connect the keyboard and mouse to the **USB** port on the left side (❷) if the keyboard and mouse cable is not long enough.

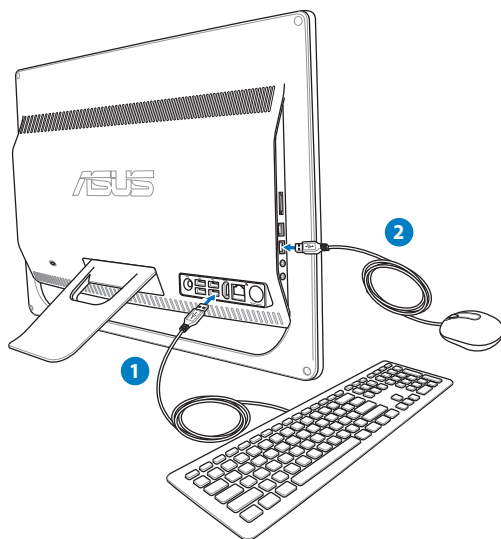

Connecting the wireless keyboard and mouse

 
1. Install batteries to the wireless keyboard and mouse.
2. Insert the wireless keyboard/mouse receiver to the **USB** port on the All-in-one PC.
3. You can begin using the wireless keyboard and mouse.

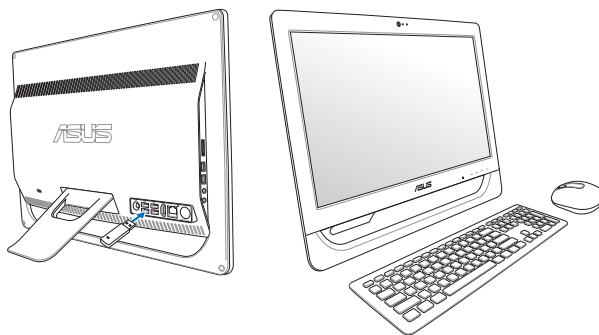

The illustrations above are for reference only. Actual appearances and specifications (wired or wireless) of the keyboard and mouse may vary with territories.

Powering on the system

 Connect the supplied AC adapter to the **DC IN** jack on the rear panel (1 2 3) and then press the **Power switch** on the front panel (4) to turn on the system.

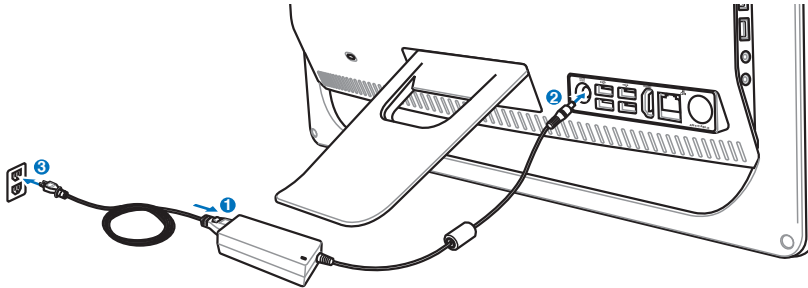

WARNING! DO NOT connect the AC power cord to an AC outlet prior to connecting the DC plug to the system. Doing so may damage the AC-DC adapter.



Powering off

- To power off the LCD display, press the **Fn + F7** key   on the keyboard. The system is still running.



The colored key command is available on selected models.

- To put the system into suspend mode, press the **Power switch**  on the front panel. To bring the system back to the OS, press the **Power switch** again, click the mouse, touch the display, or press any key on the keyboard.
- To shut down the system completely, follow the normal Windows shutdown process or press and hold the **Power switch**  for five seconds.

 
Calibrating the screen

All-in-one PC comes with the following software tool that allows you to adjust touch screen precision.




The touch-enabled screen is available on selected models.

1. From the Windows® desktop, click **Start** > **Control Panel** > **Hardware and Sound** > **Tablet PC Settings** and click **Calibrate the screen for pen or touch input**.

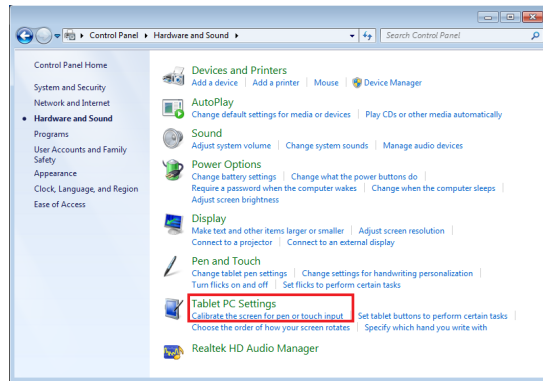

 2. From the **Display** tab, click **Calibrate**.

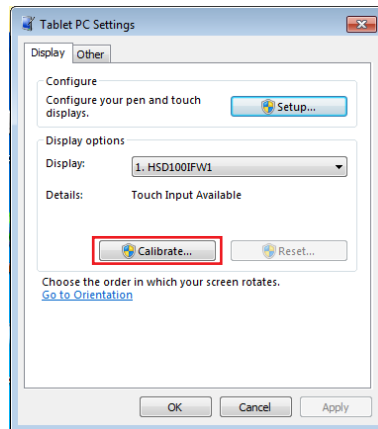

3. To provide calibration samples, tap the crosshair each time that it appears on the screen.



Right-click anywhere on the screen to return to the last calibration point. Press the **Esc** key on the keyboard to close the tool. Do not change your screen orientation until you have completed the calibration process.



Configuring a wireless connection

 
1. Click the wireless network icon with an orange star  in the Windows® Notification area.
2. Select the wireless access point you want to connect to from the list and click **Connect** to build the connection.



If you cannot find the desired access point, click the **Refresh** icon  on the upper right corner to refresh and search in the list again.



Enter the network security key when connecting to a security-enabled network.

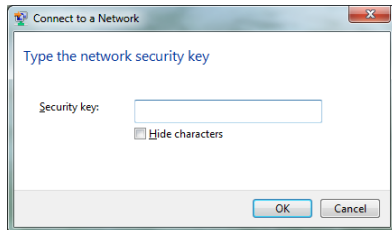

3. After a connection has been established, the connection is shown on the list.
4. You can see the wireless network icon  in the Notification area.

 
Configuring a wired connection

Using a static IP


1. Click the network icon with a yellow warning triangle  in the Windows® Notification area and select **Open Network and Sharing Center**.




Ensure that you have connected the LAN cable to the All-in-one PC.

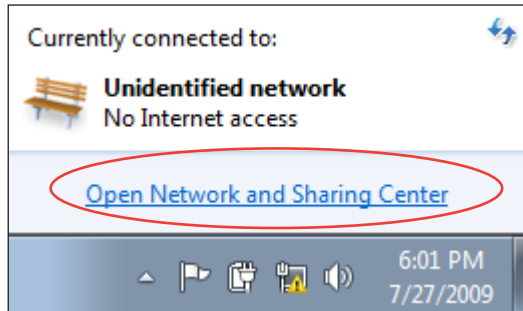

 
2. Click **Change adapter settings** in the left pane.

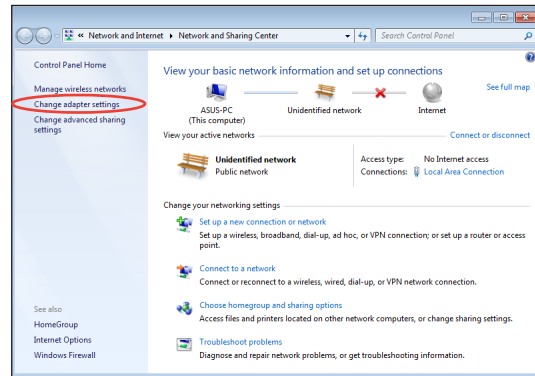

 
3. Right-click **Local Area Connection** and select **Properties**.

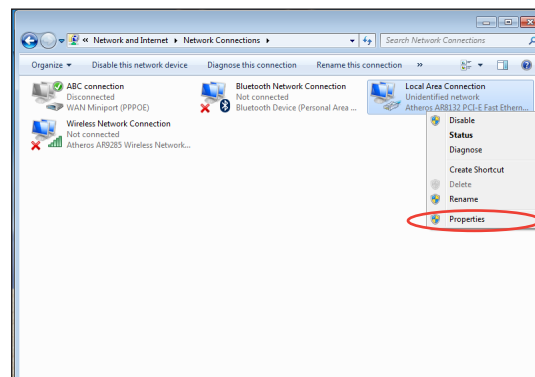

 4. Click **Internet Protocol Version 4(TCP/IPv4)** and click **Properties**.

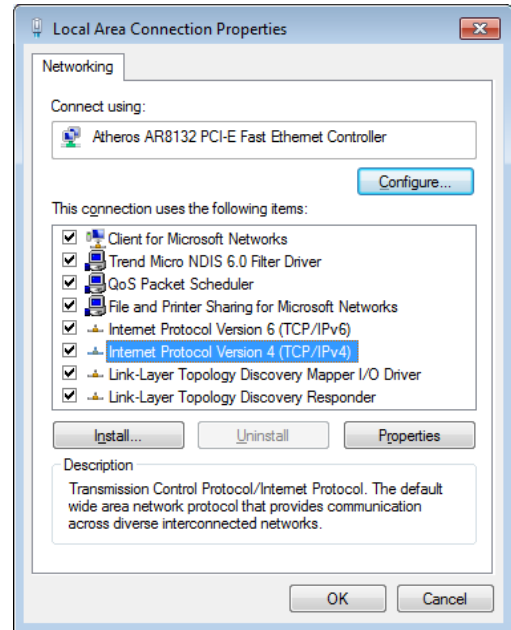


 5. Select **Use the following IP address**.
6. Enter your **IP address**, **Subnet mask**, and **Default gateway**.
7. If needed, enter the **Preferred DNS server** address.
8. After entering all the related values, click **OK** to finish the configuration.

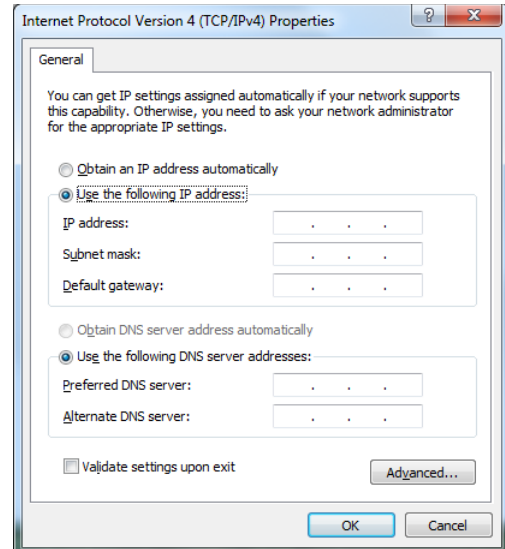



Using a dynamic IP (PPPoE)

 1. Repeat steps 1–4 in the previous section.
2. Select **Obtain an IP address automatically** and click **OK**.

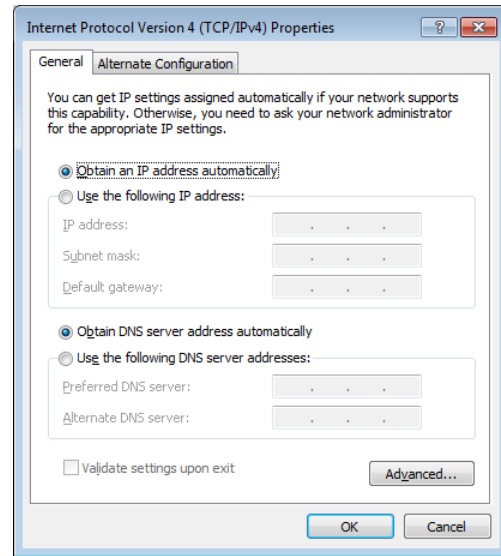


(Continue the following steps if using PPPoE)

  
3. Return to the **Network and Sharing Center** and then click **Set up a new connection or network**.
4. Select **Connect to the Internet** and click **Next**.

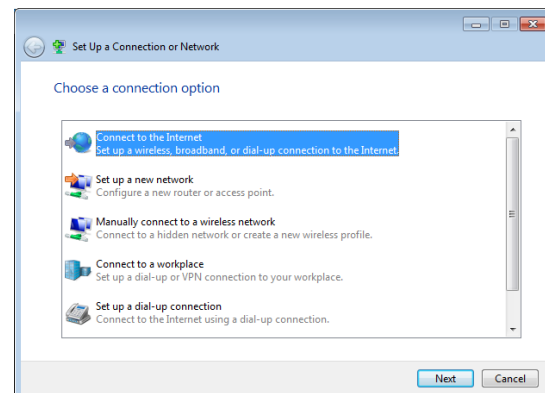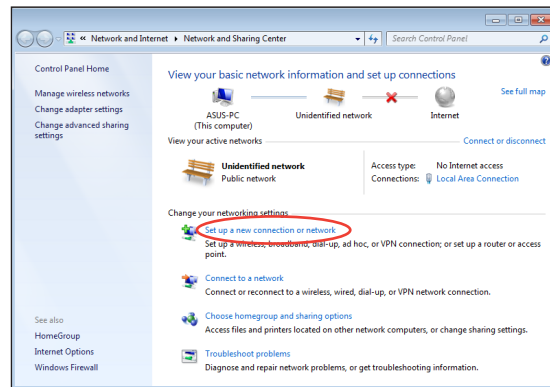

 
5. Select **Broadband (PPPoE)** and click **Next**.

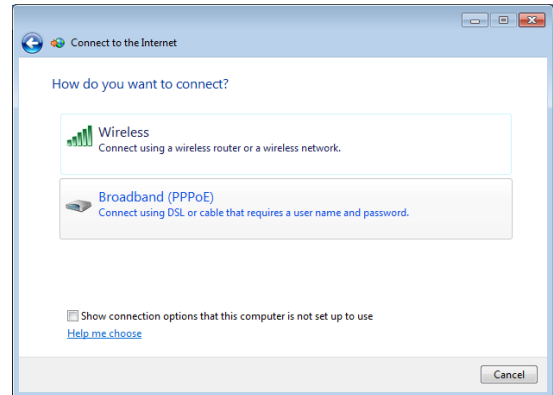

 
6. Enter your User name and, Password, and Connection name. Click **Connect**.

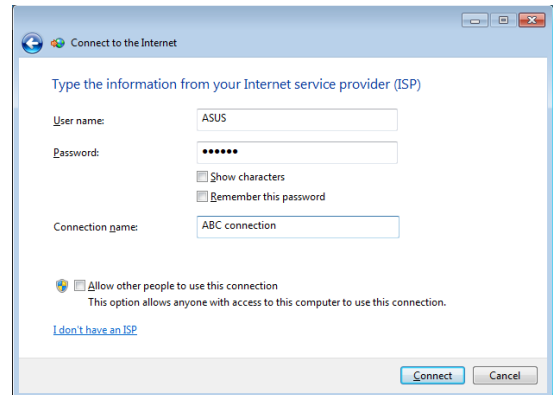

 
7. Click **Close** to finish the configuration.

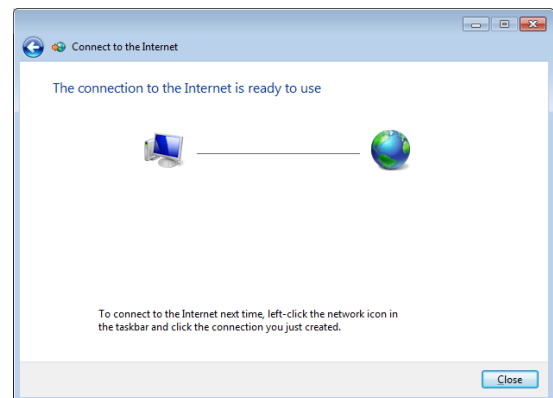

 - Click the network icon in the notification area and click the connection you just created.

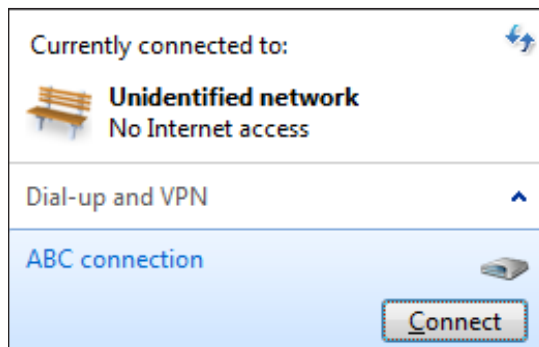

 - Enter your user name and password. Click **Connect** to connect to the Internet.

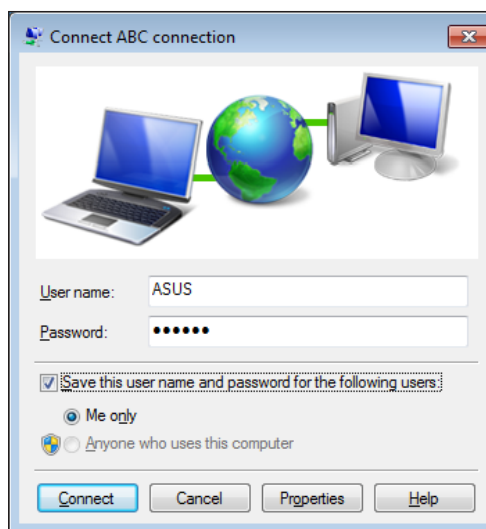

Configuring the audio output

All-in-one PC supports different types of audio configurations. Set up the system using stereo speakers.

Speaker configurations

Set up the system with the following speaker configurations:

Name	Speaker system
2-channel (stereo)	Left speaker and right speaker.

Audio jack	Headphones/2-channel
	Audio Out
	Mic In



A stereo speaker set is a left-right, two channel speaker system. A multi-channel audio speaker has a left-right front and left-right rear (surround) channel.

Connecting to speakers

Refer to the table below for the audio jacks on the left panel and their functions.


For stereo speakers or headphones

Audio jack	Description
	Connects to stereo speakers or headphones.



Configuring audio output settings

After connecting a speaker system to your All-in-one PC, follow the steps below to configure the speaker settings:

 1. Right-click the speaker icon in the Windows® notification area and click **Sounds**.

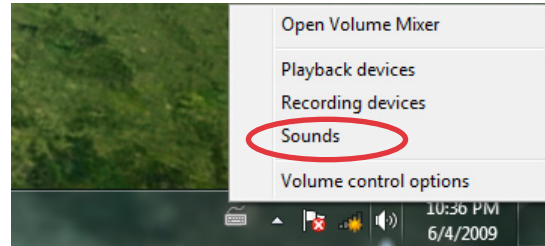

  2. Select a playback device and click **Properties** to configure the settings.
3. Do the advanced configurations, such as adjusting the speaker level and output rate. Click **OK** to finish the configurations.

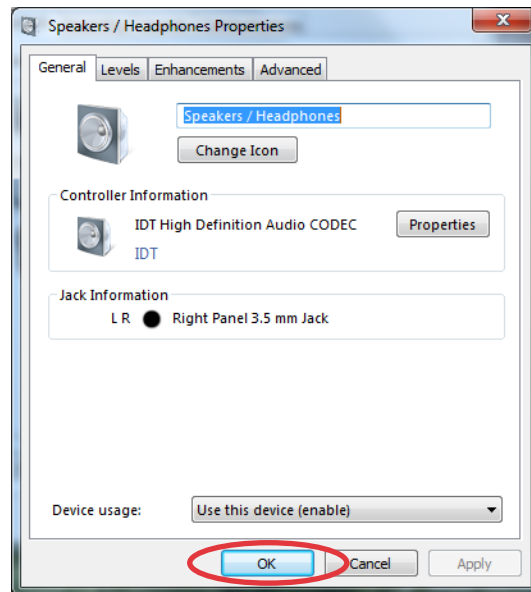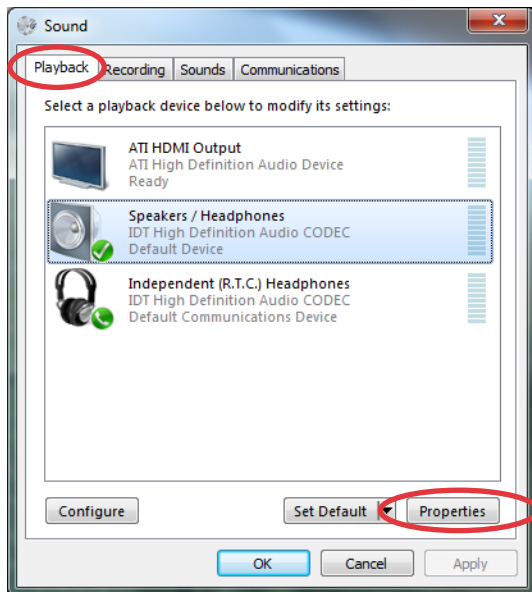

Recovering your system

Using the Recovery Partition

Recovering the OS to the Factory Default Partition (F9 Recovery)

1. Disable Boot Booster in BIOS setup.
2. Press [F9] during bootup.
3. Select **Windows setup [EMS Enabled]** when this item appears and press [Enter].
4. Select the language and click **Next**.
5. Select **Recover the OS to the Default Partition** and click **Next**.
6. The factory default partition will be displayed. Click **Next**.
7. Data on the default partition will be cleared. Click **Recover** to start the system recovery.



You will lose all your data on the selected partition. Ensure to back up your important data beforehand.

8. When the recovery is completed successfully, click **Reboot** to restart the system.

Backing up the Factory Default Environment Data to a USB Drive (F9 Backup)

1. Repeat the step 1–4 in the previous section.
2. Select **Backup the Factory Environment to a USB Drive** and click **Next**.
3. Connect a USB storage device to your PC to start the Factory Default Environment backup.



The required size of the connected USB storage device should be larger than 15GB. The actual size may vary with your PC model.

4. Select a desired USB storage device if more than one USB storage device is connected to your All-in-one PC and click **Next**.



If there is already a partition with proper size in the selected USB storage device (for example, a partition that has been used as the backup partition), the system will show this partition automatically and reuse it for backup.

5. Based on the different situations in the previous step, data on the selected USB storage device or on the selected partition will be cleared. Click **Backup** to start backup.



You will lose all your data on the selected USB storage device or on the selected partition. Ensure to back up your important data beforehand.

6. When backing up the factory default environment is completed successfully, click **Reboot** to restart the system.

(Continued on the next page)

Using the USB storage device (USB Restore)

When the Recovery Partition in your system is crashed, use the USB storage device to restore the system to the factory default partition or the factory environment data to the entire hard disk.

1. Disable Boot Booster in BIOS setup.
2. Connect the USB storage device that you back up the factory environment data to.
3. Press <ESC> on bootup and the **Please select boot device** screen appears. Select USB: XXXXXX to boot from the connected USB storage device.
4. Select the language and click **Next**.
5. Select **Restore** and click **Next**.
6. Select a task and click **Next**. Task options:

Restore the OS to the Default Partition only

Select this option if you simply want to restore the OS to the factory default partition. This option deletes all data on the system partition “C” and keeps the partition “D” unchanged.

After you click Next, the factory default partition will be displayed. Click **Next** again.

Restore the Whole Hard Disk

Select this option if you want to restore your All-in-one PC to the factory default state. This option deletes all data from your hard disk and creates a new system partition as drive “C”, an empty partition as drive “D” and a Recovery Partition.

7. Data on the factory default partition or on the whole hard disk will be cleared depending on the option you selected in the previous step. Click **Restore** to start the task.
8. When the restore is completed successfully, click **Reboot** to restart the system.

Manufacturer	ASUSTek COMPUTER INC.
Address, City	No. 150, LI-TE RD., PEITOU, TAIPEI 112, TAIWAN R.O.C
Country	TAIWAN
Authorized Representative in Europe	ASUS COMPUTER GmbH
Address, City	HARKORT STR. 21-23, 40880 RATINGEN
Country	GERMANY