

WIRELESS KEYBOARD AND MOUSE Instruction Manual



Compatible with:
Windows® 10 or later
Mac OS X 10.10 or later

Contents




1. Keyboard
2. Mouse
3. USB-A/USB-C receiver
4. Instruction Manual
5. AA batteries x3

Instructions

1. Take out keyboard and mouse from the package, and take out USB-A/USB-C receiver from battery compartment of the mouse.
2. Insert two 1.5V AA batteries into the keyboard with the correct polarity direction. And turn on its power switch.
3. Insert a 1.5V AA battery into mouse with the correct polarity direction.
4. Plug the USB-A/USB-C receiver in computer port.
5. They are available after the driver is installed on computer automatically.

Combined Multimedia Functions

| | | | | | |
|------------|----------|----------|--------|----------------|------------|
| Fn+F1 | Fn+F2 | Fn+F3 | Fn+F4 | Fn+F5 | Fn+F6 |
| Player | Volume - | Volume + | Mute | Previous Track | Next Track |
| Fn+F7 | Fn+F8 | Fn+F9 | Fn+F10 | Fn+F11 | Fn+F12 |
| Play/Pause | Stop | Homepage | Email | My Computer | Favorites |

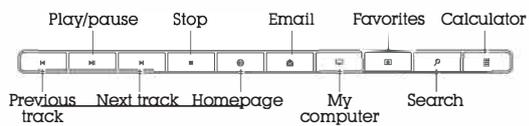

Specifications

- Product Model: MK100
- Item number: JB530CM695
- Working Frequency: 2.4GHz
- Rating:
 - Wireless Keyboard: 3V = 5mA
 - Wireless Mouse: 1.5V = 15mA
- Dimensions:
 - Wireless Keyboard: 449 x 204 x 22 mm
 - Wireless Mouse: 112 x 63 x 39 mm
- System requirements:
 - Windows® 10 or later, Mac OS 10.10 or later

Note

1. The multimedia functions of keyboard are not available in MacOS.
2. The keyboard and mouse are only functional with AA alkaline batteries.
3. Please remove batteries from the keyboard and mouse if not used for extended periods.