



Item No.: DUS560DW
Installation guide

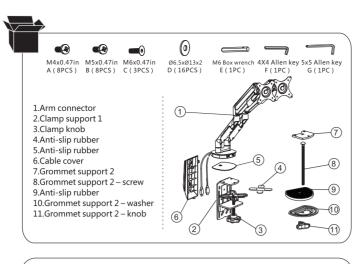



STEP2-B


Option 2: Grommet

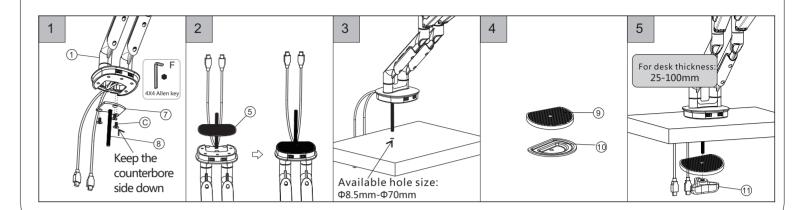

STEP1


Preparations before installing monitor

- I.Make sure there are VESA holes I00xI00mm or 75x75mm in the monitor. If not, the mount connot be installed.
- 2. Remove the original fixed base of monitor. Be careful not to scratch the screen.

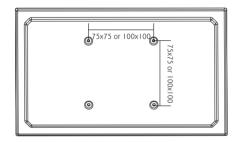


STEP3


Install the monitor to the plate

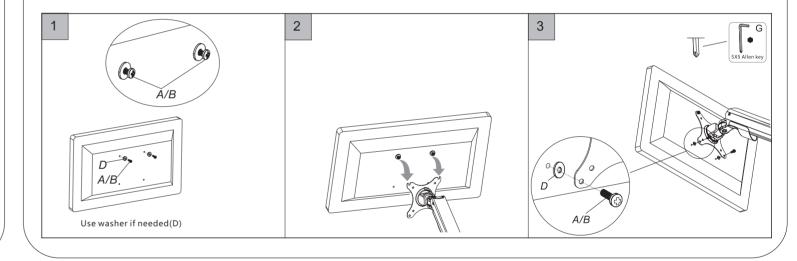

STEP2-A

Option 1: Clamp

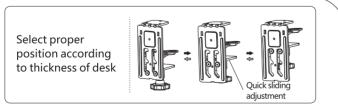


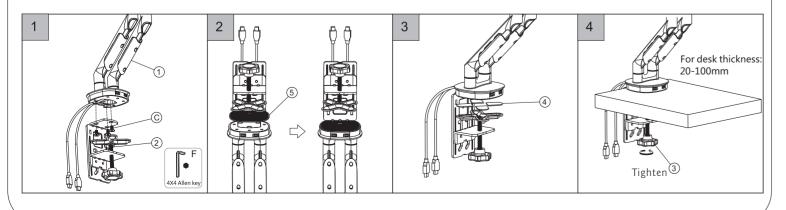


STEP4

Adjust the monitor

Adjust monitor height according to preference with the 5x5 allen key(G). Turn the screw in "-" direction when the monitor up and "+"direction when it down Factory setting: 8.8-11lbs.

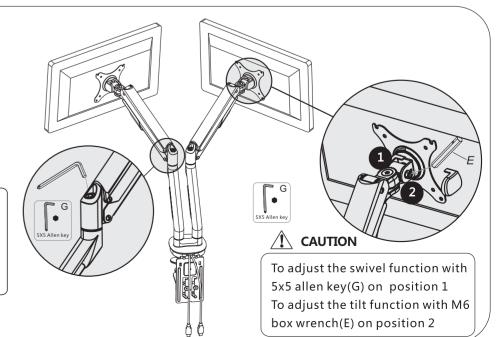

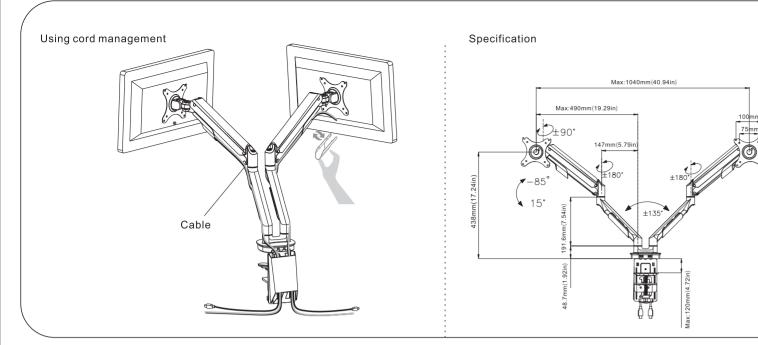



CAUTION

This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children.

- Make sure these instructions are read and completely understood before attempting installation. If you are unsure of any part of this installation, please contact a professional installer for assistance.
- The desk or mounting surface must be capable of supporting the combined weight of the mount and the display, otherwise the structure must be reinforced.
- Safety gear and proper tools must be used. A minimum of two people are required for this installation. Failure to use safety gear can result in property damage, serious injury or death.
- Please inspect joint parts every two months, making sure the screws are not loosened.

This product was designed to be installed on desk. Never exceed the maximum load capacity 19.8lbs, or else it may result in product failure or personal injury.

Note: this product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury.

Warning: This product contains high pressure gas spring parts, please do not place it into a fire. High temperature or disassembling it, can lead to unexpected personal injury. The obsolete products can be sent back to the manufacturer or handed over to professional institutions.

To ensure the sealing performance of the gas spring, it is suggested to have complete adjustment to the upper arm (with spring) one time or several times every month.