

Reference and Support [EN]

參考及支援 [ZHTW]


リファレンスとサポート [JA]



HP ENVY Pro

6400 All-in-One series

Printer Features

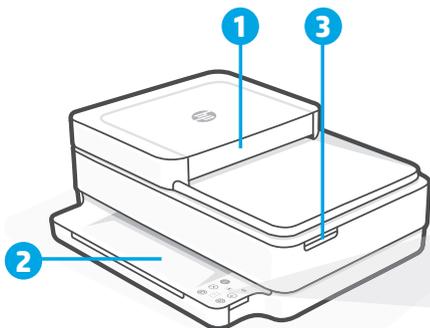


- 1 Automatic Document Feeder
- 2 Output Tray
- 3 Access Ink Cartridges

Control Panel

-  Information
-  Wireless
-  Cancel
-  Resume
-  Color Copy (left)
-  Black and White Copy (right)
-  Number Counter

Print/Scan

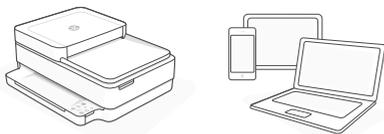


Print from or scan to any iOS, Android, Windows, or Mac device. Visit 123.hp.com from your device to get started.

Trouble with Wi-Fi setup?

If the app is unable to find your printer, restart setup mode. Press and hold the Wi-Fi button on the back of the printer for 5 seconds. Rotating purple lighting on the front edge of the printer indicates setup mode.

Copy

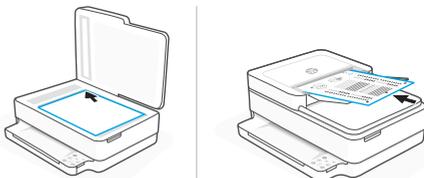

1. Load Original

Place face down on glass or face up in document feeder.

2. Start Copy

Press **Copy** (Black  or Color .

Note: To increase number of copies, press multiple times.




Help and Support

For troubleshooting, videos, and other product information, visit the product support site.



hp.com/support/envyp6400

印表機功能

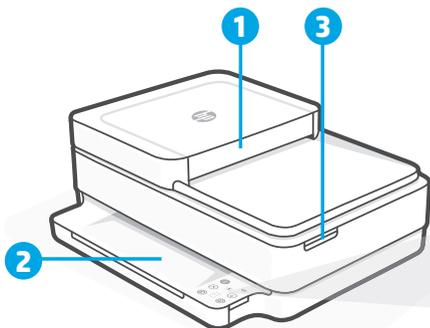


- 1 自動文件進紙器
- 2 出紙匣
- 3 墨水匣檢修口

控制台

-  資訊
-  無線
-  取消
-  重新開始
-  彩色影印 (左側)
-  黑白影印 (右側)
-  計數

列印/掃描

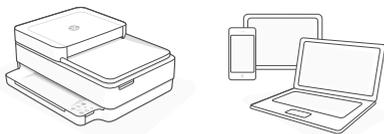


透過任意 iOS、Android、Windows 或 Mac 裝置列印，或是掃描至上述裝置。透過個人裝置造訪 123.hp.com 以開始使用。

進行 Wi-Fi 設定時遇到問題？

若應用程式無法找到您的印表機，請重新啟動設定模式。按住印表機背面的 Wi-Fi 按鈕 5 秒鐘。

印表機前緣的紫色燈號轉動時，即代表處於設定模式。

影印

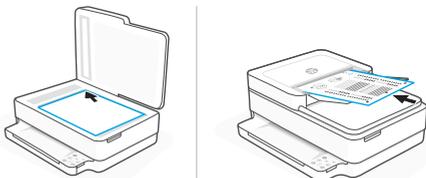

1. 放入原稿

正面朝下放置在玻璃板上，或是正面朝上放入文件進紙器中。

2. 開始影印

按下**影印** (黑白  或彩色 )。

注意：若要增加份數，請多按幾次即可。




說明及支援

如需疑難排解、視訊，以及其他產品的相關資訊，請造訪產品支援網站。



hp.com/support/envyp6400

プリンターの機能

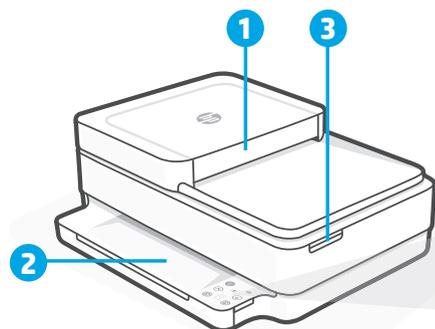


- 1 自動ドキュメントフィーダー
- 2 排紙トレイ
- 3 インクカートリッジアクセス

コントロールパネル

- 情報
- ワイヤレス
- キャンセル
- リジューム
- カラーコピー (左側)
- モノクロコピー (右側)
- ナンバーカウンター

印刷/スキャン

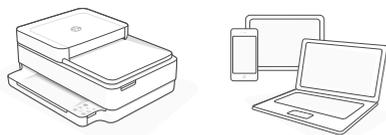


iOS、Android、Windows、またはMacデバイスから印刷するか、これらのデバイスにスキャンします。開始するには、お使いのデバイスから 123.hp.com にアクセスしてください。

Wi-Fi のセットアップに問題がある場合

アプリがお使いのプリンターを検出できない場合、セットアップモードを再起動してください。プリンターの背面にあるWi-Fi ボタンを5秒間押したままにします。プリンター正面の紫色のランプが回転している場合、セットアップモードであることを示しています。

コピー

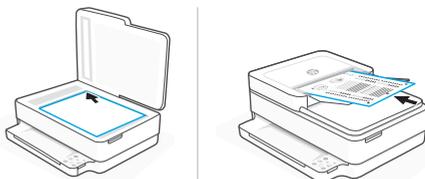

1. 原稿をセット

原稿を下向きにしてガラス面に置くか、上向きにしてドキュメントフィーダーに置きます。

2. コピー スタート

[コピー](モノクロ またはカラー) を押します。

注：部数を増やすには、ボタンを複数回押します。



ヘルプとサポート

トラブルシューティング、ビデオ、およびその他の製品情報については、製品サポートサイトにアクセスしてください。



hp.com/support/envyp6400



Printed in Thailand

© Copyright 2019 HP Development Company, L.P.

EN ZHTW JA



5SE45-90035