


SOPHOS

Security made simple.

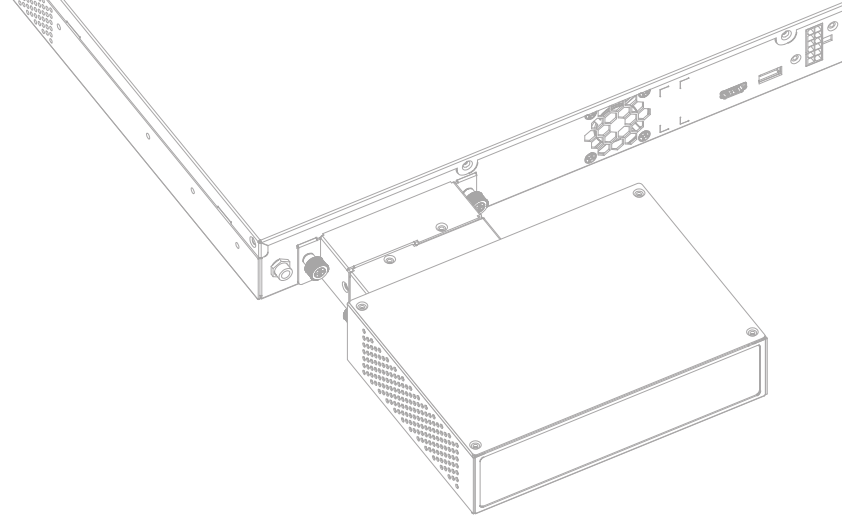

External Redundant Power Supply Mounting Instructions

XRP 200

External Redundant Power Supply Mounting Instructions



Step 1

Insert the bracket onto the mounting holes present at the back of the appliance and tighten the screws.

Step 2

Mount the External redundant power supply onto the bracket and tighten the screws.

Note: Ensure that your existing rack mounting ears (or any other fixation) which are holding your appliance are stable enough to hold the additional weight of the power supply. Otherwise, we recommend you to order rackmount rails as accessory parts from your Sophos partner.

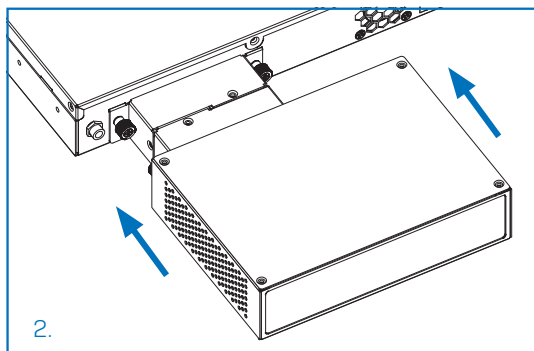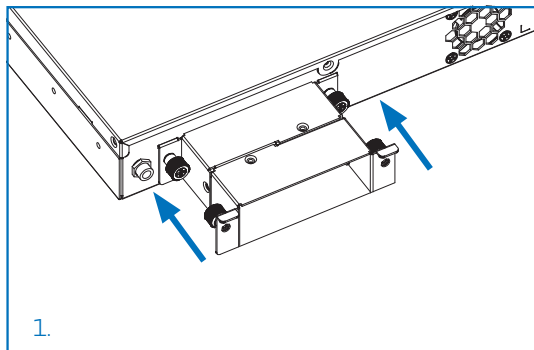

External Redundant Power Supply Mounting Instructions

Step 3

Connect the DC power cable between the External redundant power supply and the DC connector located at the back side of the appliance.



Step 4

Plug an AC power cable to the External redundant power supply and turn it ON.

The LED against label "Ext." on the front side of your appliance should turn green, indicating that the External DC redundant Power supply is working properly.

If the LED is red, then the connected External redundant Power supply is defective.*

If the LED is OFF, then the External redundant power supply is not connected.

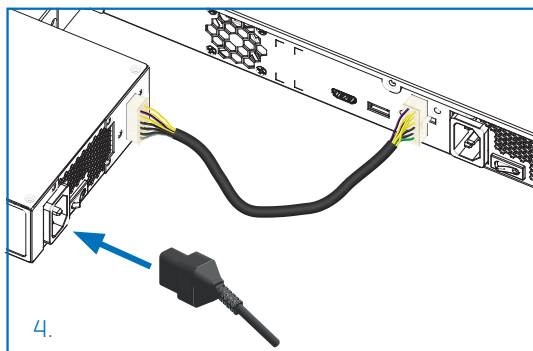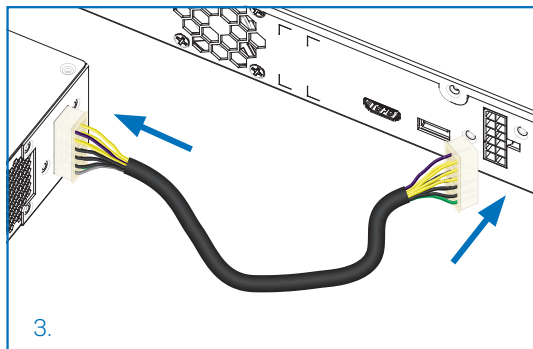

* For more information and technical support please visit www.sophos.com/en-us/support

Montageanleitung für externe redundante Stromversorgung



Schritt 1

Führen Sie die Halterung in die Montageöffnungen auf der Rückseite der Appliance ein und ziehen Sie die Schrauben an.

Schritt 2

Montieren Sie die externe redundante Stromversorgung an der Halterung und ziehen Sie die Schrauben an.

Hinweis: Achten Sie darauf, dass die vorhandenen Befestigungswinkel (oder eine andere Befestigung) für die Appliance stabil genug sind, um das zusätzliche Gewicht der Stromversorgung zu tragen. Andernfalls empfehlen wir, die Appliance mit Rackmountschienen zu befestigen, welche Sie als Zubehör bei Ihrem Sophos-Partner bestellen können.

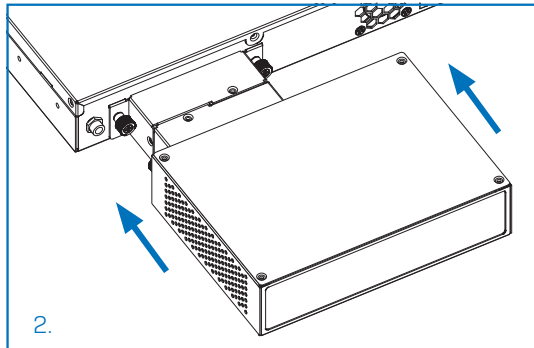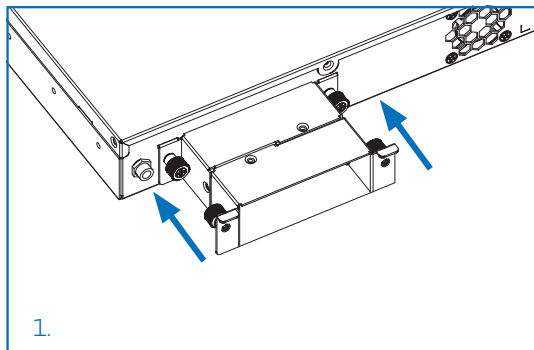

Montageanleitung für externe redundante Stromversorgung

Schritt 3

Verbinden Sie die externe redundante Stromversorgung über das DC-Netzkabel mit dem DC-Anschluss auf der Rückseite der Appliance.



Schritt 4

Schließen Sie ein AC-Netzkabel an die externe redundante Stromversorgung an und schalten Sie diese ein.

Die LED bei „Ext.“ auf der Vorderseite der Appliance sollte grün leuchten und damit anzeigen, dass die externe redundante Stromversorgung einwandfrei funktioniert.

Leuchtet die LED rot, funktioniert die angeschlossene externe redundante Stromversorgung nicht einwandfrei.*

Leuchtet die LED nicht, ist die externe redundante Stromversorgung nicht angeschlossen.

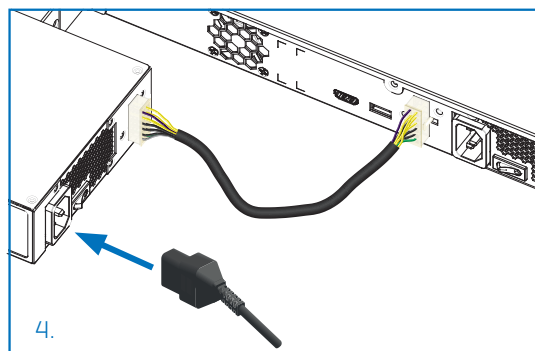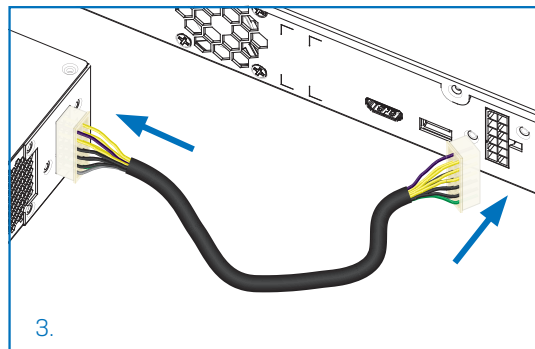

* Für weitere Informationen und technischen Support gehen Sie auf die Webseite www.sophos.com/de-de/support

Sales DACH
(Deutschland, Österreich, Schweiz)
Tel.: +49 (0) 611 585 8-0
Tel.: +49 (0) 721 255 16-0
E-Mail: sales@sophos.de

United Kingdom and Worldwide Sales
Tel: +44 (0)8447 671131
Email: sales@sophos.com

Asia Sales
Tel: +65 62244168
Email: salesasia@sophos.com

North American Sales
Toll Free: 1-866-866-2802
Email: na-sales@sophos.com

Australia and New Zealand Sales
Tel: +61 2 9409 9100
Email: sales@sophos.com.au

© Copyright 2017. Sophos Ltd. All rights reserved.
Registered in England and Wales No. 2096520,
The Pentagon, Abingdon Science Park, Abingdon, OX14 3YP, UK
Sophos is the registered trademark of Sophos Ltd. All other product and company
names mentioned are trademarks or registered trademarks of their respective owners.

17-04-18 (DD-2585)