axessline

User manual

Axessline Desk

9102000209

3 socket type F, 1 USB-C charger, 1 USB-A charger, 1 USB-C port, 1 data

CONTENT:

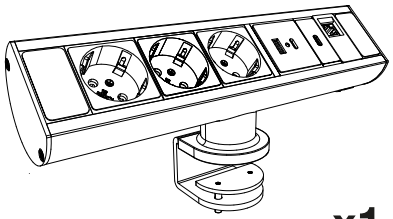

x1

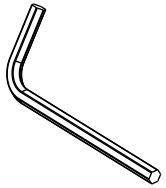

x1

1 LOOSEN CLAMPS
Use 4mm Allen key to loosen the set screws.

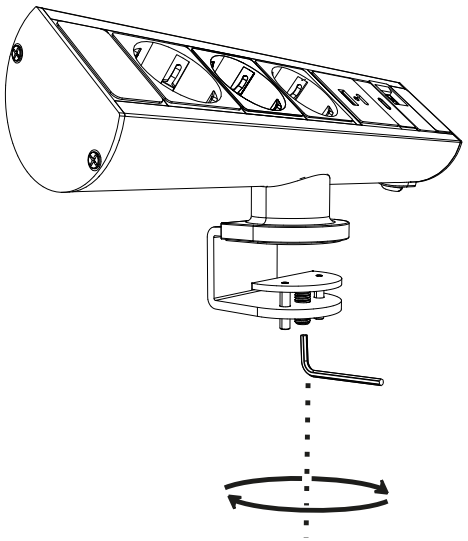

2 POSITION ON EDGE OF TABLE
Position the clamp so that the edge of the table top touches the edge the clamp.

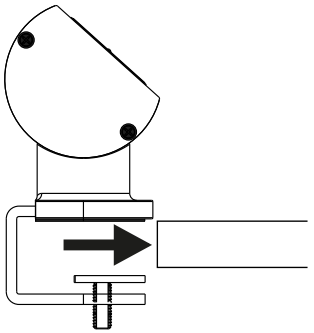

3 FASTEN CLAMP
Use 4mm Allen key to tighten the hexagon cup point screws.
Turn clockwise to tighten and make sure that the product does not move if pushed or pulled.

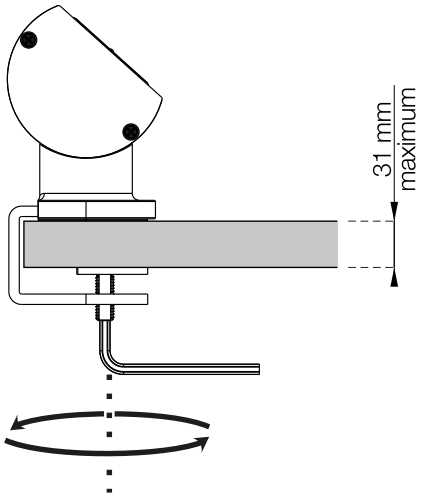

- **3 Power sockets**
  (Type F)
- **1 USB-A & 1 USB-C Charger ports**
  (5V, 3.1A)
- **1 USB-C port**
- **1 RJ45 Network port**
- **1 Type F plug**
  1500 mm
- **1 USB-C Port plug**
  ~950 mm
- **1 RJ45 port cable**
  ~550 mm

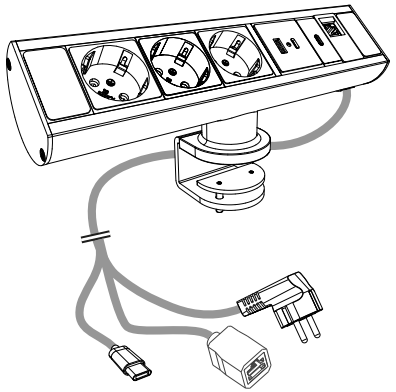
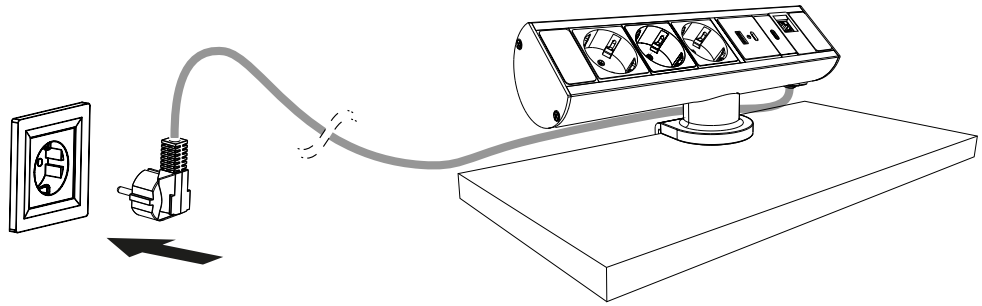
4 PLUG IT IN
Plug the power plug to the intended power socket and start using.